

Keep these instructions for future reference as they contain important information.

Adult assembly is required. Required tool: Phillips screwdriver (not included).




LittlePeople.com

**CAUTION**  
This package contains small parts. For adult assembly only.

## Assembled Parts

Periodically wipe each part of this toy with a clean, damp cloth.

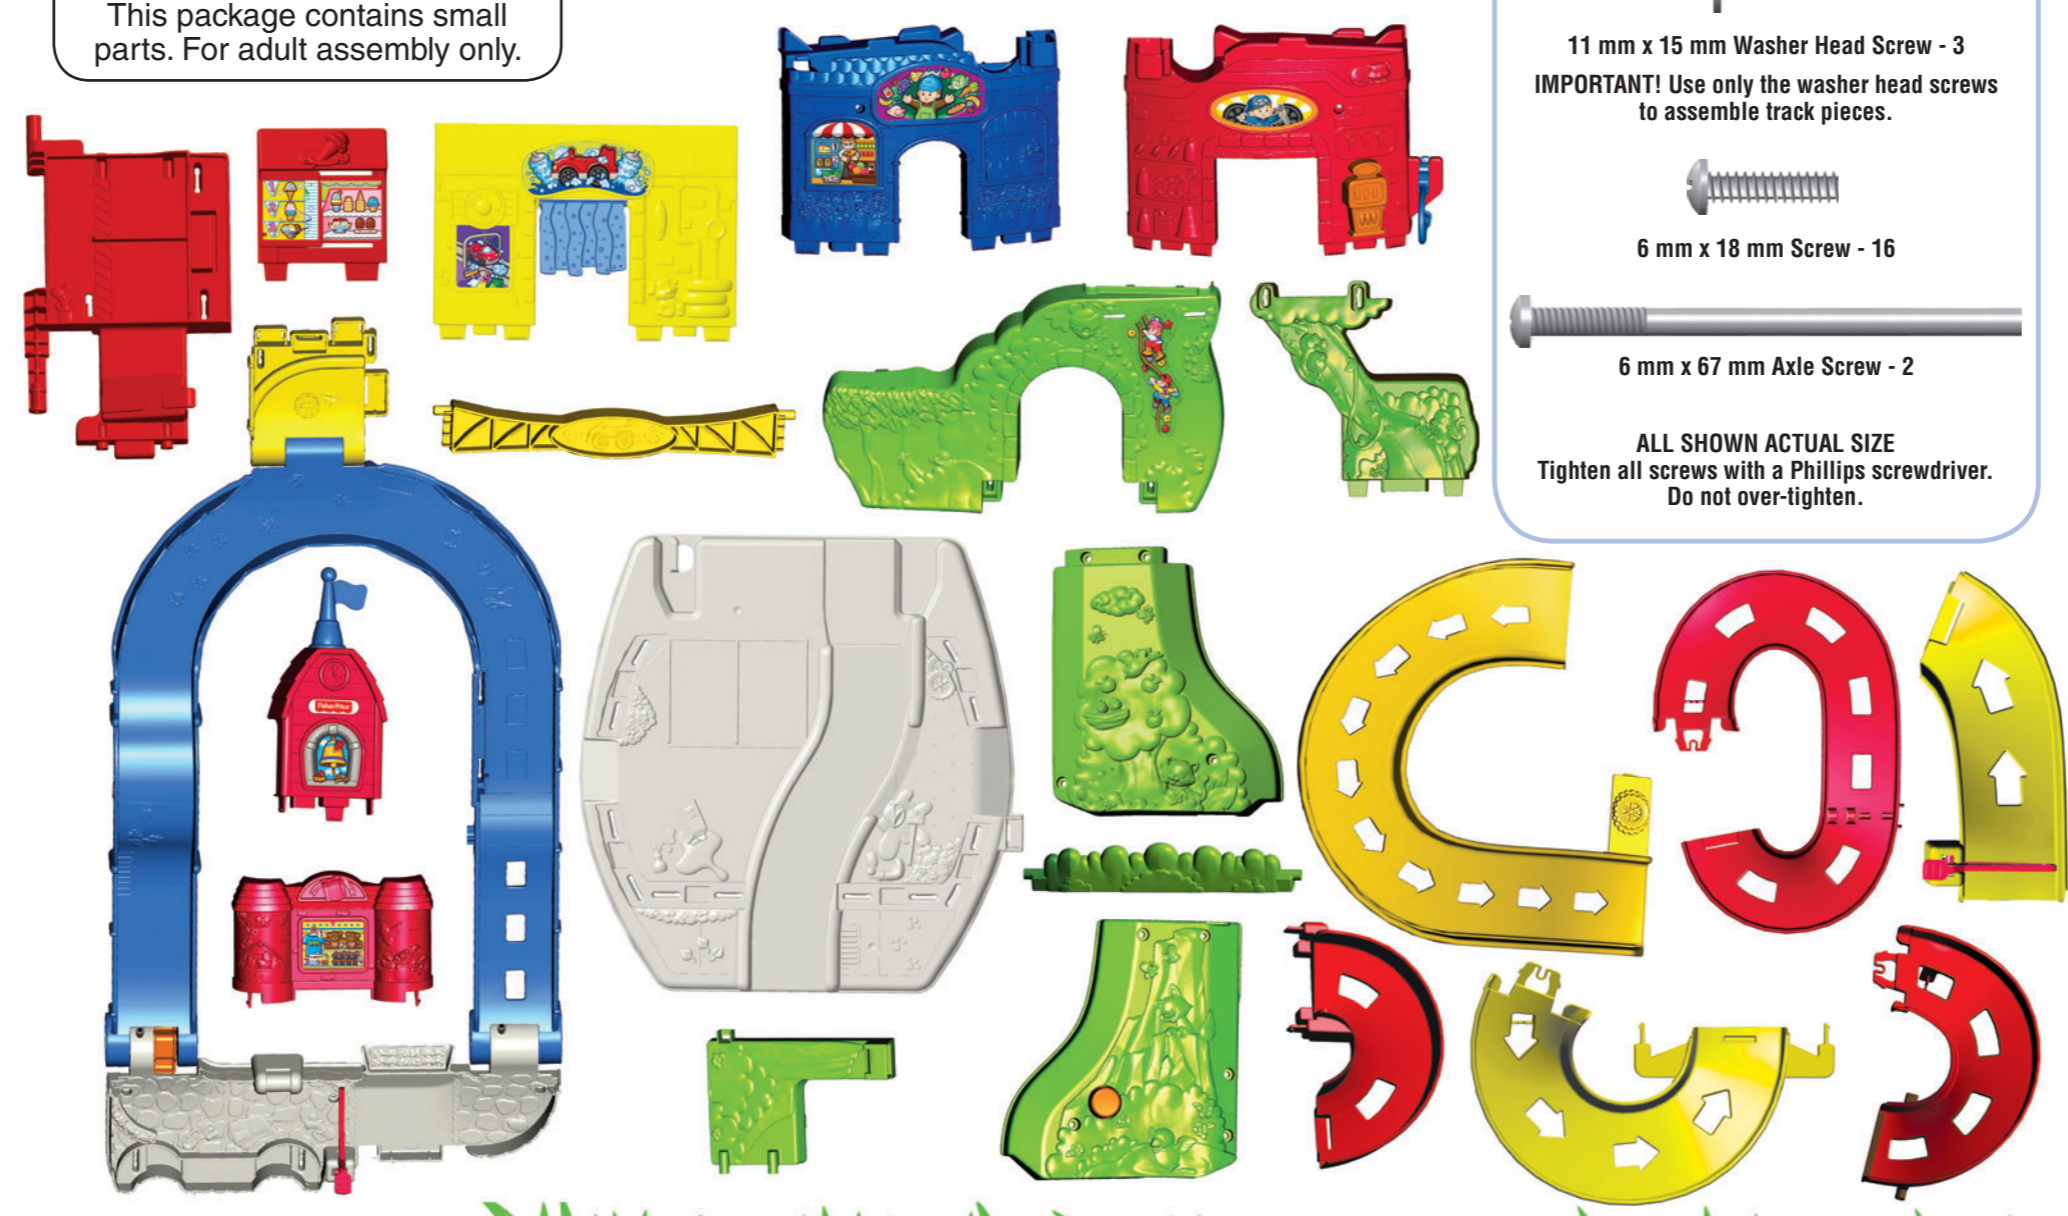

11 mm x 15 mm Washer Head Screw - 3  
**IMPORTANT!** Use only the washer head screws to assemble track pieces.

6 mm x 18 mm Screw - 16

6 mm x 67 mm Axle Screw - 2

ALL SHOWN ACTUAL SIZE  
Tighten all screws with a Phillips screwdriver. Do not over-tighten.

**CONSUMER ASSISTANCE**  
1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

[service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**  
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).  
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk)  
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.  
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

## Helpful Hints

All plastic parts are numbered in the order in which you will assemble them. Simply match the numbers as shown. You will find the number in the area indicated on these instructions.

Insert screw(s) and tighten when you see any of these icons.

Push to "snap" the part in place when you see this icon!

## Assembly

**1** → **2** → **3** x1 → **4** → **5** x1 → **6** → **7** Slide the latch up and lower the track. → **8** x5 → **9** Slide the latch and lift the track. → **10** → **11** → **12** → **13** → **14** → **15** x1

©2016 Mattel. All Rights Reserved.  
PRINTED IN MEXICO

DFT71-0070-02  
1100912726-00M

# Assembly

**16** **BOTTOM VIEW**  
Fit peg into socket.  
Fit tab into slot.

**17**

**18**

**19** Be sure to fit the green tree base up through the track.

**20** Use a washer head screw in this step. x1

**21**

**22** x3

**23** x1

**24**

**25** x5

**26**

**27** x2

**28** Insert and tighten an axle screw into the other side of the assembly.

**29**

**30** Lower the top of the assembly.

**31** Use a washer head screw in this step. x1

**32** **TOP VIEW**

**33**

**34**

**1** Lift the top track.

**2** While pressing the button latch, lift the center section and proceed to the next step.

**3** Slide the latch up and lower the assembly so the flag at the top of the assembly is upright.

**Transform to Sit and Play**

**1** While pressing the button latch and sliding the latch at the same time, lift the center section until the blue track is upright.

**2** Lower the center section until it "snaps" into place.

**3** Lower the top track.

**Transform to Stand and Play**