



Keep this instruction sheet for future reference, as it contains important information.



Adult assembly is required.
No tools are necessary
for assembly.

1.5V x 2
AAA (LR03)

1.5V x 6
AA (LR6)



Requires two AAA batteries
for remote control (not included)
and six AA batteries for
DragonZord (included).

Battery installation is required.
Only adults should install batteries.

Tool required for battery
installation: Phillips screwdriver
(not included).



Wipe toy with a clean,
damp cloth. Do not immerse.
This toy has no consumer
serviceable parts.
Do not take apart.



CAUTION

To prevent entanglement,
keep hair away from wheels.

One-Time Assembly




- Insert and “snap” the tail into the socket in Dragonzord.

Battery Installation


- 1,5V x 2 AAA (LR03) +
- 1,5V x 6 AA (LR6) +

For longer life, use **alkaline** batteries.

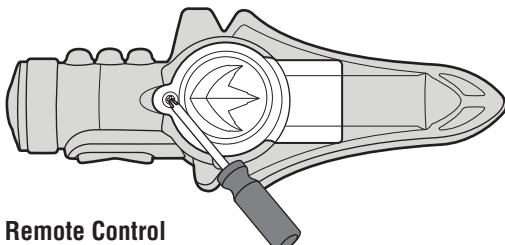

Remote Control

- Loosen the screw in the battery compartment door and remove the door.
- Insert two, new AAA (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.

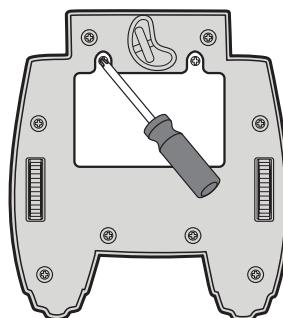

Dragonzord

- Loosen the screws in the battery compartment door and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert six, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.

Morphinominal Adventure!



Dragonzord
Power Switch

Press
Switch
Back Press
Switch
Front



Remote Control



- Slide Dragonzord's power switch ON ● or OFF ○.
- Press and hold the front of the remote control switch to move Dragonzord forward.
- Press and hold the back of the remote control switch to back up and turn Dragonzord.
- Shake the remote control and Dragonzord spins and whips its tail.

- The maximum range between Dragonzord and the remote control is 12 feet (3.66 meters).
- Bright sunlight or fluorescent lights may affect the range between Dragonzord and the remote control. Try dimming the light in the room you are playing in.
- Make sure there is a clear path between Dragonzord and the remote control and there are no obstructions between them.
- We do not recommend using Dragonzord on carpets. For best performance, use on hard, flat surfaces.

Attack!



WARNING:

Do not aim at eyes or face.
Only use projectiles supplied
with this toy. Do not fire at
point blank range.



- Press the large button on the bottom of the remote control to fire missiles!
- If the remote control begins to operate erratically, you may need to reset the electronics. Remove and reinstall the batteries.
- If Dragonzord begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.

- Turn the Power Pad to open Dragonzord's chest.
Turn again to close.

Troubleshooting Information

- Dragonzord will enter “sleep mode” after about three minutes of inactivity. To turn this toy back on, turn the Power Pad or slide the power switch off and then back on.
- When movement/sound/lights from Dragonzord become slow/faint/stop, it is time for an adult to change the batteries in Dragonzord.
- If Dragonzord does not respond to the remote control, it is time for an adult to change the batteries in the remote control.
- If the remote control or Dragonzord are accidentally dropped in the water, remove the batteries and allow them to air dry. Replace with fresh batteries before operation.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



- Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

™ and ©2016 SCG Power Rangers LLC. Power Rangers and all related logos, characters, names, and distinctive likenesses thereof are the exclusive property of SCG Power Rangers LLC. All Rights Reserved. Used Under Authorization.

©2016 Mattel. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, except as noted.

DFX51-0970-G1

1100859445-DOM