HOW TO PLAY




SATELLITE DISH

You can secure the SATELLITE DISH onto one of the 3 base station shapes located throughout the playset:





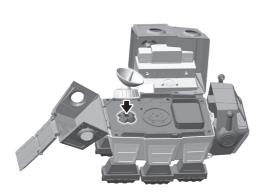

On top of playset in WATER BEAR MODE.

On the top platform in SCOUT MODE.

On the main deck in COMMAND CENTER MODE.

CONSUMER ASSISTANCE 1-800-432-5437 (US & Canada) 1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

OCTONAUTS™ OCTOPOD™ Meomi Design Inc.
OCTONAUTS Copyright © 2015 Vampire Squid Productions Ltd,
a member of the Silvergate Media group of companies. All rights reserved.

©2015 Mattel. All Rights Reserved.

* and ** designate U.S. trademarks of Mattel, except as noted.

PRINTED IN CHINA.

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



DGF42

Based on the books by





DGF42-0970 / 1100762900-DOM




enimotenstricus Polar Vehicle

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

ASSEMBLY

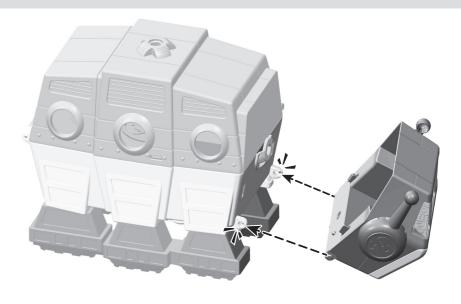

HOW TO TRANSFORM INTO 3 MODES

COMMAND CENTER MODE




Raise the roof by pulling on the center porthole to release and lift.



Fold down the rear ramp.

WATER BEAR MODE

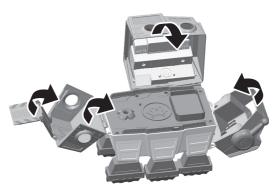


Fold in the ramp and close the roof. Fold the front cab



SCOUT MODE



Hold the rear legs against the ground and lift the body upwards until it is in a standing position.

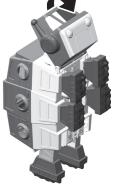

Pivot the front cab forward.