






Slide the power/volume switch to  ON with low volume,  ON with high volume or  OFF.

Drop a ball in the elephant's trunk for silly, playful sounds!



Keep these instructions for future reference, as they contain important information.

Requires two, AA (LR6) **alkaline** batteries (not included).

Adult assembly is required. Tool required: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Assembled Parts



CAUTION

This package contains small parts. For adult assembly only.

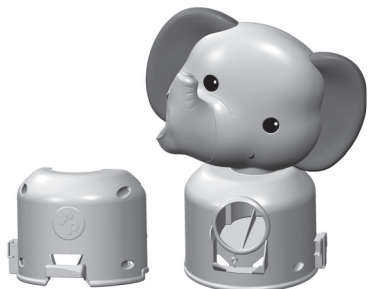

Elephant
(2 pieces)




2 Feet
(both different)



Ramp



Base

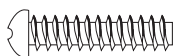


4,5 mm x 19 mm Screw – 11

SHOWN ACTUAL SIZE


Tighten all screws with a Phillips screwdriver. Do not over-tighten.

Assembly

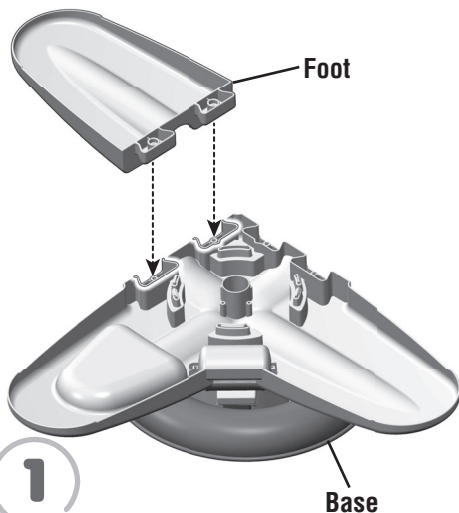

1

- Fit a foot onto the bottom of the base.
Hint: The feet are designed to fit one way. If a foot does not seem to fit, try the other foot.

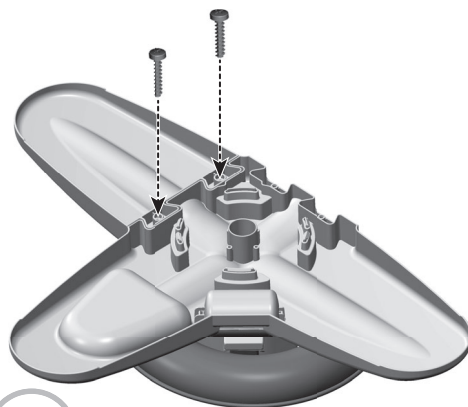


2


- Insert two screws into the foot and tighten.
- Repeat steps 1 and 2 to assemble the other foot to the base.
- Turn the assembly upright.

Assembly


Elephant
(2 pieces)

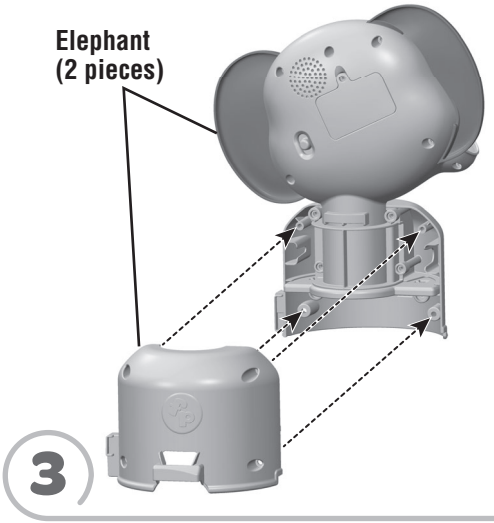

- Fit the front and back of the elephant together.

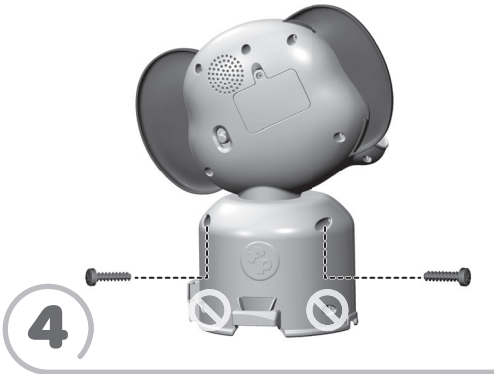


- Insert two screws into the **upper** holes in the back of the elephant and tighten.
- IMPORTANT!** Do not insert screws into the lower holes in the back of the elephant. The bottom of the elephant will be fastened in step 7.

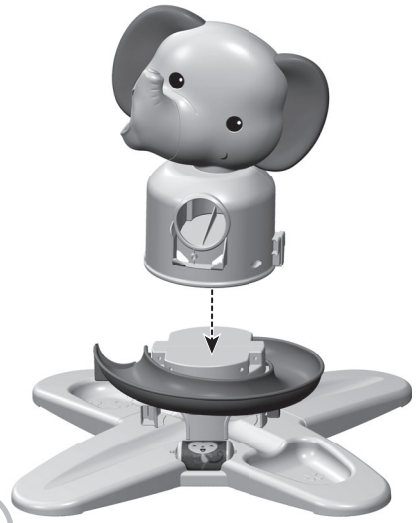


FRONT VIEW

- Fit the elephant onto the base.
- Hint:** The elephant is designed to fit onto the base one way. If it does not seem to fit, turn it around and try again.

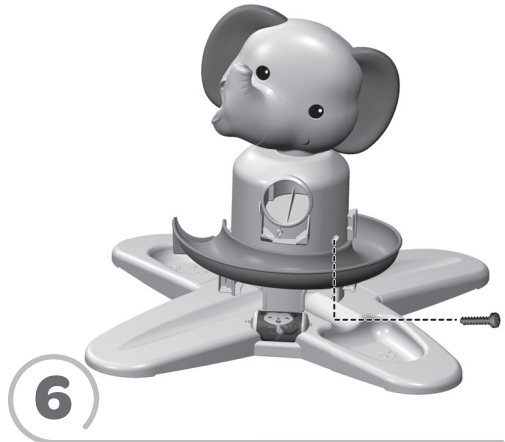

- Insert one screw into the elephant and tighten.


Assembly

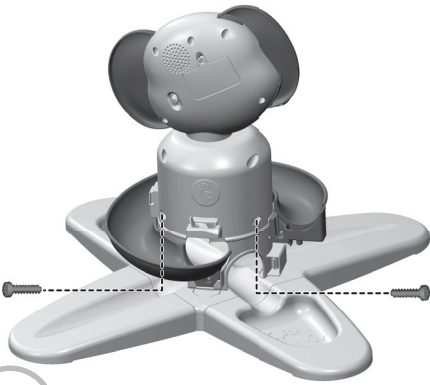

7


BACK VIEW

- Insert two screws into the back of the elephant and tighten.

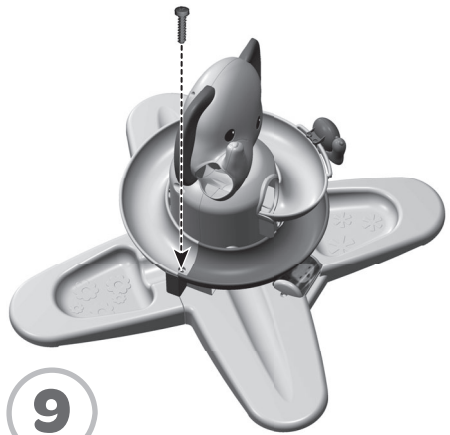

9


- Insert a screw into the top side of the ramp and tighten.

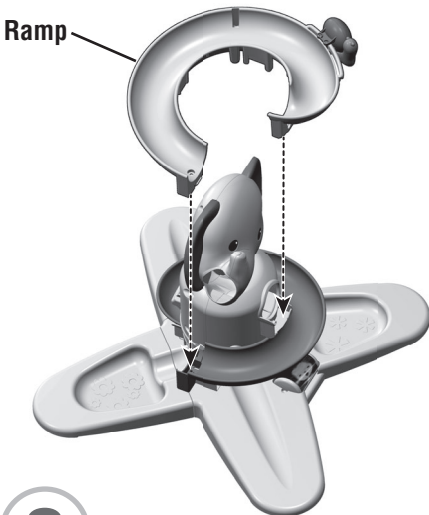

8

TOP VIEW

- Fit the ends of the ramp to the sockets in the assembly.

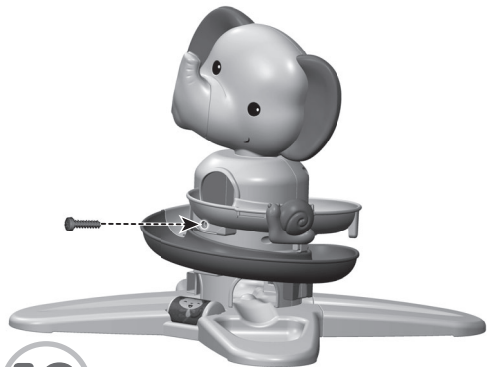


10

FRONT VIEW

- Insert a screw underneath the ramp and tighten.

Battery Installation

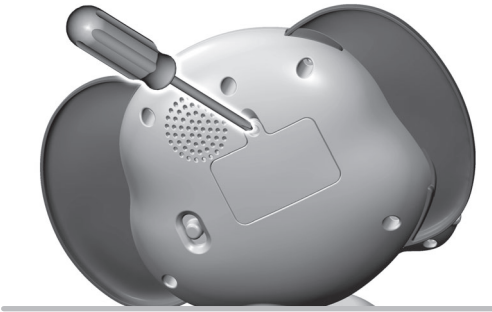

- For longer life, use **alkaline** batteries.
- Loosen the screw in the battery compartment door and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.