



# LUIGI'S CASA DELLA TIRES

## INSTRUCTIONS


ADULT  
COLLECTOR

Please keep these instructions for future reference as they contain important information.




### CONTENTS

Colors and decorations may vary from those shown.

#### BOTTOM VIEW

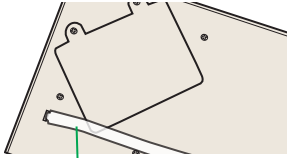

If plastic tab is still attached to play set, pull it out and dispose of it before play.

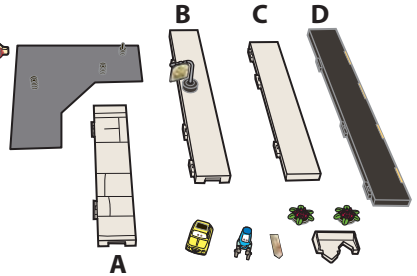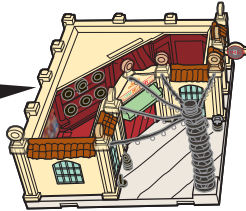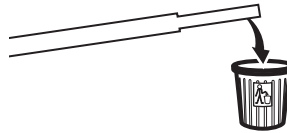


**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

Includes 2 AG13 (LR44) button cell batteries for the vehicle and 3 C (R14) size Carbon Zinc batteries for the play set. Dispose of batteries safely.


### 7 ASSEMBLY

1


REMOVABLE  
ROOF.

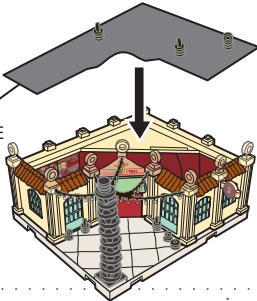


2

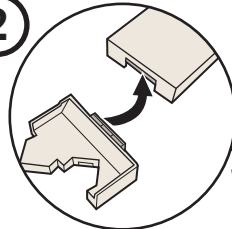


OPTIONAL CONNECTOR: CONNECT TO  
OTHER STORY SETS (SOLD SEPARATELY,  
SUBJECT TO AVAILABILITY).

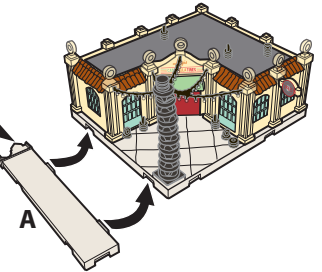


3

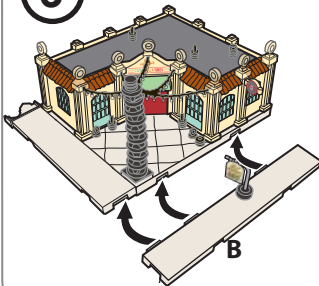

4


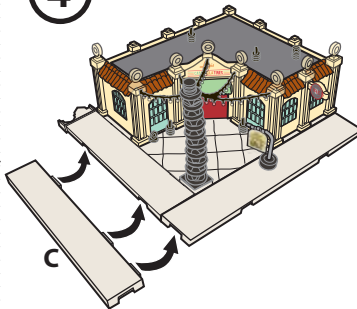


5

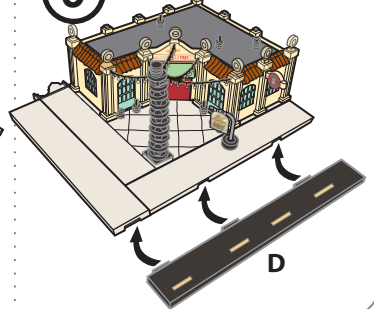

# 2

# BATTERY REPLACEMENT

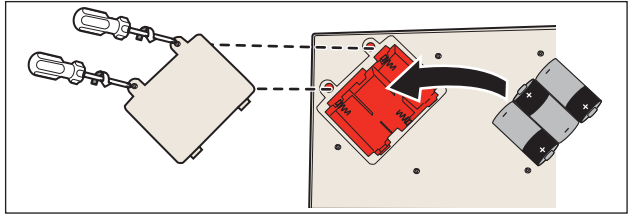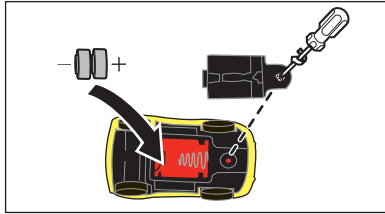


- Batteries included are for demonstration purposes only.
- Replace batteries when lights become dim.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- For the vehicle, install 2 new AG13 (LR44) button cell batteries in the orientation (+/-) shown.
- For the play set, install 3 new C size (LR14) batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw(s).
- For best performance, use only alkaline batteries.
- If vehicle malfunctions, remove batteries and re-install after 5 seconds. This should reset your vehicle and let you resume normal operation.
- If play set malfunctions, turn power OFF for a few seconds, then ON again. This should reset your play set and let you resume normal operation.


# 3

# FEATURES

## SLIDING CURTAINS

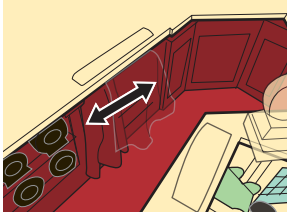


## CAR LIFT

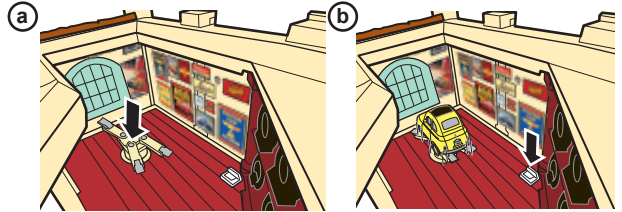


## AC/DC POWER ADAPTER SOCKET

## POWER SWITCH

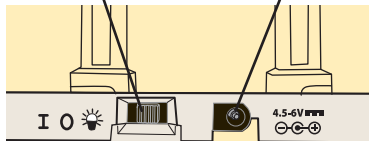

- I = NORMAL MODE
- O = OFF
- ☀ = LIGHT SENSOR MODE

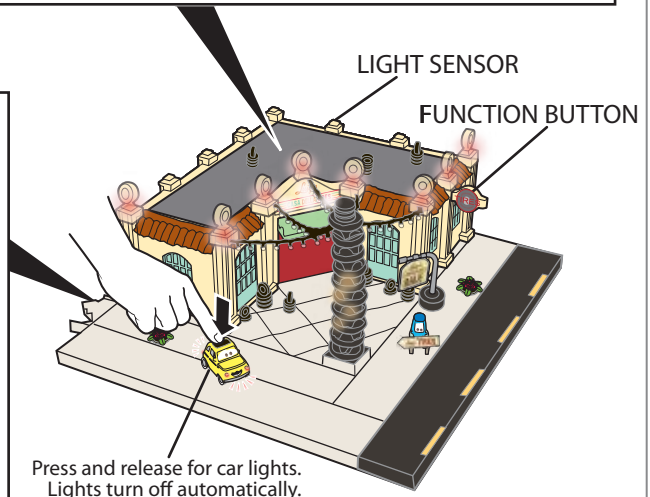

### BATTERIES – NORMAL MODE

Slide power switch to NORMAL MODE. A short light show begins. To restart the light show, press the function button. Press the button to change the pattern of the lights. Press the button again to turn all the lights off. The cycle of (1) lights on, (2) pattern change and (3) lights off continues with each press of the button. If the button is not pressed and the set is left idle, the light show will stop automatically after a while. During the light show, press and hold the button for over 2 seconds to play a longer light show.


### BATTERIES – LIGHT SENSOR MODE

Slide power switch to LIGHT SENSOR MODE. The light show will begin after 3-4 seconds if the room is dark enough. Press the function button to change the pattern of the lights. Turn the room lights on or press the button again to end the light show. A subsequent press of the button or turning the room lights on and off will restart the light show. The light show will stop automatically after a while if the set is left idle.

The play set also works with the following AC/DC power adapters (sold separately, subject to availability):

- **RCA AC/DC adapter model # AH56R (Walmart.com)**
- **Hosa AC/DC adapter model # ACD477 (Amazon.com)**

NOTE: The battery power will be suspended when an adapter is used with the play set. To resume using batteries, disconnect the adapter from the set.

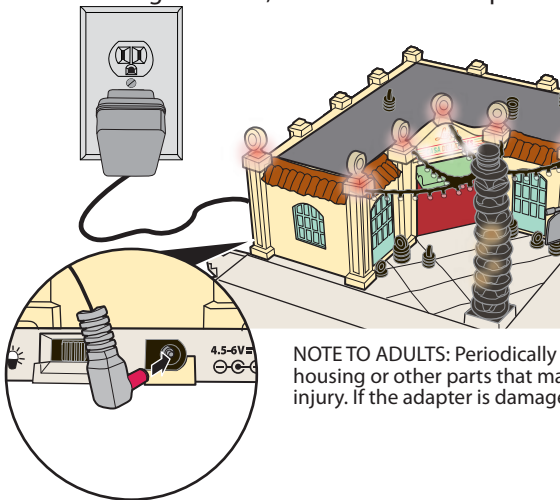

#### ADAPTER SPECIFICATIONS:


Input voltage: 110V/220V AC

Frequency: 50-60 Hz

DC output voltage: 4.5 - 6V

DC output current: 500mA

Plug size: 2.1mmx5.5mm jack

Plug type: 

NOTE TO ADULTS: Periodically examine the adapter for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the adapter is damaged, do not use it.

### AC/DC ADAPTER – NORMAL MODE

When an AC/DC adapter is used in NORMAL MODE, the light shows are longer. Everything else is the same as using batteries. Please see the instructions for "BATTERIES – NORMAL MODE". In this mode, during the light show, press and hold the button for over 2 seconds to play the show continuously!

### AC/DC ADAPTER – LIGHT SENSOR MODE

When an AC/DC adapter is used in LIGHT SENSOR MODE, the light show will stay on as long as the room lights stay off. Everything else is the same as using batteries. Please see the instructions for "BATTERIES – LIGHT SENSOR MODE".

NOTE: For proper function, slide power switch to OFF before disconnecting the adapter from the play set.

## IMPORTANT INFORMATION

- Regularly examine the adapter used with this toy for damage to the cord, plug, enclosure, and other parts. In the event of such damage, do not use until damage has been repaired.
- This toy is not intended for children under 3 years old.
- This toy must only be used with an AC/DC adapter for toys.
- The AC/DC adapter is not a toy.
- This toy is not to be connected to more than the recommended number of power supplies.
- Toys likely to be cleaned with liquids are to be disconnected from the adapter before cleaning.
- This product is not recommended for use on loose dirt or wet surfaces.
- Do not immerse in water.
- Children playing with electrical toys operating at 120 volts should be supervised by an adult.

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

## For product sold in USA

### This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no

guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

©2016 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

