



# 4 TO PLAY 4: MUNCH & UNLOAD


**A.** Remove spikes and open mouth.

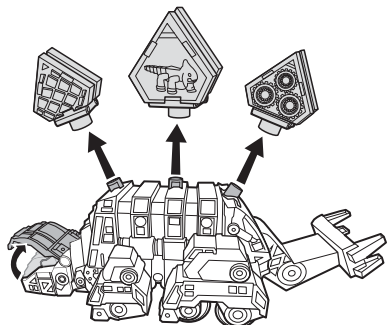

**C.** Roll Garby forward around 2 feet 3 times to process the rock.

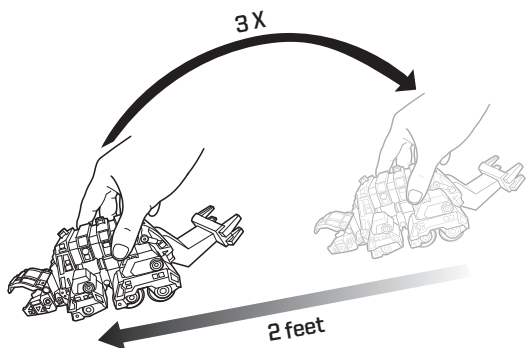


**E.** Push tail all the way down to reset.

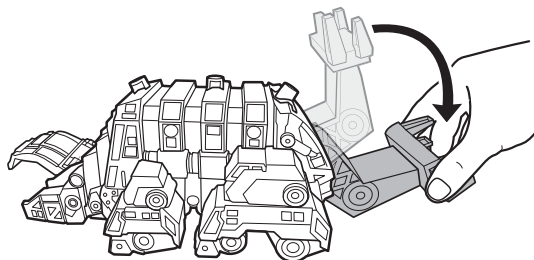


**B.** Put a piece of rock shaped dough in front of Garby's mouth. Roll forward to eat the rock.

**IMPORTANT:** FOR PROPER FUNCTION, USE ROCK SHAPED DOUGH ONLY.

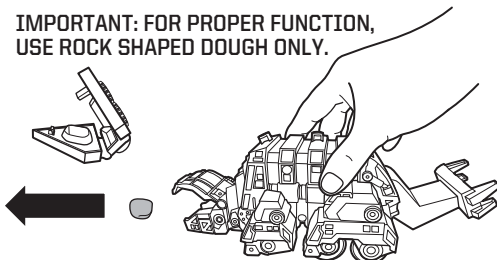


**D.** Lift tail to unload a brick for building.

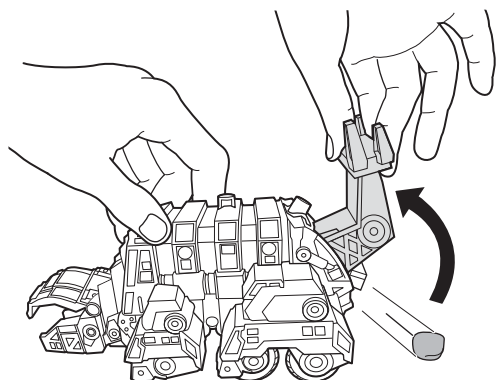

**WARNING:** DO NOT AIM AT EYES OR FACE. ONLY USE PROJECTILES SUPPLIED WITH THIS TOY. DO NOT FIRE AT POINT BLANK RANGE.

## CLEANING

For best performance, open compartment under Garby and remove any dough left inside after play.

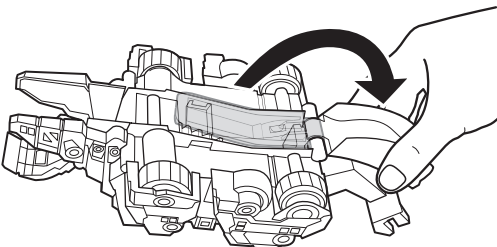

# MUNCHIN' MACHINE GARBY





3+

## INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

## CONTENTS

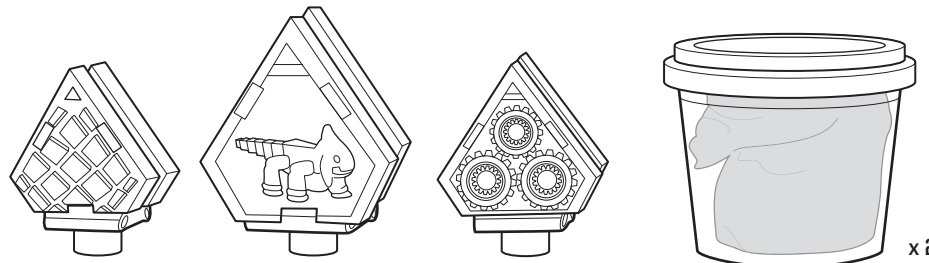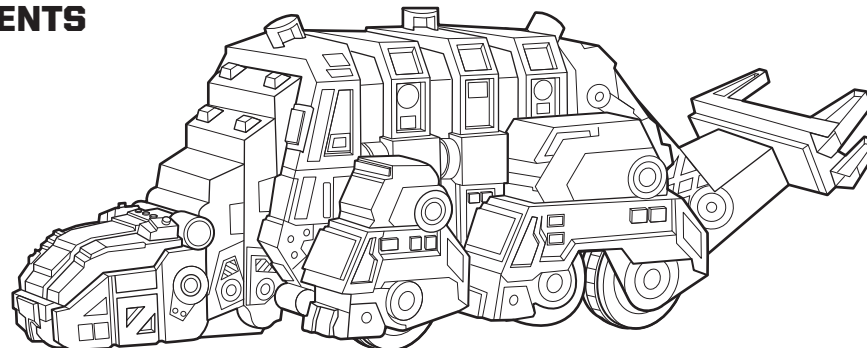

- To keep dough soft, always put back in container after play. For the best results, keep in cool place. Water may be added ONE DROP at a time to restore softness. NOT FOR HUMAN CONSUMPTION.
- Avoid contact with carpet, clothing, walls and furniture.
- Dough may stain or stick to some surfaces. Protect play area before use.
- Remove excess dough compound by allowing to dry, then scrape and/or vacuum away.
- If hands get dirty with dough, use soap and water to wash hands clean.
- Dough contains wheat flour.

**SAFETY TESTED GENTLE**


©2016 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867. DKC44-0971 1100756035\_DOM

Dinotrax © 2017 DreamWorks Animation LLC. All Rights Reserved.




# 1 TO PLAY 1: MAKE TRACKS



**A.** Attach (or detach) spikes as desired.

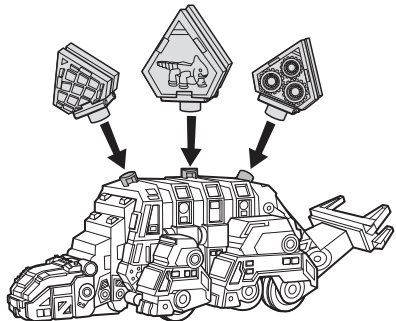

**B.** Flatten some dough on the play surface.

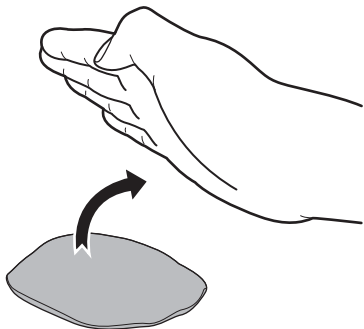


**C.** Roll over the dough to see Garby's tracks.

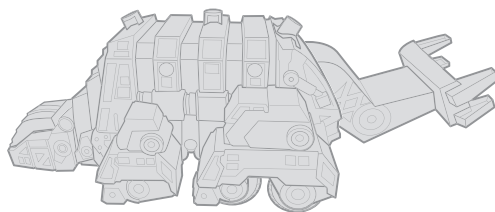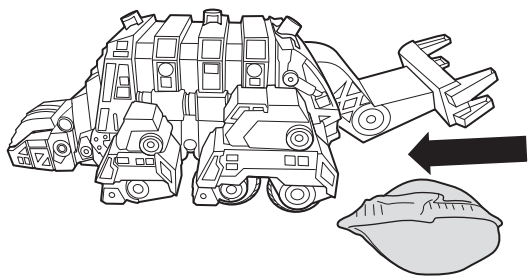


# 2 TO PLAY 2: CREATE PATTERNS


**A.** Flatten some dough on the play surface.

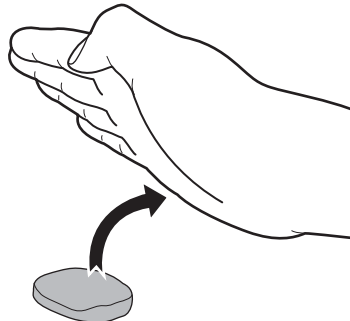


**B.** Select a spike and press it into the dough.

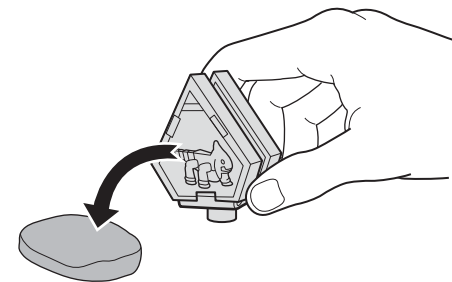

**C.** Lift spike to reveal a pattern. Try both sides of all spikes to reveal more patterns.

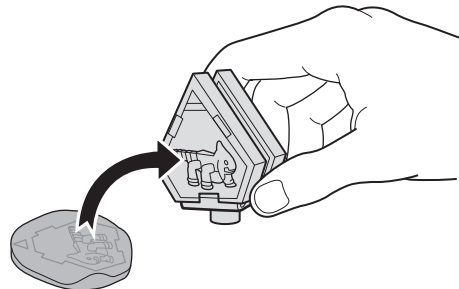


**D.** There is a pattern on the tail too!

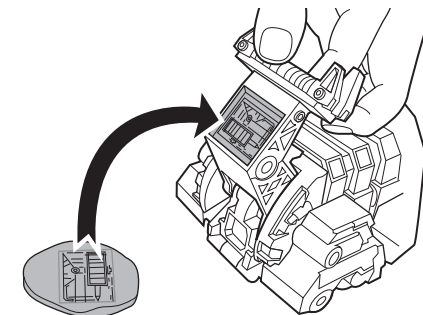


# 3 TO PLAY 3: USE MOLDS


**A.** Select a mold. Open and put dough inside.

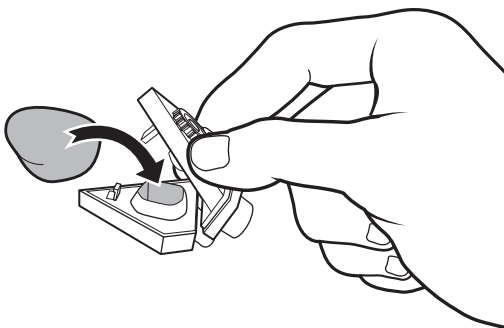

**B.** Press down.

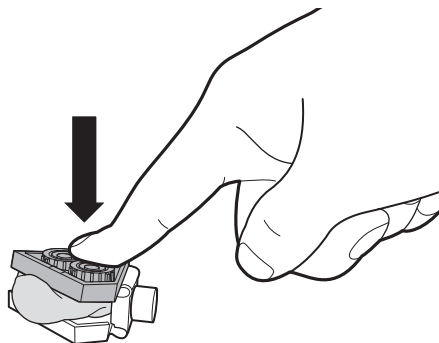

**C.** Open and remove excess dough around the mold.

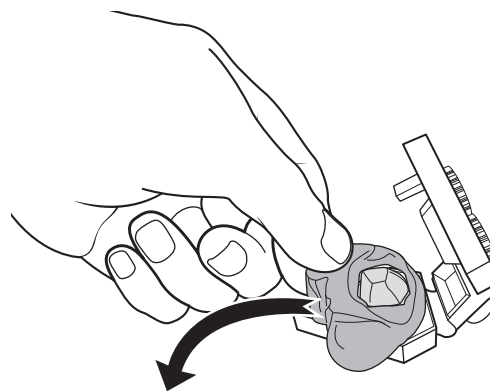

**D.** Gently remove the shaped dough.

