

Please keep these instructions for future reference as they contain important information.
IMPORTANT: Please read all instructions before operating your toy.



FEATURES

CONTENTS

- REMOTE
- +
- REVVIT
- +
- TY

- FUNCTION BUTTON / VOLUME CONTROL
- POWER SWITCH
- WRECKING BALL
- BATTERY COVER
- INFRARED LED
- RED LED
- UP BUTTON
- WRECK/DANCE BUTTON
- DOWN BUTTON

HELPFUL HINT

VOLUME CONTROL
Ty has 2 volume settings (High/Low). Press and hold the FUNCTION BUTTON for 2 seconds to change between the settings.

HOW TO USE THE REMOTE CONTROL*

*REMOTE CONTROL MUST ALWAYS BE IN FRONT OF TY AND POINTED AT TY IN ORDER TO PLAY.



I'LL FOLLOW YOU BUDDY!



- 1 Switch Ty ON.
- 2 Stand directly in front of Ty with the remote control pointed at Ty.
- 3 When prompted, press the UP BUTTON.
- 4 Ty will enter REMOTE CONTROL MODE when you hear him say, "I can see you, buddy. That's the perfect spot!"

IMPORTANT: For proper function, keep the remote control pointing at the infrared LEDs above Ty's treads. Do not cover up the infrared LEDs with your fingers.

1. REMOTE CONTROL MODE

- FORWARD
- BACKWARD
- TURN
Press & Release to Turn
- SPIN
Press & Hold to Spin

2. PLAY MODES

To enter PLAY MODES: Press the **FUNCTION BUTTON** on Ty's back. (Press the **FUNCTION BUTTON** to toggle between PLAY MODES and **REMOTE CONTROL MODE**.)



HELPFUL HINT

For proper function, put the remote control on the same flat surface as Ty. Make sure the remote control is pointing at the infrared LEDs above his treads, and there are no obstacles blocking the line of sight.



FIND ME MODE

Point the remote control at the front of Ty. Press and release the **UP BUTTON** on the remote control once to enter **FIND ME MODE**. Before Ty counts to five, put the remote control on the floor and see if Ty can find it.



FOLLOW ME MODE

Point the remote control at Ty. Press and hold the **DOWN BUTTON**. Now Ty will follow wherever you go.

HELPFUL HINT

REMOTE CONTROL
Works best within a 4 FT to 8 FT range.



DANCE / WRECK MODE


Point the remote control at Ty. Press the **WRECK/DANCE BUTTON** to wreck or dance with Ty.

BATTERY INSTALLATION

Ty Rux requires 4 AA (LR06) alkaline batteries, not included. Remote control requires 3 AAA (LR03) alkaline batteries, not included. For longer life, use alkaline batteries. Dispose of batteries safely.

TY RUX


1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 4 AA (LR06) alkaline batteries with polarity (+/-) as shown inside the battery compartment.
3. Replace battery cover and tighten screws.

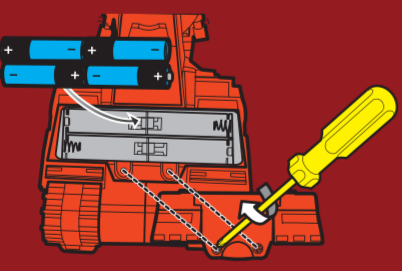

NOTE: When exposed to an electrostatic source, the toy may malfunction. To resume normal operation, turn the power OFF and ON again. This should reset the toy and let you resume normal operation.

REMOTE CONTROL

1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 3 AAA (LR03) Alkaline batteries with polarity (+/-) as shown inside the battery compartment.
3. Replace battery cover and tighten screw.

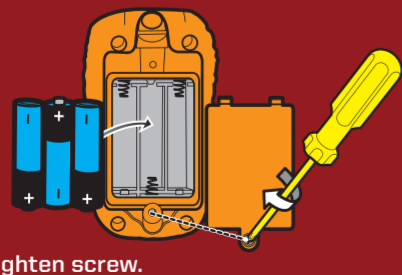

NOTE: Once batteries are installed, the remote control will always be "ON" and will work the moment you use it. When exposed to an electrostatic source, the remote control may malfunction. To resume normal operation, remove and re-install the batteries. This should reset the remote control and let you resume normal operation.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.

supervision.

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

QUICK TIPS

- (1) When your vehicle starts to lose power, it may lose functionality or performance. It's time for fresh batteries. Your vehicle's running time may change depending on your driving style and driving environment.
- (2) Interference can affect your vehicle's performance. Interference can be caused by other I/R devices like a TV remote control or other remotes in the house. Try to stay away from these!
- (3) Point the transmitter toward the vehicle. If your vehicle gets too far away, it won't work properly.
- (4) Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe it with a towel and allow to dry completely overnight.
- (5) Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
- (6) Do not obstruct the line of sight.
- (7) Do not exceed the specified range.
- (8) To conserve battery life, Ty Rux goes to sleep when left idle for 5 minutes. To wake him up, press the **FUNCTION BUTTON** on his back.

CAUTION: To prevent entanglement, keep all hair away from the wheels.

CONSUMER INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

- NEVER drive your vehicle on streets! Streets are for real cars!
- DO NOT pick up the vehicle while it is in motion.
- Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched ON.
- Adult supervision is recommended while this toy is being operated.
- When not in use, turn off the vehicle. To avoid accidental operation, remove all batteries.
- This product is not recommended for use on loose dirt or wet surfaces



FOR PRODUCT SOLD IN USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. **NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FOR PRODUCT SOLD IN CANADA • POUR LES PRODUITS VENDUS AU CANADA CAN ICES-3 (B)/NMB-3(B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

©2016 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8687. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty. Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Teimshatsui, HK, China. Tel.: (852) 3185-6500. Dlimport 8 Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

Dinotrix © 2016 DreamWorks Animation LLC. All Rights Reserved.

DKD34-0970 1100979218_DOM

