
INSTRUCTIONS

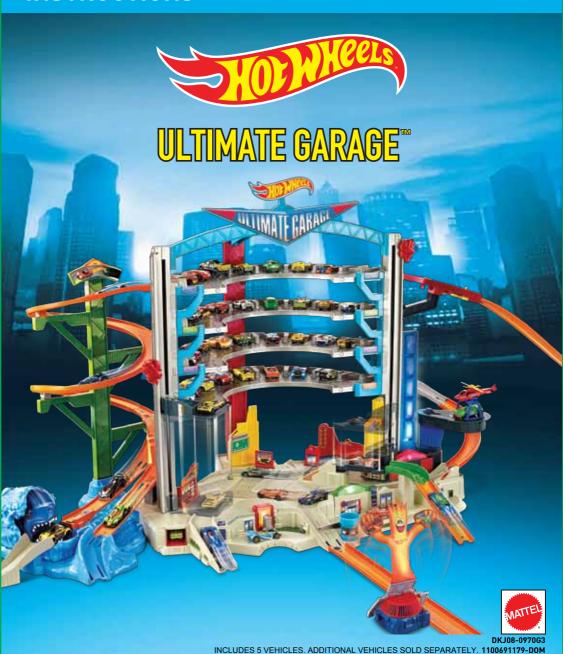

ADULT ASSEMBLY REQUIRED

REQUIRES 3 AA (LR6) ALKALINE BATTERIES (NOT INCLUDED) FOR THE PLAY SET AND 2 C SIZE (LR14) ALKALINE BATTERIES (NOT INCLUDED) FOR THE STUNT. DISPOSE OF BATTERIES SAFELY.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

service.mattel.com HOTWHEELS.COM

INDEX

BATTERY INSTALLATION	2
CONTENTS	3
ASSEMBLE ZONE 1	4
ASSEMBLE ZONE 2	8
ASSEMBLE ZONE 3	11
COMPLETED ASSEMBLY	13
TO PLAY	14
MORE WAYS TO PLAY	19
PERFORMANCE TIPS	20
BATTERY SAFETY INFORMATION	20




ULTIMATE GARAGE™


- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 3 new AA (LR6) alkaline batteries (not included) in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life use alkaline batteries.
- Replace batteries when lights dim or sounds become distorted.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

FAN MAN™


- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 2 C size (LR14) alkaline batteries (not included) in the orientation (+/-) shown.
- · Replace battery cover and tighten screws.
- For longer life use alkaline batteries.
- Replace batteries when fan slows and cannot keep figure aloft.

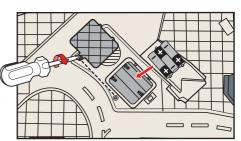



ZONE 3

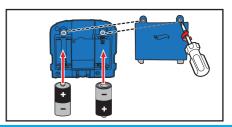


CONTENTS

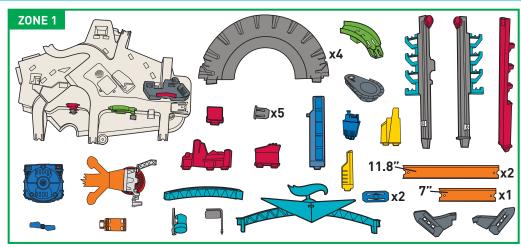

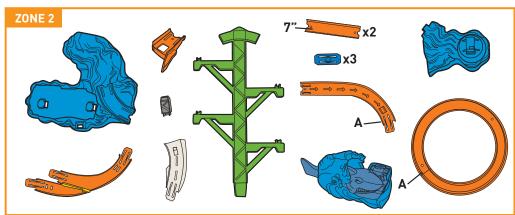

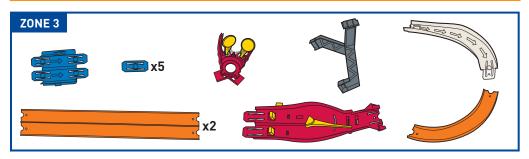

 






ASSEMBLE ZONE 1 Ins


Install batteries as described on page 2 before beginning assembly.


ZONE 2 ZONE 1 ZONE 3

1.

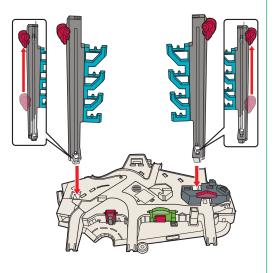


 2.




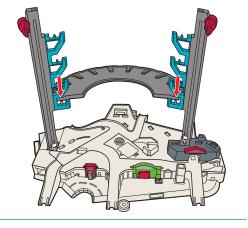


 3.







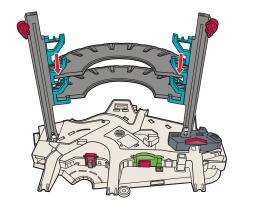

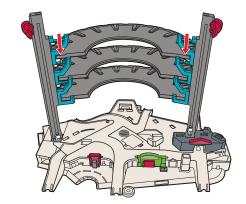


 
5.




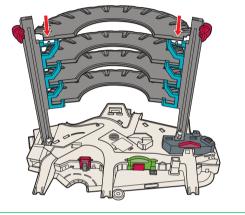



6.

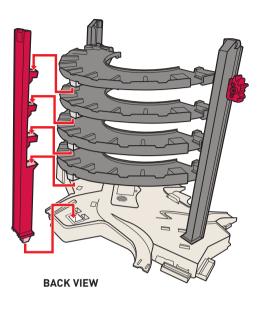

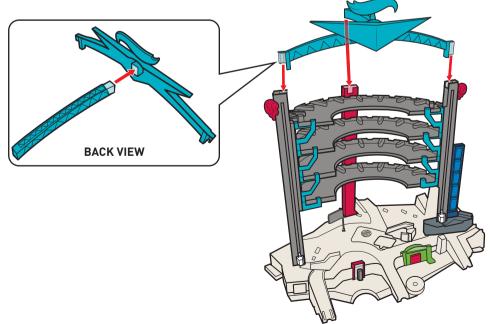

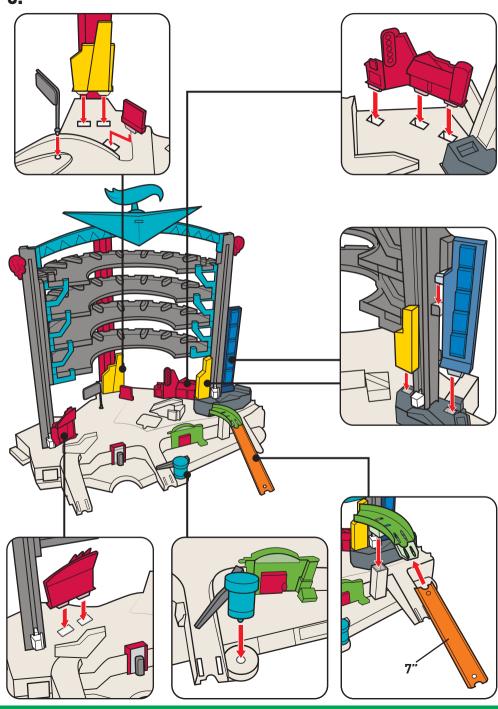

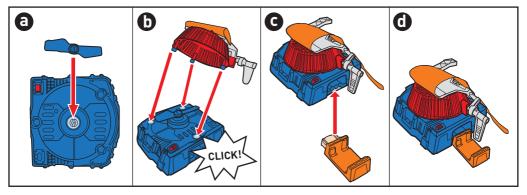


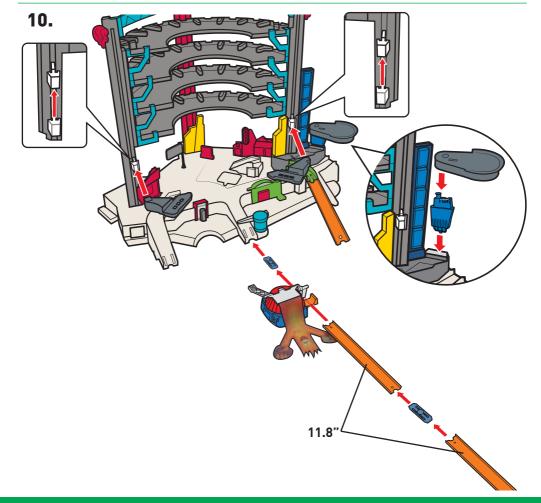


ASSEMBLE ZONE 2


1.

2.

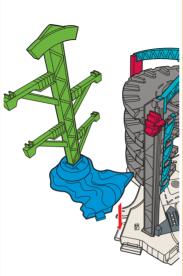



3.

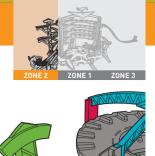


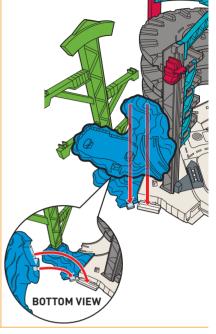



4.

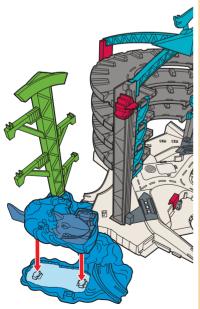


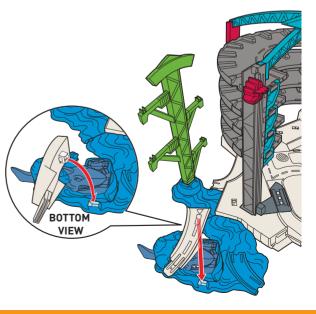


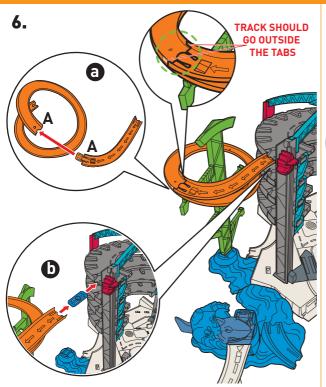


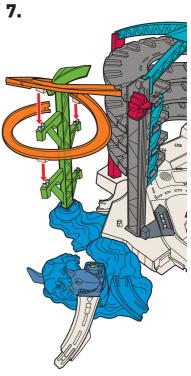

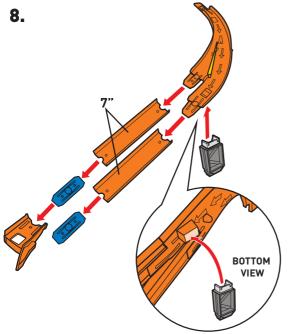

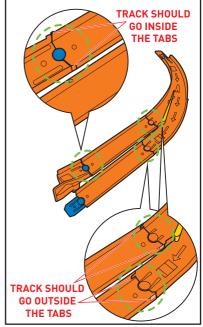

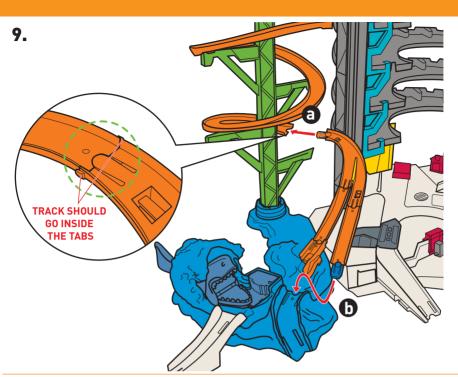

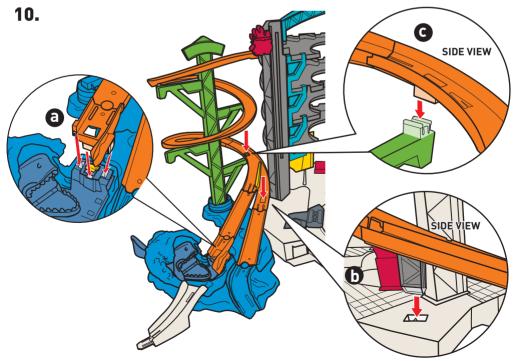



ASSEMBLE ZONE 3


1.







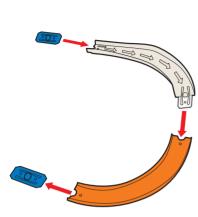

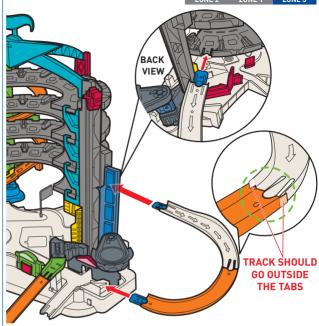


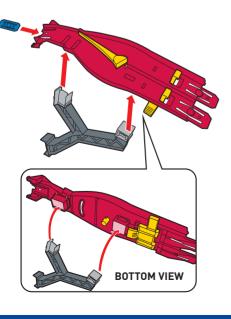

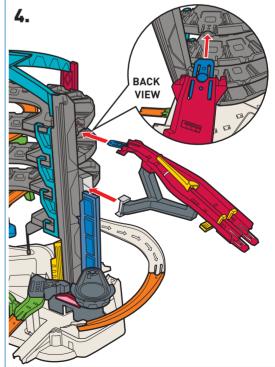


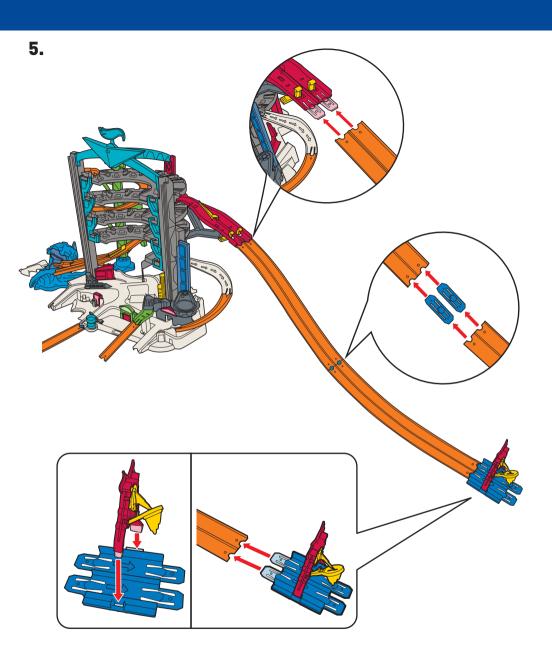


COMPLETED ASSEMBLY

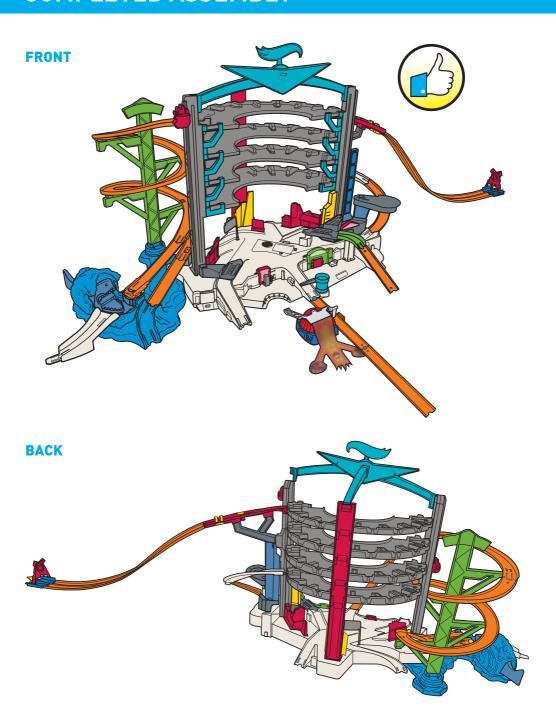


TO PLAY

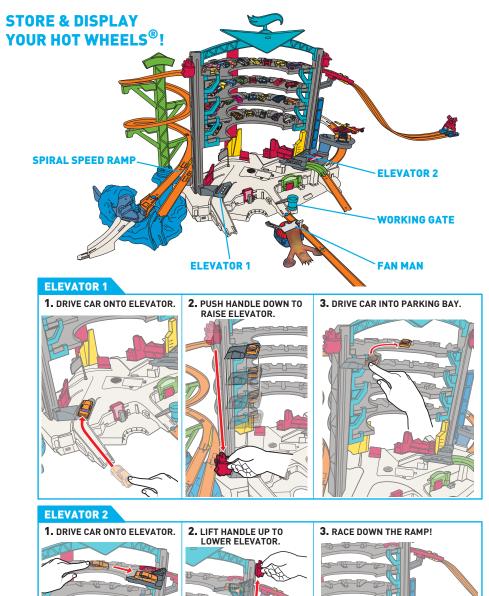


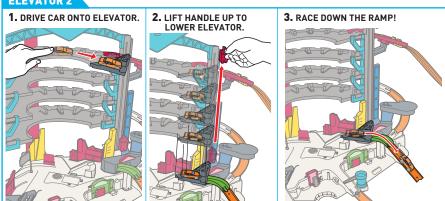


WORKING GATE

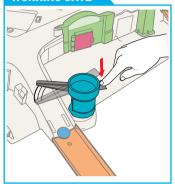



FAN MAN

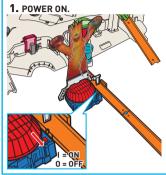


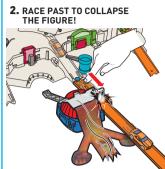



SPIRAL SPEED RAMP

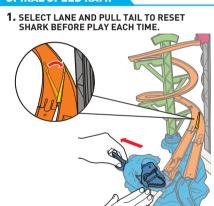


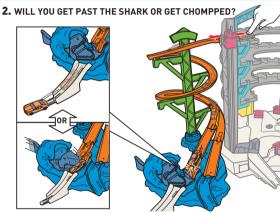


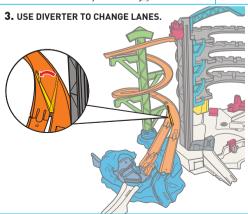

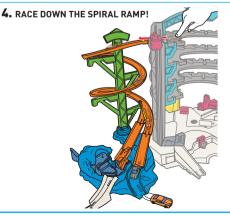

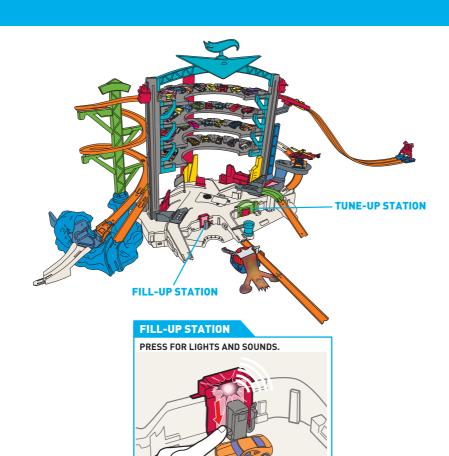

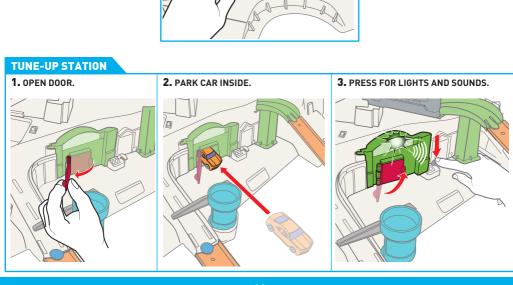


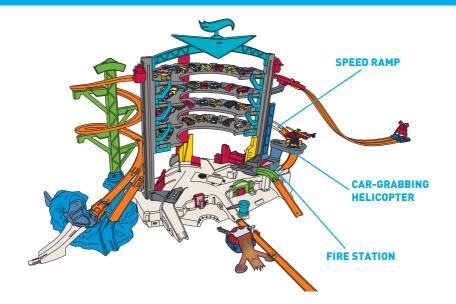







2. RACE THROUGH THE TUNNEL FOR LIGHTS AND SOUNDS.

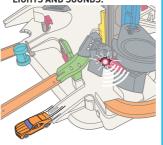

SPEED RAMP

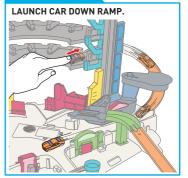


CAR-GRABBING HELICOPTER

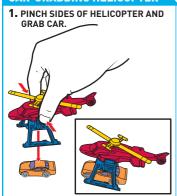



2. LIFT CAR FOR TRANSPORT.



3. PRESS FOR LIGHTS AND

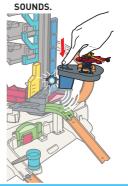

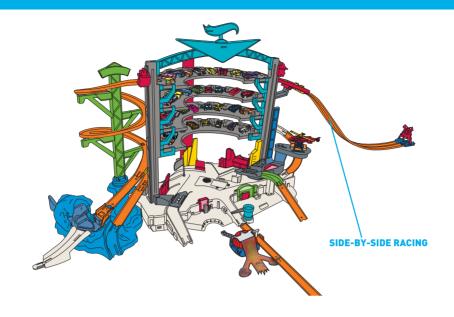


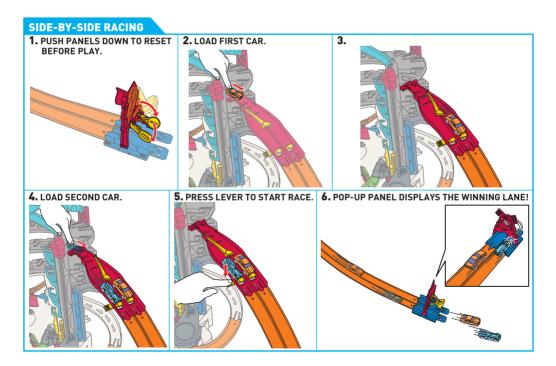

COLORS AND DECORATIONS MAY VARY.
NOT FOR USE WITH SOME HOT WHEELS® VEHICLES.


MORE WAYS TO PLAY

CONNECT TO OTHER HOT WHEELS® SETS (SOLD SEPARATELY).

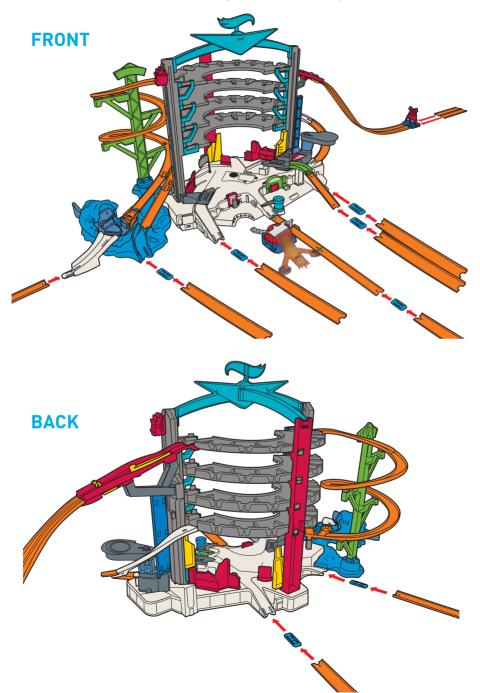


PERFORMANCE TIPS

- Q. My car keeps crashing on the track for no reason. What is the problem?
- A. Clear all obstructions on the track. Adjust track side walls at each connection point and make sure they are assembled either inside or outside of the track tabs, as described in the assembly steps.

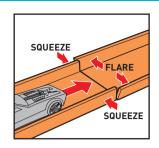

- Q. My car keeps slowing down by itself on the tracks.
- A. Lint may collect around your car's axles. This may cause the car to run slowly. Use tweezers or a toothpick to remove lint.

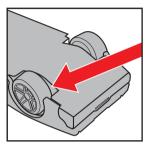

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- . Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- . Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- · Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

©2015 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.