




# HALO

## COVENANT NEEDLER INSTRUCTIONS




Please keep these instructions for future reference as they contain important information.

### 1 CONTENTS

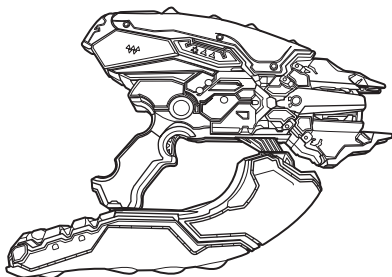


 
**WARNING:** Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.  
**TO AVOID INJURY:** Do not modify rounds, darts, or dart blaster. Always wear appropriate eye-wear, sold separately.






### 2 SET UP

A. Flip switch to I (ON).

I: ON  
O: OFF  
Δ: TRY ME

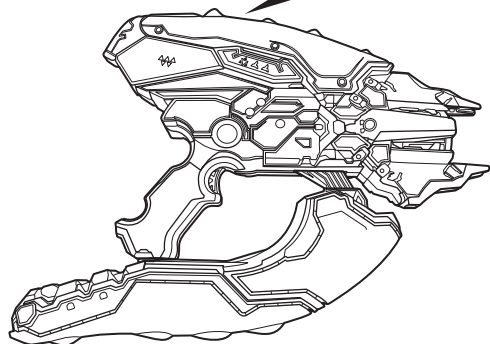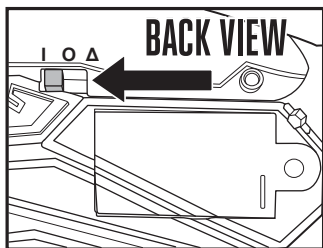


B. Load darts into barrel and storage.

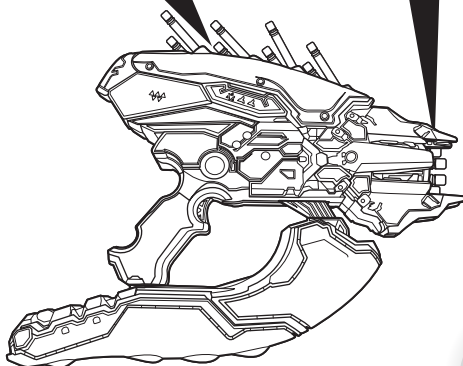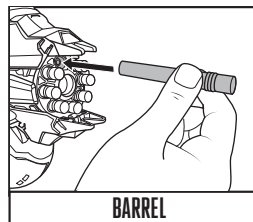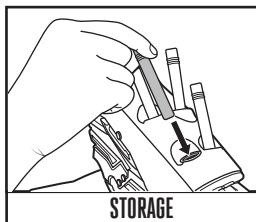


### 3 SINGLE-FIRE


A. Pull handle back to charge blaster.

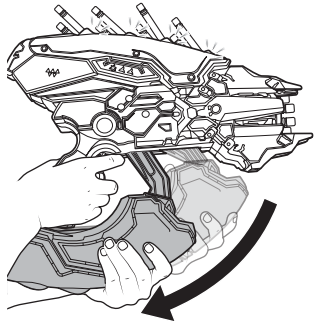


B. Pull trigger to fire!

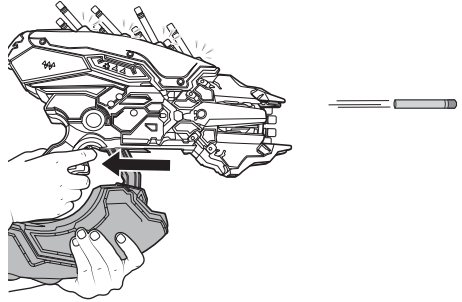

C. Push handle back up.

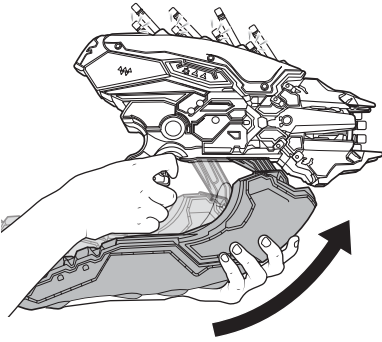


D. Pull handle back to charge blaster again.

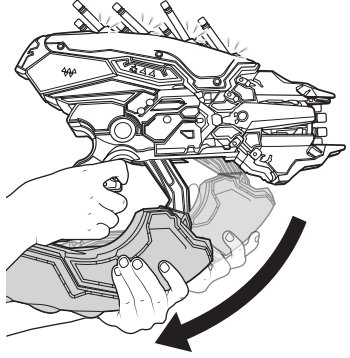


### 4 RAPID-FIRE

Pull and hold trigger, crank handle up and down for rapid-fire!

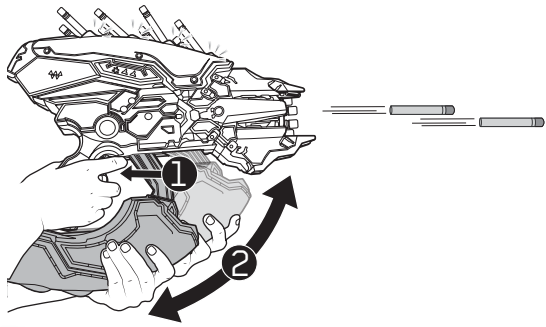

### 5 PERFORMANCE TIPS


To reset the number of lit-up lights, press trigger when blaster is uncharged.

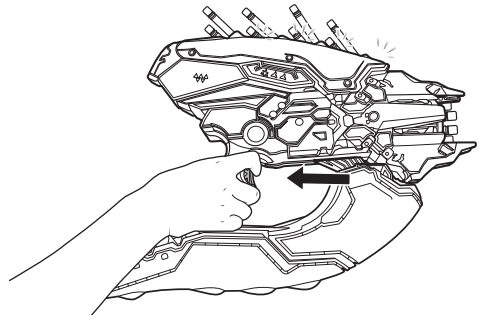


## 6 BATTERY REPLACEMENT

- Batteries included are for demonstration purposes only.
- Replace the batteries if lights dim.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 2 new AA (LR6) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For best performance, use alkaline batteries.
- When exposed to an electrostatic source, the blaster may malfunction.  
To resume normal operation, flip the power switch to OFF and ON again.

**NOTE:** This blaster is equipped with an automatic shut-off feature to help preserve battery life.

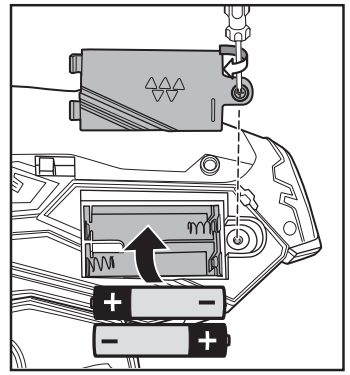

## 7 ATTACHING TARGETS

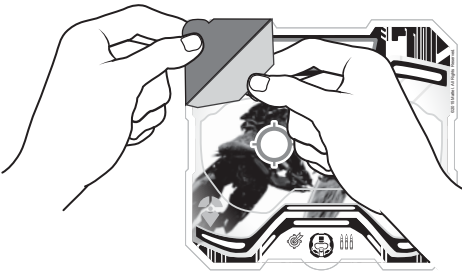

Peel backing off target before sticking it to surface.


**✘ Do not stick target to walls or furniture as it may cause damage to the surface.**

## 9 CLEANING DARTS




## 8 REMOVING DARTS

Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

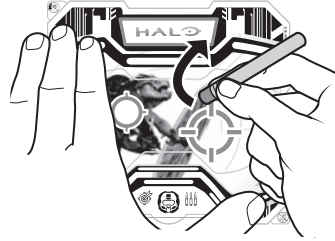

**REMOVE DARTS IMMEDIATELY TO MAINTAIN SMART STICK™ TECHNOLOGY!**

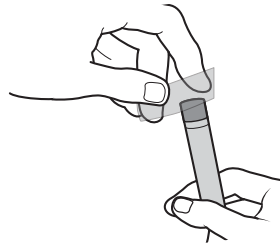

Dust, dirt, and other debris can cause darts to lose their adhesiveness. To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

**NOTE:** Dry darts before using again.

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



**Protect the environment by not disposing of this product with household waste (2002/96/EC).  
Check your local authority for recycling advice and facilities.**

## This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

**NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.**

©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.

© 2015 Microsoft Corporation. All Rights Reserved. Microsoft, 343 Industries, the 343 Industries logo, Halo, the Halo logo are trademarks of the Microsoft group of companies.

DKN81-0970G1  
1100791096-Dom

