




Flip & Race Speedway

Keep these instructions for future reference as they contain important information.

DKV67-0970
1100773137-DOM

ASSEMBLY PIECES

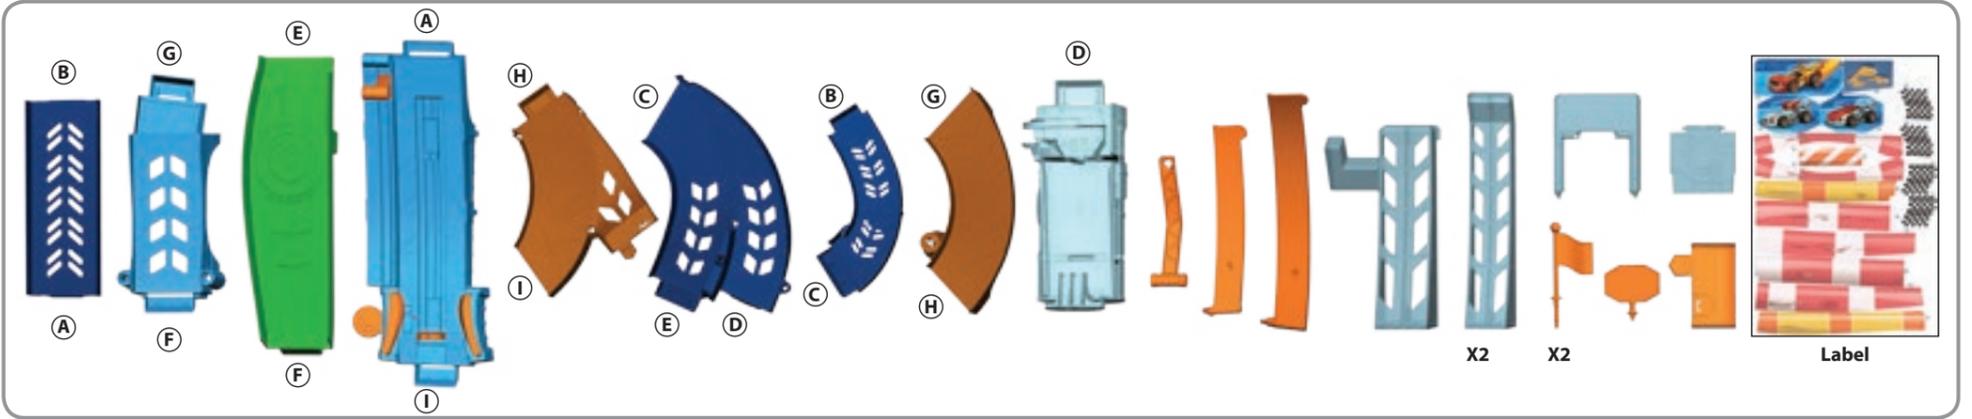

HELPFUL HINTS


BOTTOM VIEW





Letter codes are found on the bottom of the assembly pieces, as shown.

ADULT ASSEMBLY REQUIRED. No tools needed.




LABEL PLACEMENT














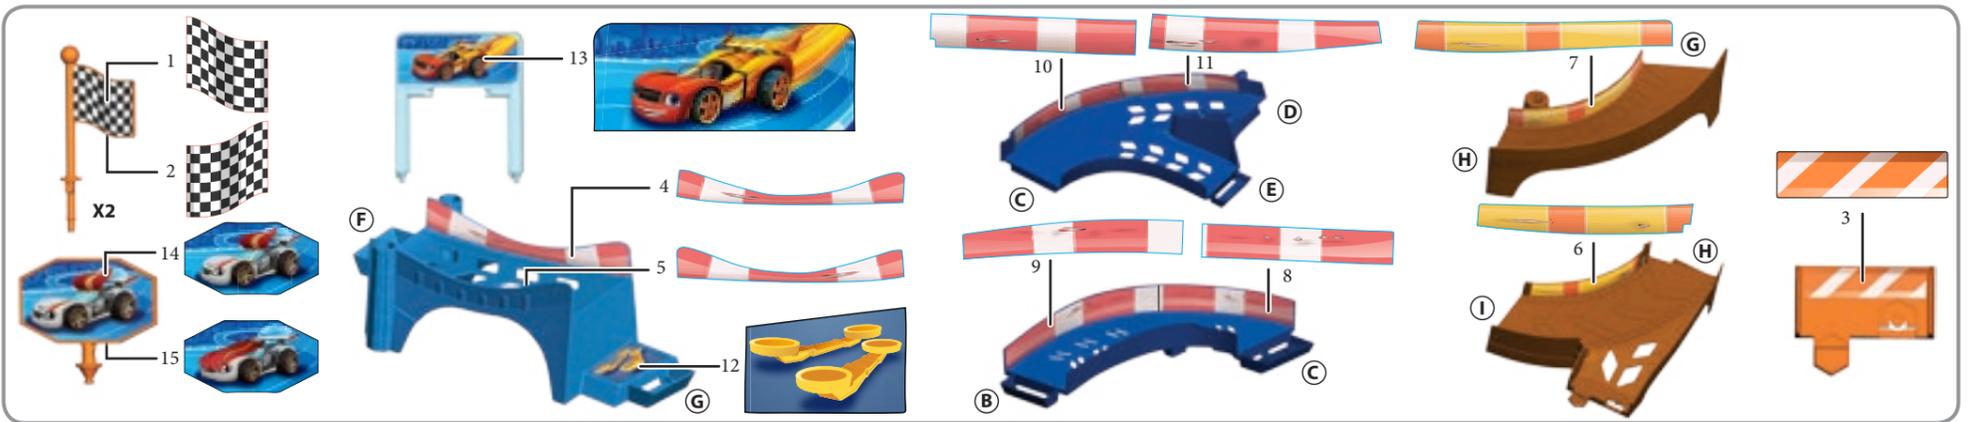


TRACK LAYOUT

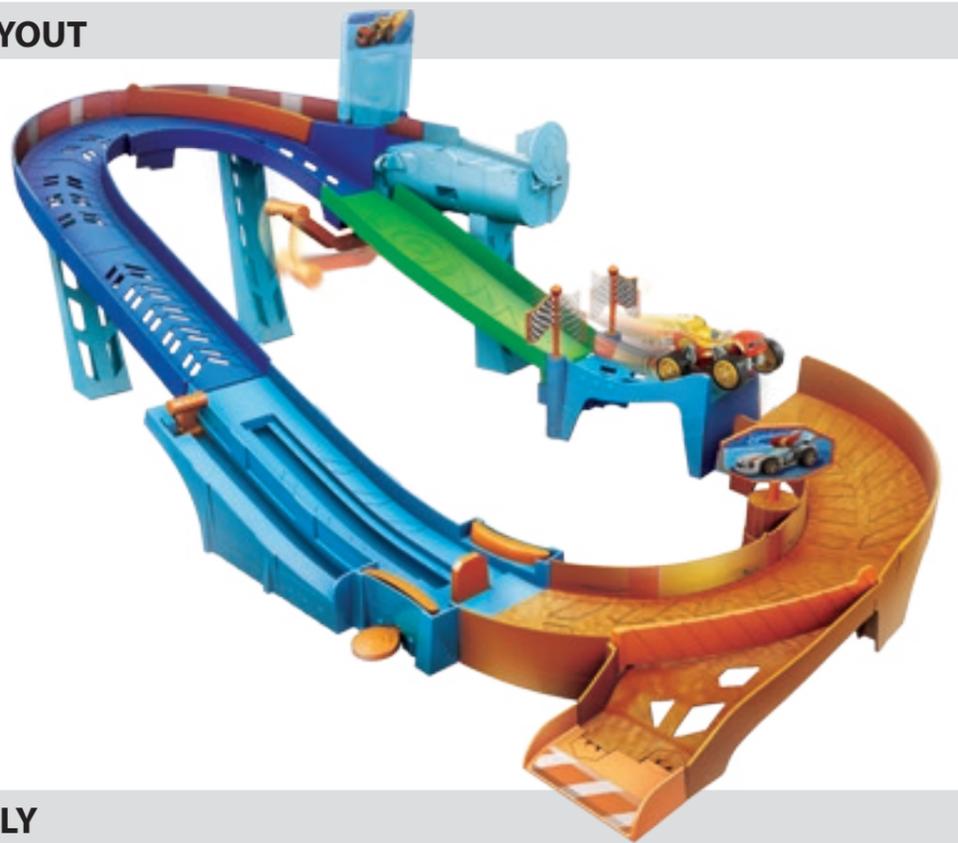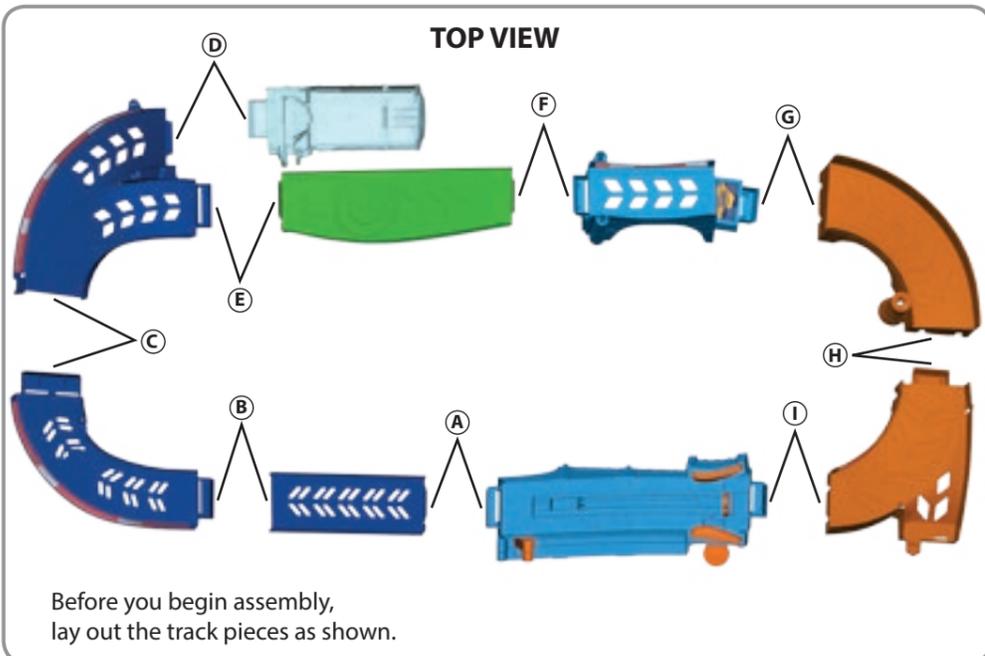


ASSEMBLY

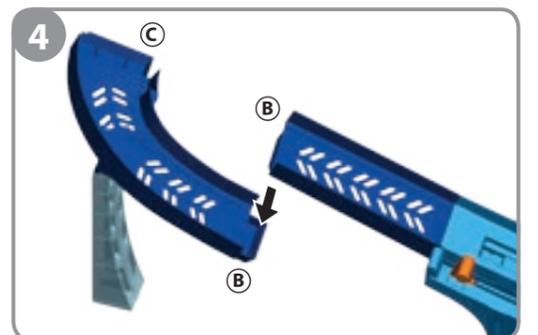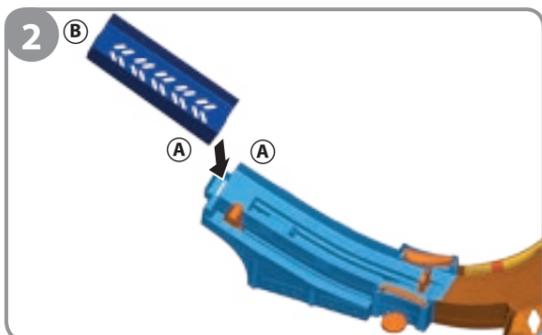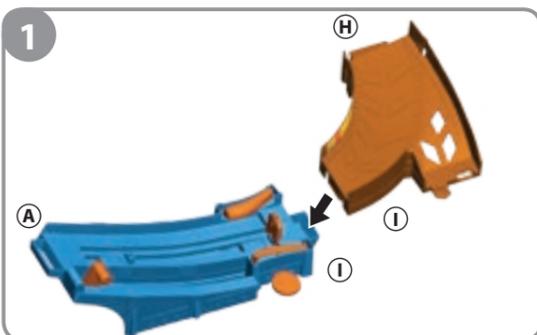


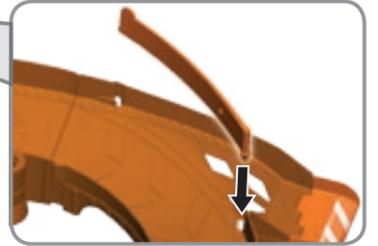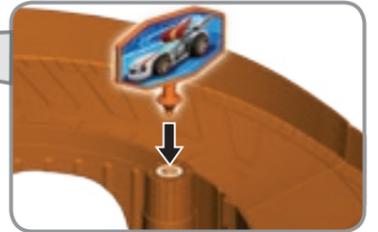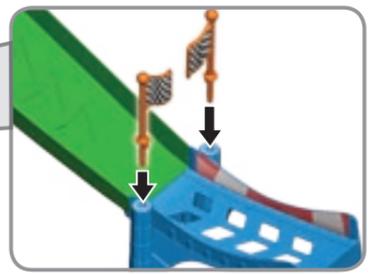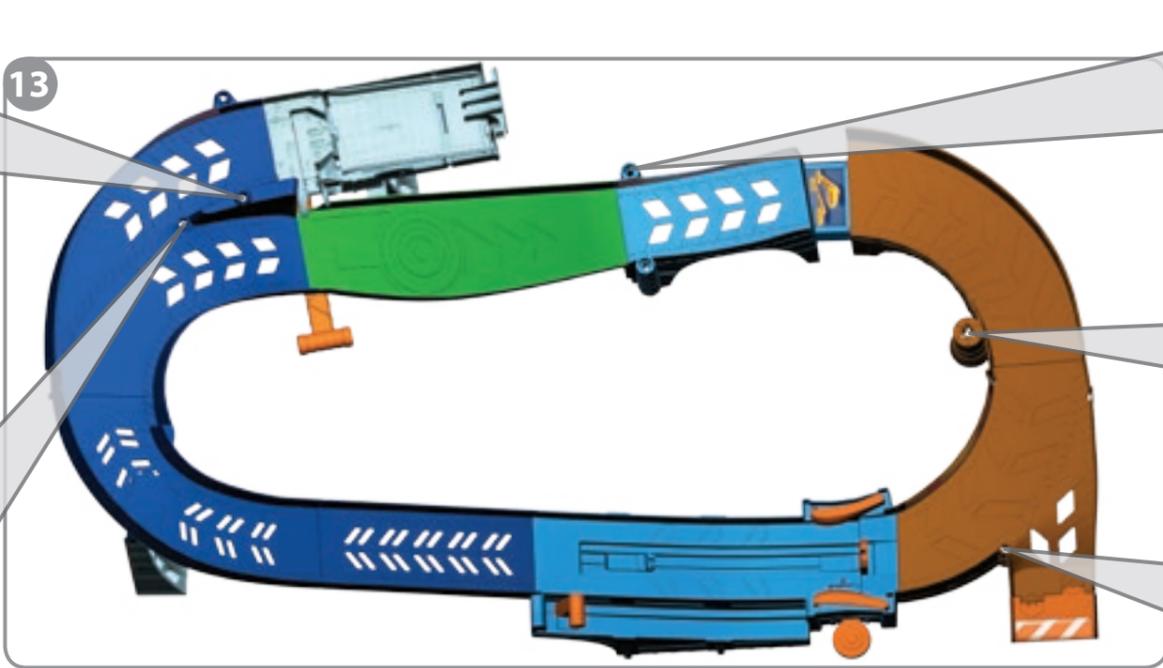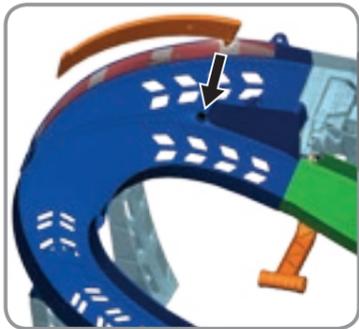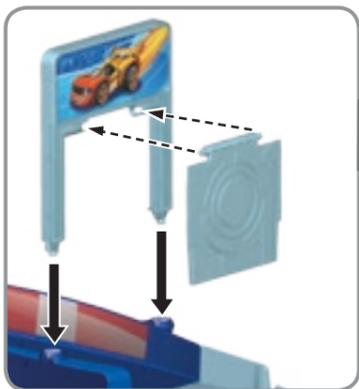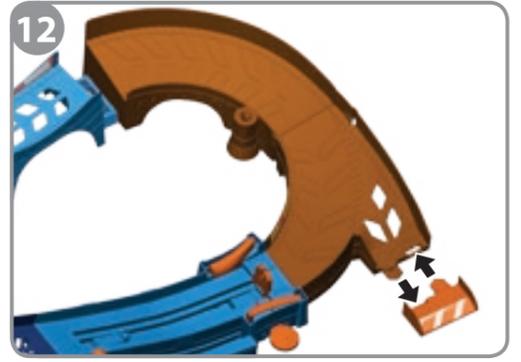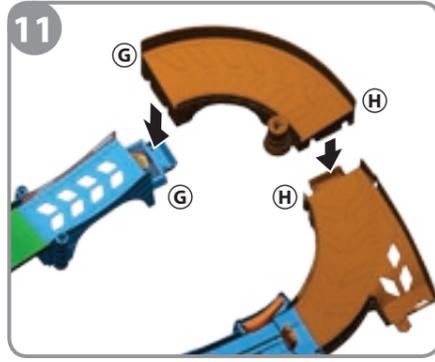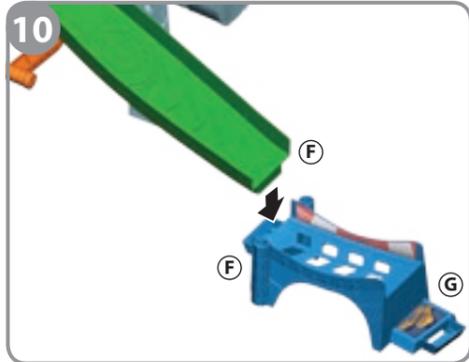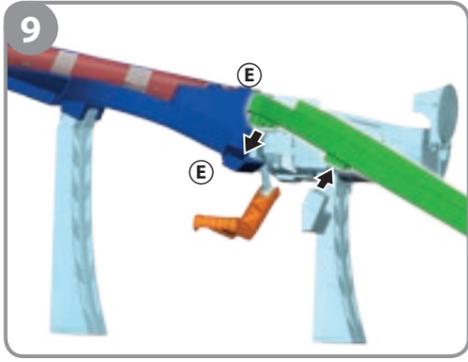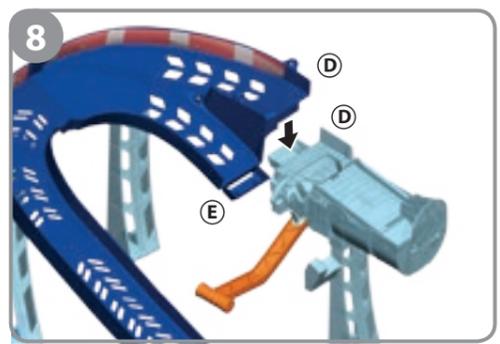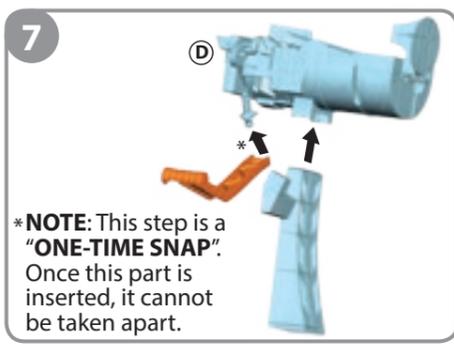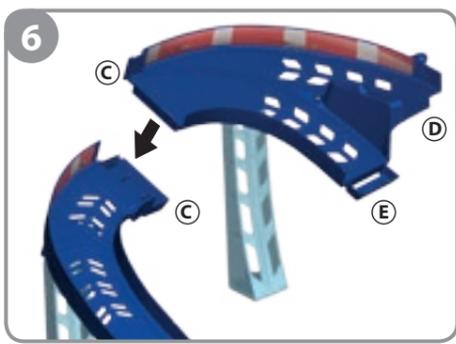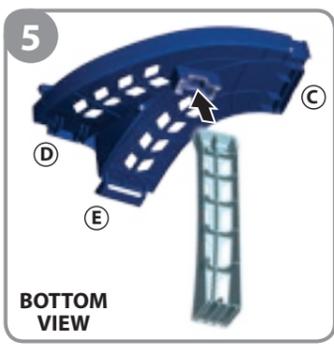


HOW TO PLAY

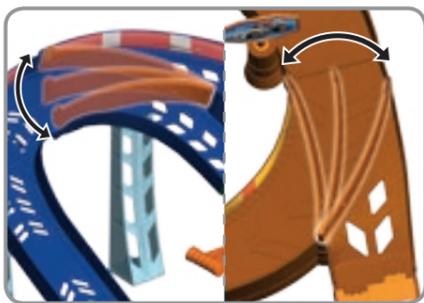


1. Set the 2 roadblocks to determine the direction of the vehicle.

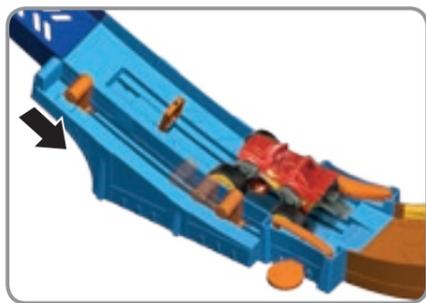

2. Load the vehicle into the Turbo Launcher and pull the lever to the bottom of the ramp to set the launcher.
Note: Turbo Launcher may not work with all Blaze vehicles.

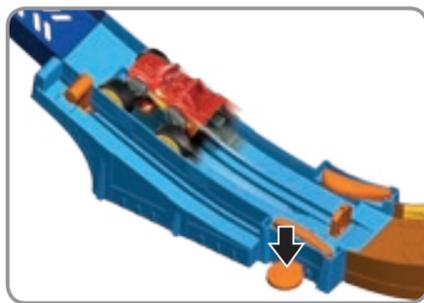


3. Press the button to send Blaze racing around the track.

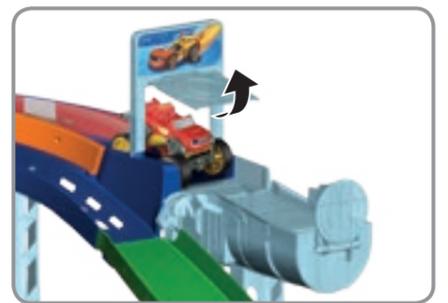


4. Blaze bursts through the gate into the Turbo Flipper.



5. Slowly pull the handle and the Turbo Flipper transforms Blaze, sending him speeding over the ramp and around the track.
Note: Turbo Flipper only works with Blaze Flip & Race vehicles. Additional Flip & Race vehicles sold separately and subject to availability.

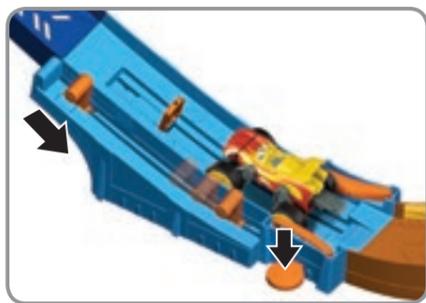

6. Every time Blaze reaches the Turbo Launcher, make sure he is correctly positioned in the launcher. Then pull the lever back and press the button to send Blaze racing around the track again.

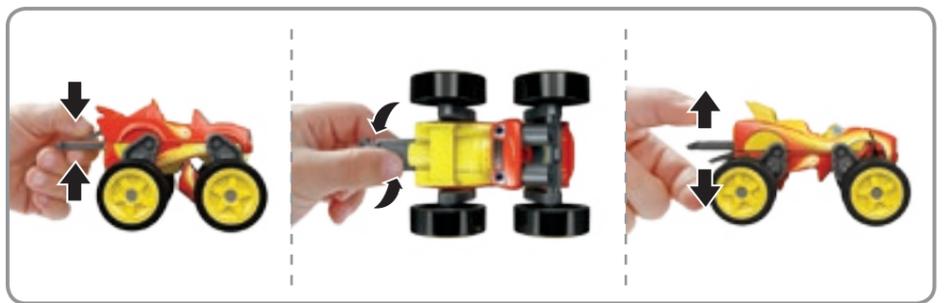

7. At any time, you can press the clip and rotate Blaze to transform him from a monster truck into a race car and back again.

© 2016 Viacom International Inc. All Rights Reserved. Nickelodeon, Blaze and the Monster Machines and all related titles, logos and characters are trademarks of Viacom International Inc.
© 2016 Mattel. All Rights Reserved. * and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**
Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.
Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

