


LET'S PLAY!


4 **a** Adjust oven plate height and place cupcake or cookies in the oven!



b Turn the dial to set the oven!

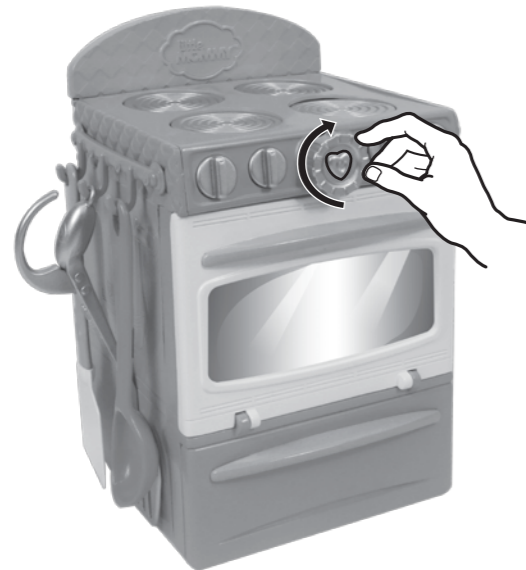

c Oven "dings" when dial finishes turning!

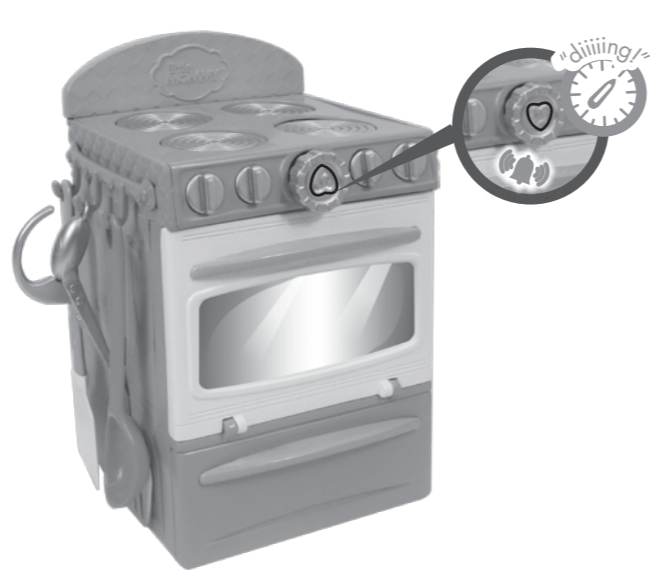

d Store accessories inside the oven drawer when you are done!



Little Mommy® Bake with Me Baby™ INSTRUCTIONS

3+




DLB57-0970

CONTENTS



To place egg back into shell.

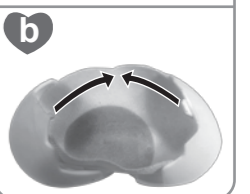

WARNING:
CHOKING HAZARD - Toy contains small balls. Not for children under 3 years.

This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.
SURFACE WASHABLE ONLY.
Please remove everything from the package and compare to the contents shown here.
If any items are missing, please contact your local Mattel office.
Keep these instructions for future reference as they contain important information.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimpot & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.


LET'S PLAY!

1 Align hearts on hands and accessories for the doll to hold them!



2 Press the button on the left leg to move the doll's left hand!

a Crack an egg!

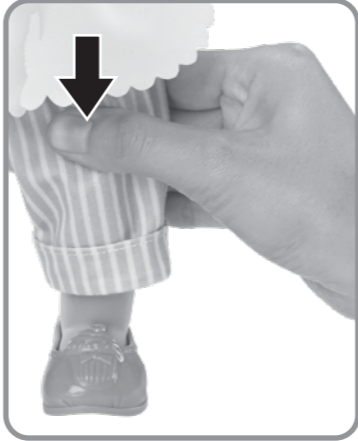

b Use the egg beater!



c Use the spoon!



3 Press the button on the right leg to...



pour...



& stir!