






INSTRUCTIONS

3+ **MATTEL**
DLT23

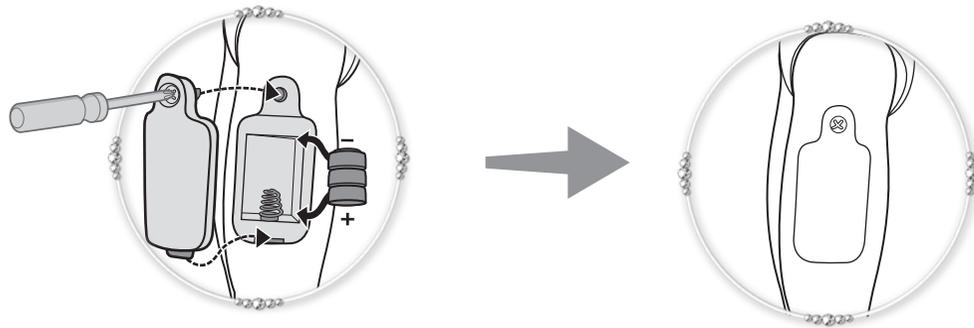

Battery Replacement

 Replace batteries when sound becomes distorted or light dims. To replace batteries, use a Phillips head screwdriver (not included) to open battery cover. Insert 3 new AG13 (LR44) button cell batteries as shown. Use either AG13 (LR44) button cell batteries or equivalent. Replace battery cover and tighten screw. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by reinstalling the batteries.

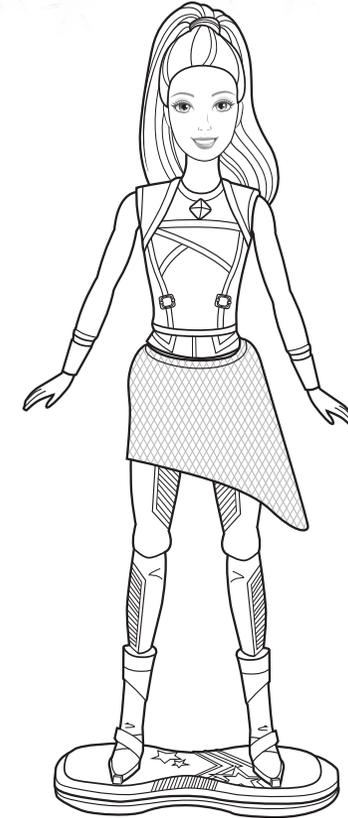

Includes 3 AG13 (LR44) button cell batteries. Batteries included are for demonstration purposes only. Dispose of batteries safely.

The product is equipped with an automatic shut-off feature that helps preserve battery life.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM


Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service -

1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.



Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.


1 Press for lights and music!

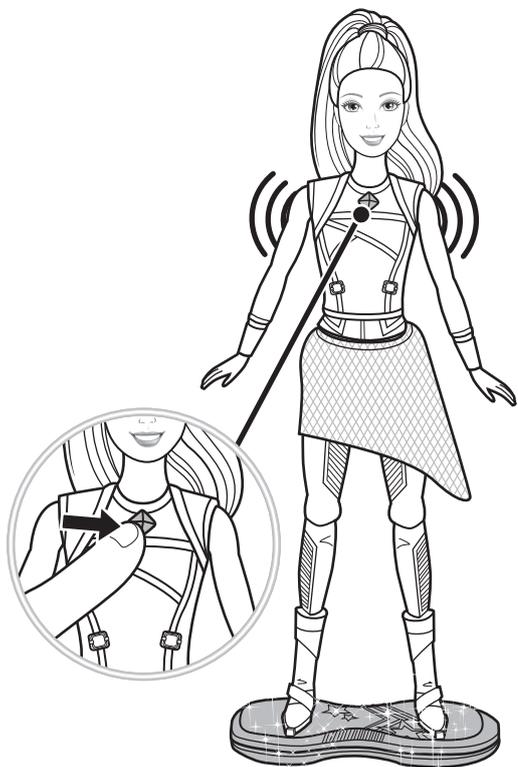

2 Tilt doll to left, right, forward, backward to trigger different lights and sounds!




3 Press again to stop function!

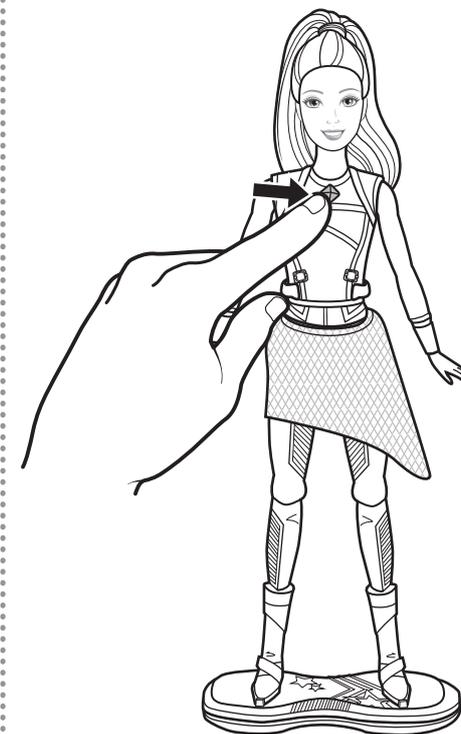


Note: After several seconds of inactivity, lights and sounds will automatically shut off, going into SLEEP MODE. To reactivate, simply press the chest button.

To reattach

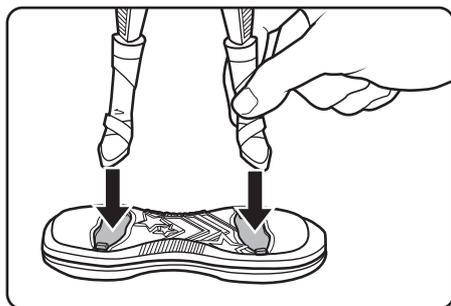

Note: Make sure the doll is properly attached to the board before spinning.

Spin side to side!

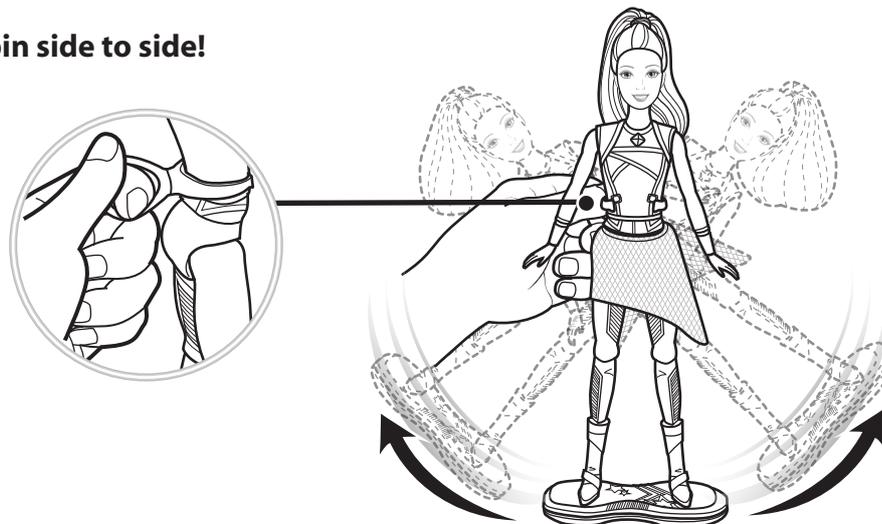

Note: Do not spin too fast to prevent board from coming off.