



**Design your own fashions!**



For design tips, go to [Barbie.com/ToyTips](http://Barbie.com/ToyTips)

## WASH

Wash fashions in warm water (120°F / 49°C) with soap (not included) for best removal. Wipe the spinner and the plastic pieces clean with a damp cloth (not included). The fashions provided are reusable and washable. Water toys sometimes get messy, protect play surfaces before use. Drain, rinse, clean and dry all items thoroughly before storing.

The color paint in this product has been sealed with a tamper-evident seal. If this seal is broken, do not use this product and call 1-800-524-8697 for a replacement.

### CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only).

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan

Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.



## CONTENTS



Doll cannot stand alone.

Colors and decorations may vary.

Each sold separately, subject to availability.

PARENT'S NOTE: Color paint should be used only for the washable fashions included, it must not be used on other fashions, the doll or on the child.

Color paint may stain fabrics and other surfaces. Avoid contact with carpet, clothing, walls and furniture. This product may stain or stick to some surfaces. Protect play area before use.

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

## SETUP

1



Note: For best results, place spinner on a smooth and flat surface.

2



3



Lock in fashion.

4.1

Shake the paint bottle before use.



4.2



Note: To prevent paint from drying, recap after use.

## DESIGN

1a



Close the lid until you hear a click!

CLICK!

2a



Pump lever several times.

3a

Drop a small amount of paint through the lid opening while fashion spins.



Note: Continue with additional colors for fun effects.

1b



Drop a small amount of paint.

2b



Close the lid until you hear a click!

CLICK!

3b

Pump lever several times. Repeat steps for more designs.

