



MORE WAYS TO PLAY

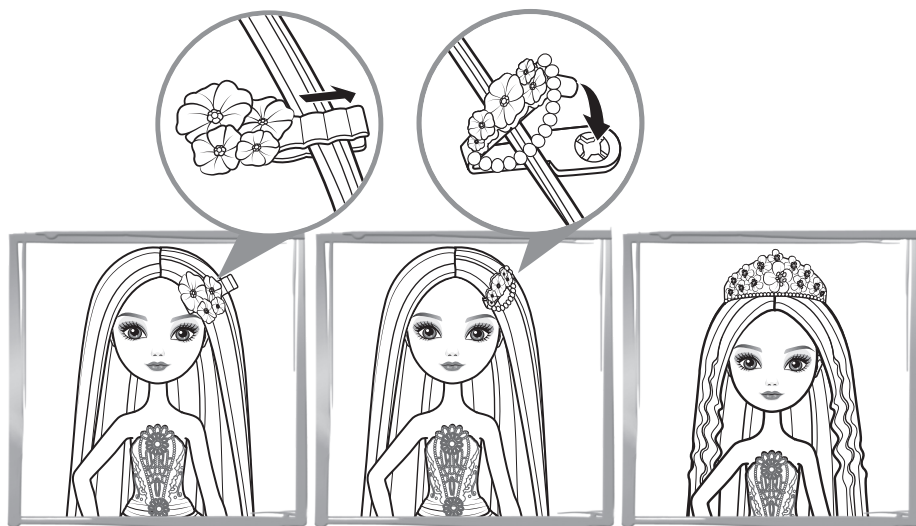

RESET

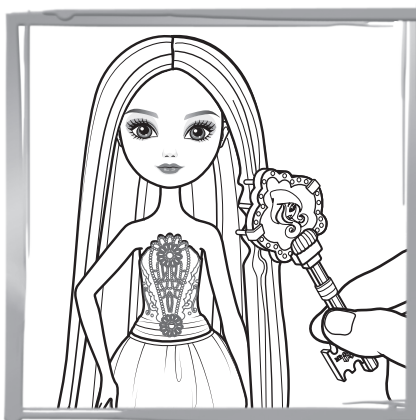

Brush to straighten and start all over again!

Tips:

1. For best results, style small sections of hair.
2. Apply tension as you wrap the curl.

• The curler and crimper are applicable to the supplied doll's hair only.




INSTRUCTIONS

6+



CONTENTS

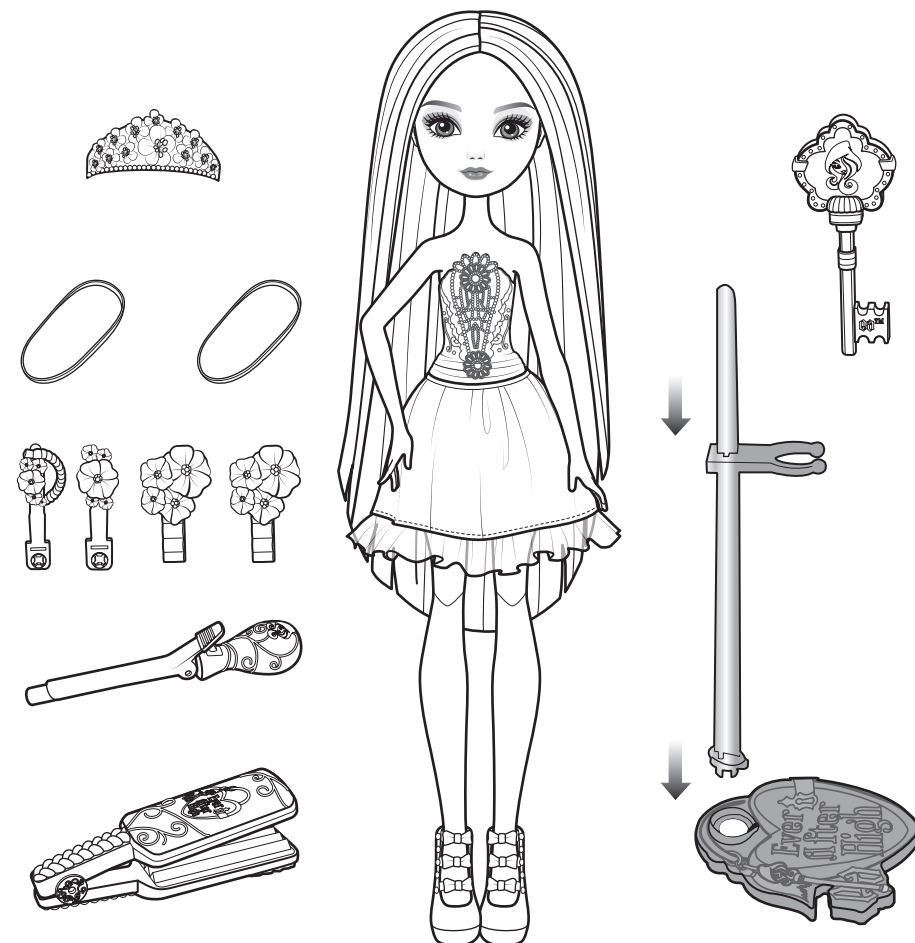

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM


Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A.
Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport &

Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.


©2015 Mattel. All Rights Reserved.

DNB75-0970
1100813429-DOM


LET'S PLAY

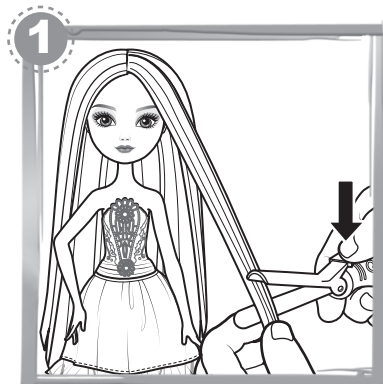


1 Measure the end of a pinky's width (0.5cm or 1/4") strand of hair.

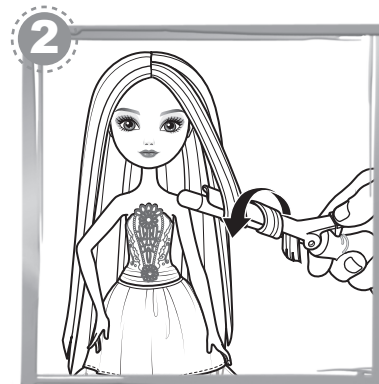

2 Tightly wind hair.

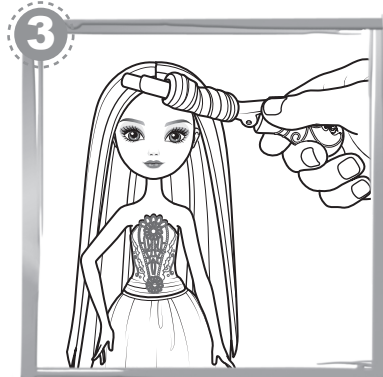


3 Hold for at least 15 seconds.
Tip: Hold longer for longer lasting curls!

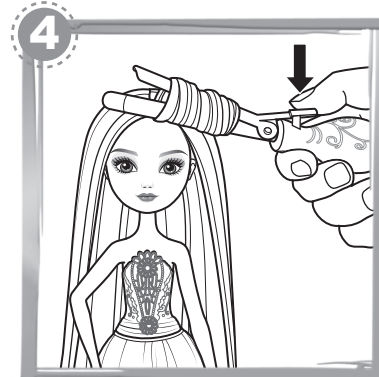


4 Press handle down.




5 Slide the curler out to release hair as shown.

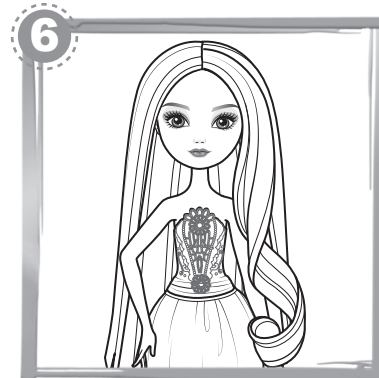

6

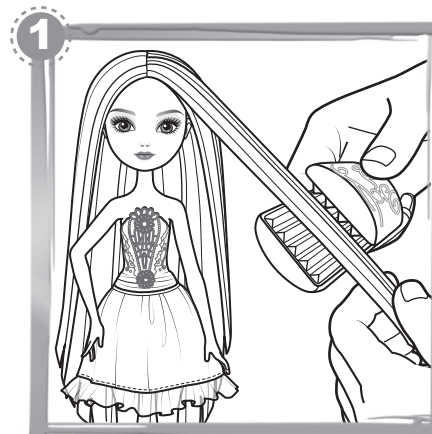


1 Measure the end of a pinky's width (0.5cm or 1/4") strand of hair.

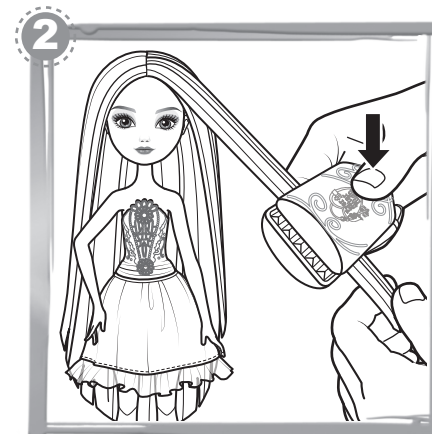

2 Press crimper firmly and hold for at least 15 seconds.
Tip: The longer you hold, the better the crimped effect!



3 Loosen the crimper and release the hair as shown.

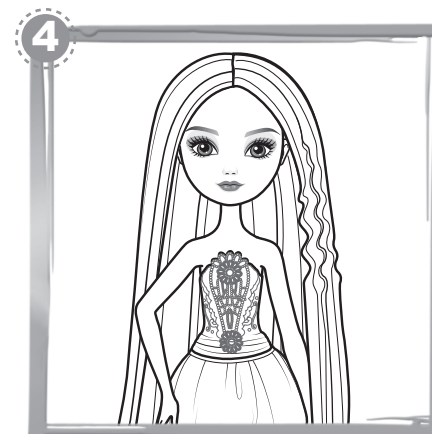

4