


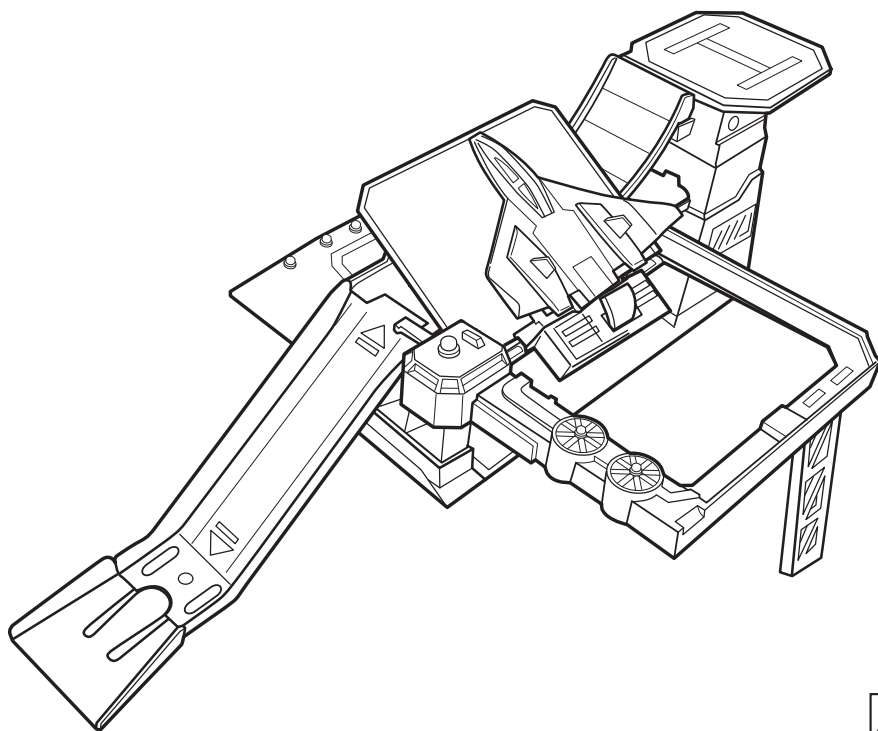

SKY-BASE BLAST™



4+

service.mattel.com

 
 

HOTWHEELS.COM




ASST.DNN74
DNN75-0971
1100871332-D0M

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.


CONTENTS

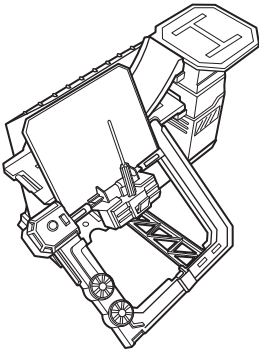

LABEL SHEET

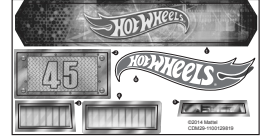


APPLY LABELS

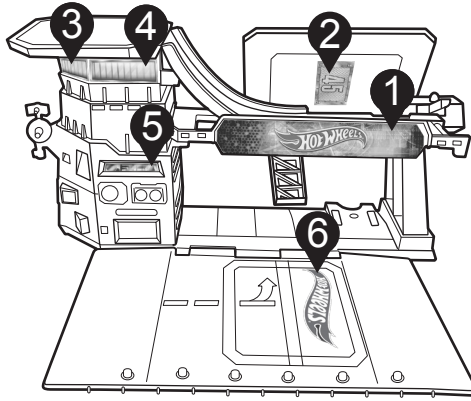


ASSEMBLY

1.

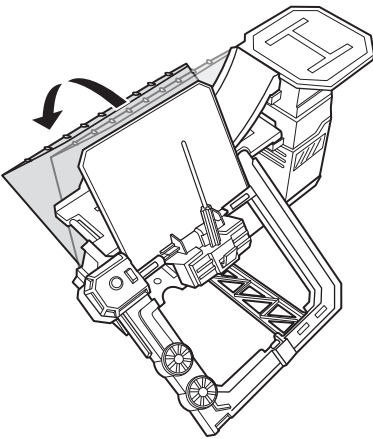


2.

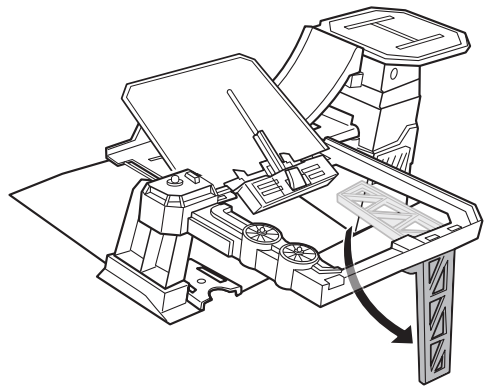


ASSEMBLY (CONTD.)

3.

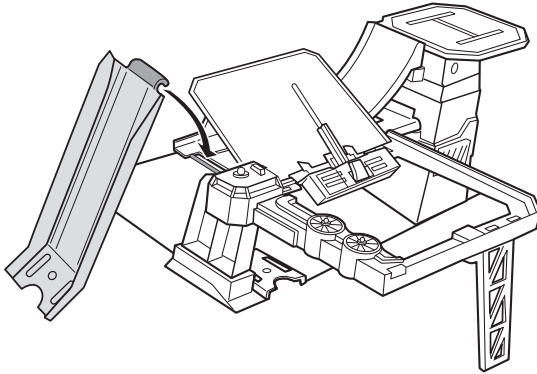


4.

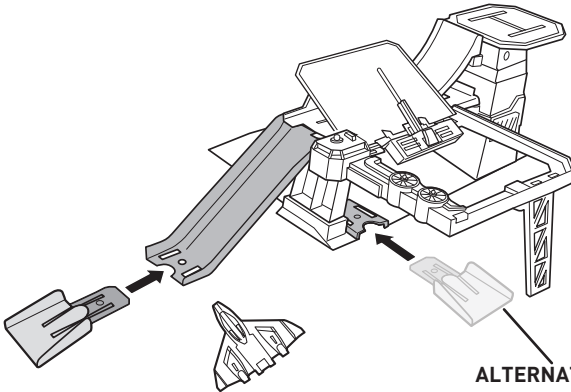


ALTERNATIVE CONNECTION

TO PLAY

1. Load plane.

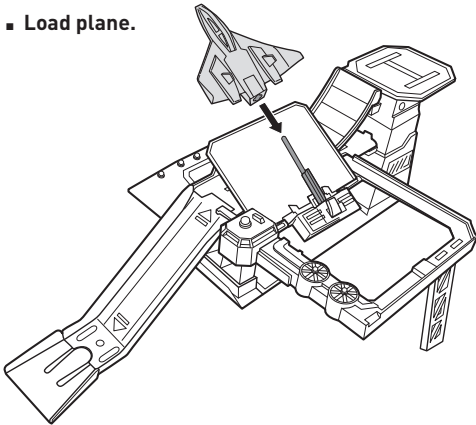


2. Close the platform.

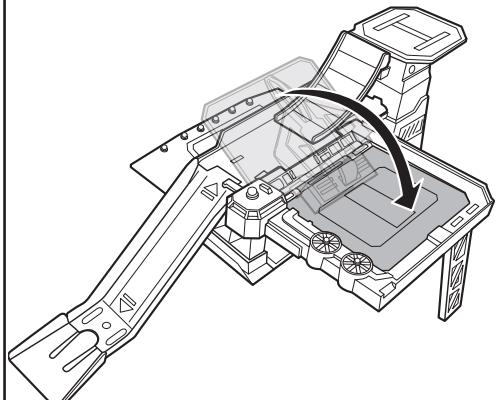


TO PLAY (CONTD.)


3. Roll the car down the ramp.

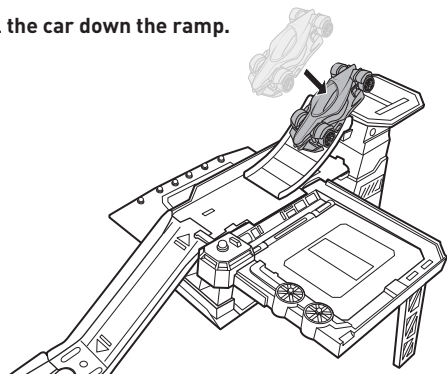

4. Car hits trigger...

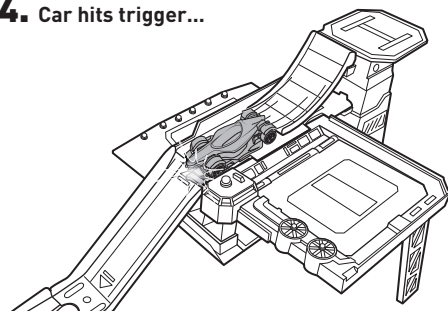


5. And reveals the plane.

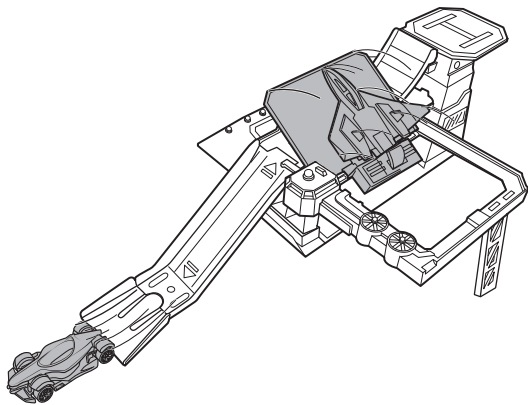

NOT FOR USE WITH SOME HOT WHEELS® VEHICLES.

6. Press button to launch plane.

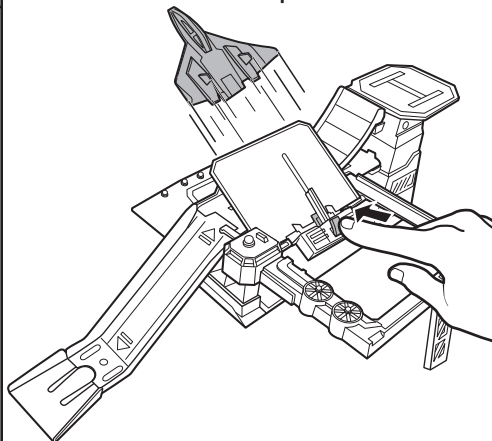

WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

MORE WAYS TO PLAY



CONNECT TO OTHER HOT WHEELS® SETS (SOLD SEPARATELY).

