


**LET'S PLAY!**

1

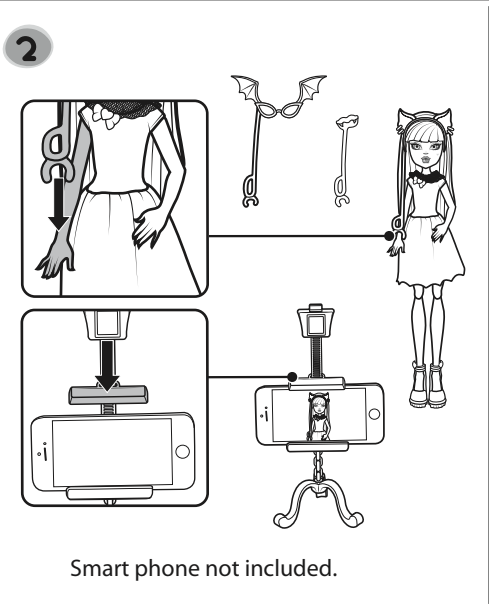

**CONSUMER INFORMATION**

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697  
(US and Canada only).

**SERVICE.MATTEL.COM**

Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.


**6+**



©2016 Mattel. All Rights Reserved.

DNX68-0970  
1101084549-DOM

# ASSEMBLY

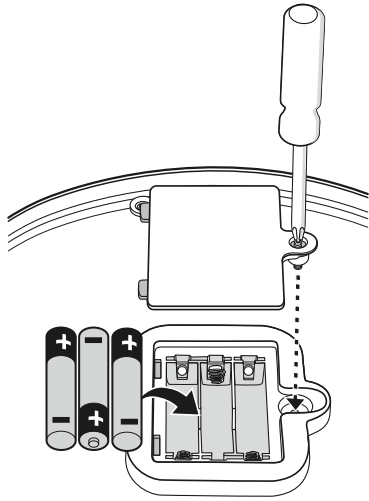

## BATTERY INSTALLATION:

Unscrew the battery cover with a Phillips head screwdriver (not included). Install 3 AAA alkaline batteries (not included) in the orientation (+/-) shown. Replace battery cover and tighten screws.

For longer life use alkaline batteries.

When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries. Replace batteries when lights dim. Do not connect to more than the recommended number of power supplies.

