



INSTRUCTIONS
BOOM-CO.COM

SPINSANITY 3X™

8+

 
Please keep these instructions for future reference as they contain important information.


1 CONTENTS

 **x6 AA (LR6)
ALKALINE BATTERIES
REQUIRED NOT INCLUDED**


 **x30**



 **x3**

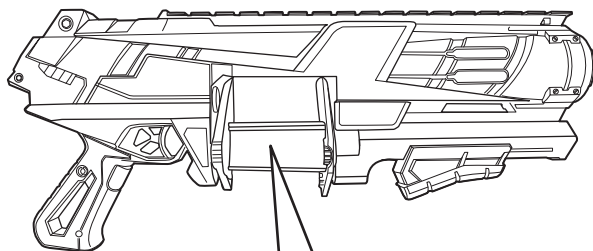


Attach chambers to blaster before play.

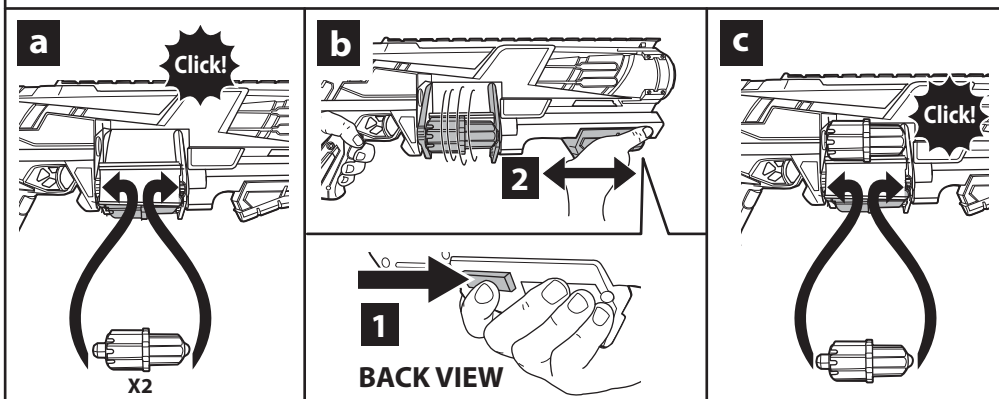


2 BATTERY INSTALLATION

- Requires 6 AA (LR6) alkaline batteries (not included).
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 6 new AA (LR6) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Replace batteries if motor slows down.
- For best performance, use alkaline batteries.

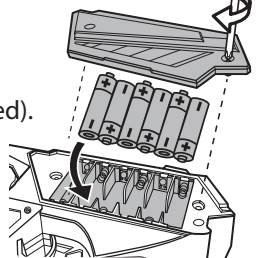


3 TO PLAY


- A.** Fully load the two bottom chambers with darts. **B.** Hold button and pump to access top chamber. Continue Loading.

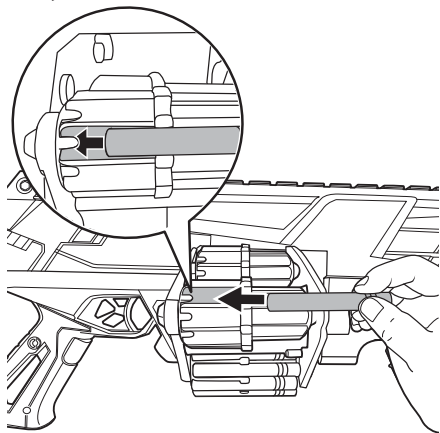

NOTE: Darts should be pushed all the way back and locked under the tabs when loaded.

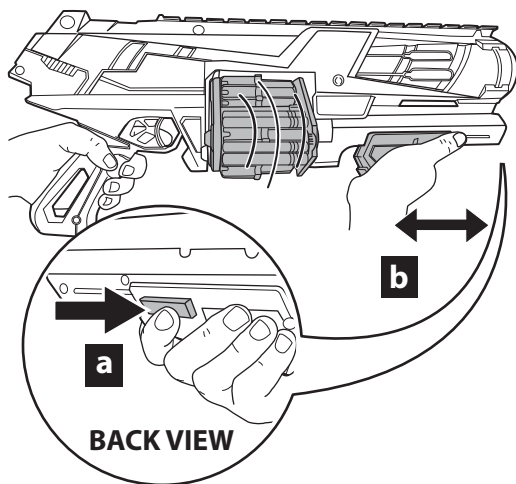


- C.** Hold button to rev motor. Pull trigger and release quickly for single fire!

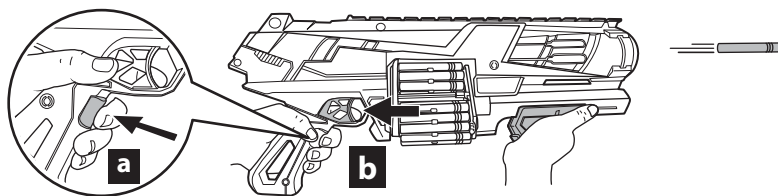


IMPORTANT: Chambers must be properly aligned to blaster when revving motor.

- D.** Rev motor. **Fully press** and **fully release** trigger repeatedly for rapid fire!

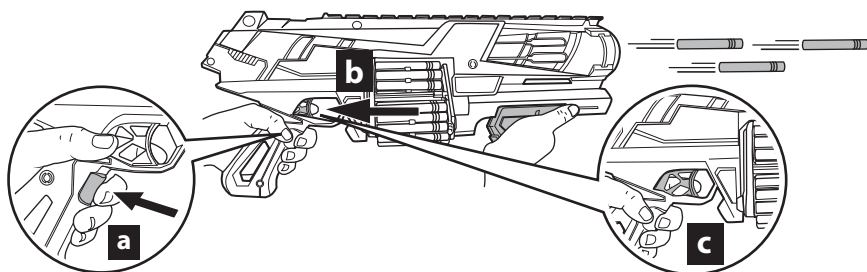


E. Hold button and pump the grip to advance to the next chamber.

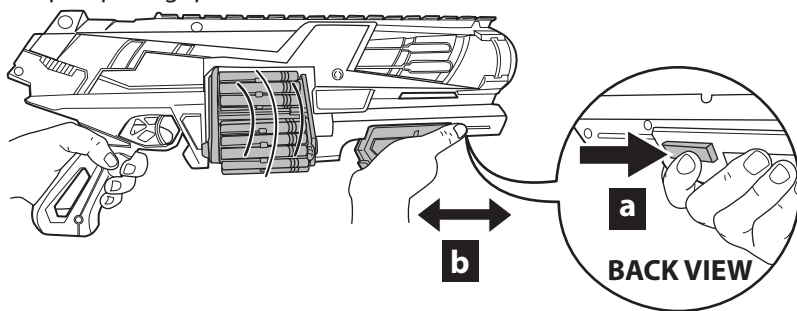


4 PERFORMANCE TIPS

Blaster may be jammed if it is loaded but will not fire:

To clear a jam, hold button and pump the grip to eject the jammed dart.

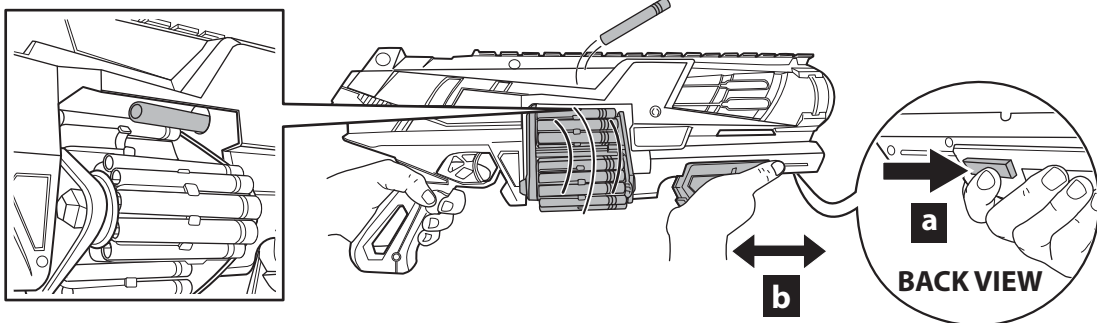

5 ATTACHING TARGETS

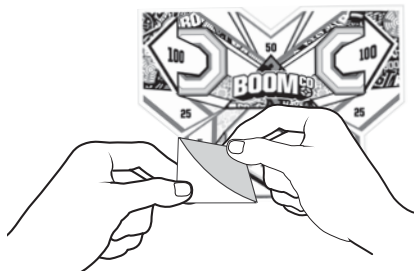

✗ Do not stick target to walls or furniture as it may cause damage to the surface.

Peel backing off target before sticking it to surface.



6 REMOVING DARTS

Keep one hand pressed on target, hold dart by the tip and gently peel dart off.



**REMOVE DARTS
IMMEDIATELY
TO MAINTAIN SMART STICK™
TECHNOLOGY!**

7 CLEANING DARTS

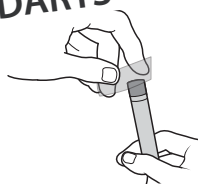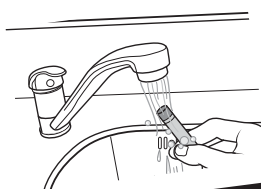

Dust, dirt, and other debris can cause darts to lose their adhesiveness. To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

NOTE: Dry darts before using again.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

©2015 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ, Malaysia. Tel:03-78803817, Fax:03-78803867.

CJG60-0970-G2
1100317554-DOM



service.mattel.com