



HOW TO PLAY


Place MINIS engine face-first into the base of the crank .

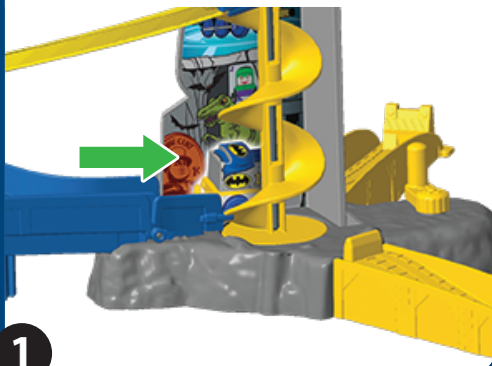

Turn the crank to raise MINIS engine to the top and launch it down the track..

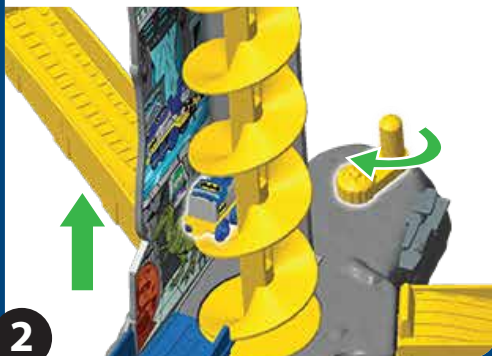

Move the lever to choose which ramp to send MINIS engine down.

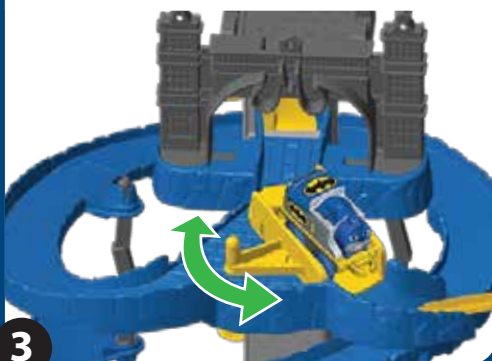

You can load several Thomas & Friends™ MINIS into the base of the crank tower and crank them to the top for multiple racing action. (Additional MINIS sold separately and subject to availability.)



4

NOTE: May not work with all engines.

Thomas the Tank Engine & Friends™

CREATED BY BRIAN ALLCROFT

Based on the Railway Series by The Reverend W Awdry.
©2016 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.
©2016 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2016 Mattel. All Rights Reserved. * and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



BATMAN and all related characters and elements © & ™ DC Comics. WB SHIELD: TM & © WBEL. (s16)



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.




MINIS BATCAVE™



Keep these instructions for future reference as they contain important information.

WHAT'S INCLUDED

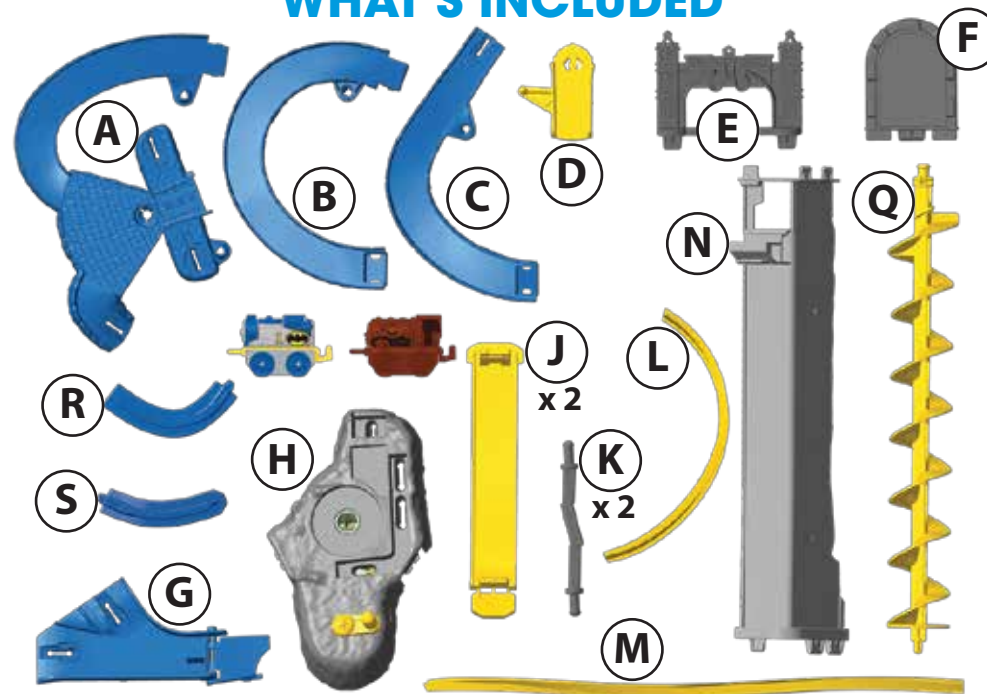

HELPFUL HINTS

- For assembly steps marked with a red star (★), please note that the width of the flexible track is T-shaped and wider at the top than it is at the bottom. Be sure to align and insert correctly.
- ONE-TIME SNAPS:** Assembly steps that are marked with a star (★) are "one-time snaps". Once these parts are put together, they cannot be taken apart.



Fisher-Price



DPR63-0970-G1
1100976180-DOM

DPR63

ASSEMBLY

For assembly steps marked with a red star (*), please note that the width of the flexible track is T-shaped and wider at the top than it is at the bottom. Be sure to align and insert correctly.

Assembly steps that are marked with a star (*) are "one-time snaps". Press firmly until they snap into place. Once these parts are put together, they cannot be taken apart.

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

NOTE: Make sure the yellow track piece is twisted for upside-down racing action!