

Fisher-Price®

DRN30



**Keep this instruction sheet for future reference,
as it contains important information.**

THiNK & LEARN

Consumer Information



Requires four AA batteries (included) for operation. Batteries included are for demonstration purposes only.



Battery replacement is required. Only adults should replace batteries. Tool required: Phillips screwdriver (not included).

 


This product emits flashing lights at 5-30 cycles per seconds.




Wipe toy with a clean, damp cloth. Do not immerse. This toy has no consumer serviceable parts. Do not take apart.

Battery Replacement

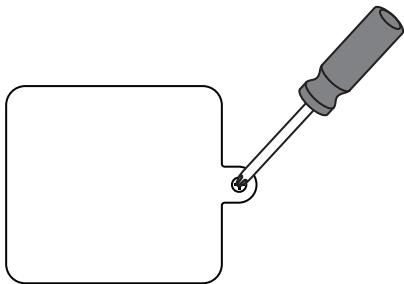

-
- For longer life, use **alkaline** batteries.
 - Loosen the screw in the battery compartment door and remove the door. Remove the exhausted batteries and dispose properly.
 - Insert four, new AA (LR6) **alkaline** batteries.
 - Replace the battery compartment door and tighten the screw. Do not over-tighten.
 - If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch (turtle's tail) off and back on.
 - When sounds/lights become faint or stop, it's time for an adult to change the batteries.

 3 Ways to Play!

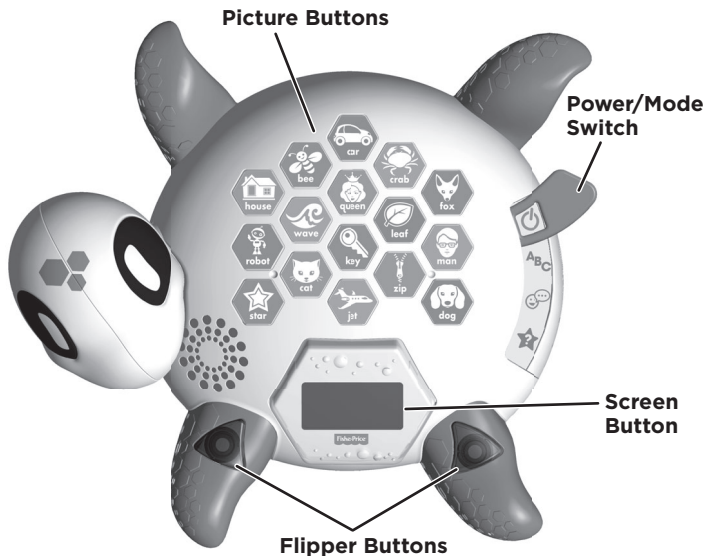

Slide turtle's tail up or down to turn ON or OFF or to choose a mode.



Power ON/OFF

Letters

Rhyme Time

 
Games

ABC Letters

Press any of these buttons

Press to repeat a question


Press for fun phrases and sound effects

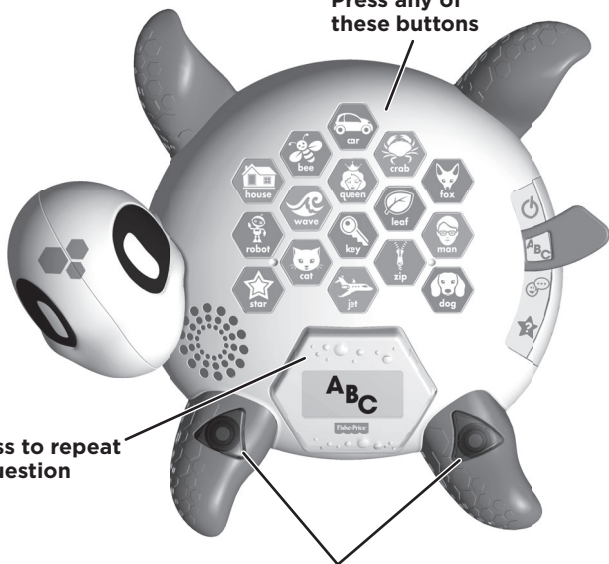

- Press any of the buttons on Turtle's shell. Turtle tells you what the picture is and the letter it begins with or how it's spelled.
- Listen carefully to Turtle's question. Can you find the right word on Turtle's shell?



 Rhyme Time

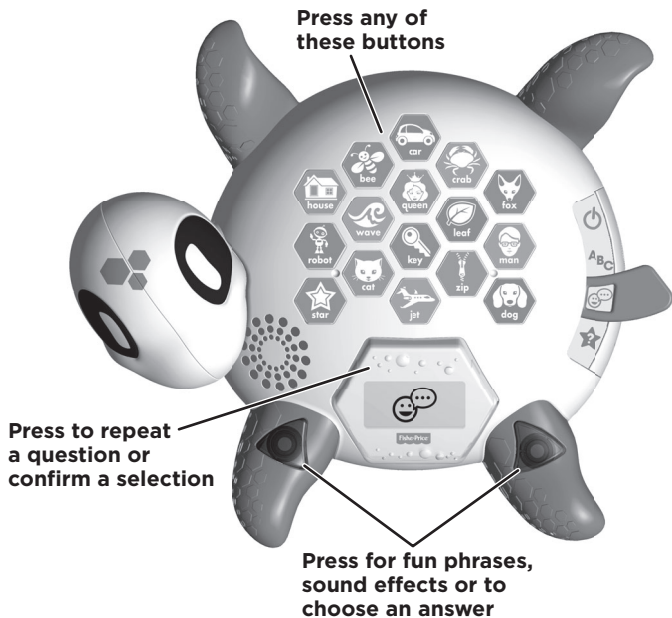

- In this mode, Turtle teaches rhyming. Listen carefully to Turtle's questions. Press a button on his shell or on his flippers to answer.

Here's what Turtle may ask:

- Listen for Turtle to give you a rhyming word. Find the word on his shell that rhymes with it.

OR

- Find all of the pictures that go together. Press the buttons on Turtle's shell. Did you find them all?

 
OR

- First choose a rhyming word on Turtle's shell. Listen carefully to the word Turtle thinks rhymes. Is he right? Press Turtle's flipper buttons to choose yes or no. Then press the screen button to confirm your selection.



Games

Press any of these buttons

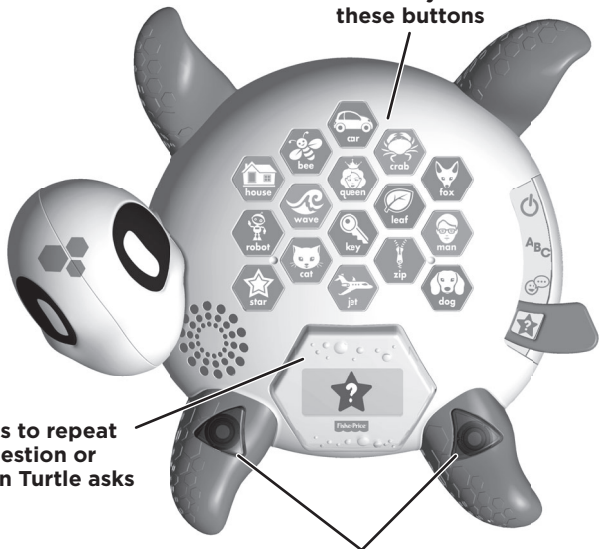

**Press to repeat
a question or
when Turtle asks**

**Press for fun screen images,
fun sounds or as fast as you
can in one of the games!**

- Listen for Turtle to ask you questions or tell you how to play a game. Ready? Press buttons on Turtle's shell, on his flippers or the screen. Or get up and move!

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Statement

(UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Godel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Auckland.



Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.