




TO PLAY

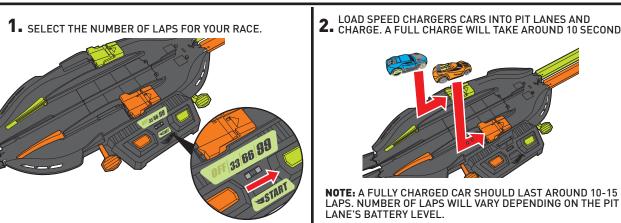


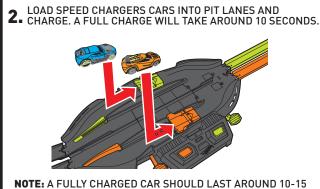


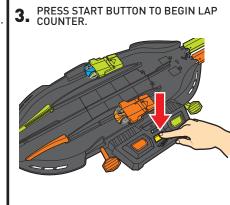

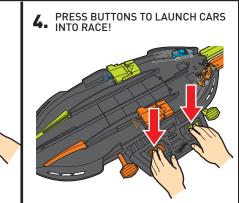

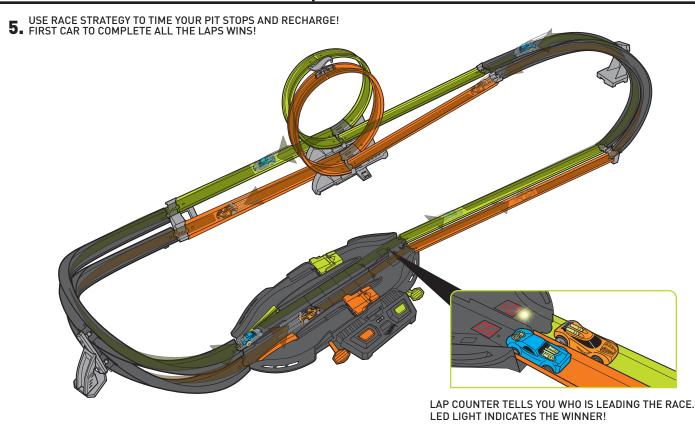

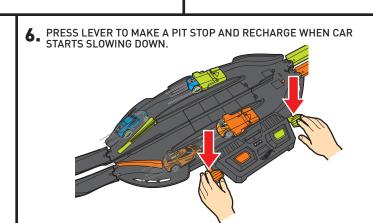


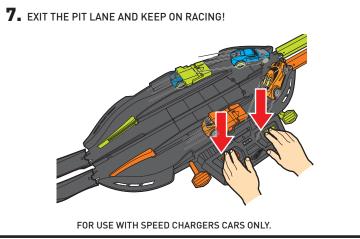


PERFORMANCE TIPS


charging your car.

 Q: Why can't my car fully enter the pit lane to recharge? A: Your car might be traveling too fast when it enters the pit lane. Push your car forward into the pit lane to continue



  - Q. My car keeps crashing on the track for no reason. What is the problem?
- A. Clear all obstructions on the track. Adjust track side walls at each connection point.
- Q. My Speed Chargers car keeps slowing down by itself on the tracks even though it is charged.
- A. Lint may collect around your car's axles. This may cause the car to run slowly. Use tweezers or a toothpick to remove lint.





BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

Non-rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the product before being charged.

 Rechargeable batteries are only to be charged under adult supervision. • Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

• Do not mix old and new batteries. • Only batteries of the same or equivalent type as recommended are to be used.


 Batteries are to be inserted with the correct polarity. • Exhausted batteries are to be removed from the product.

• The supply terminals are not to be short-circuited. . Dispose of battery(ies) safely.

• Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste [2012/19/EU]. Check your local authority for recycling

INSTRUCTIONS

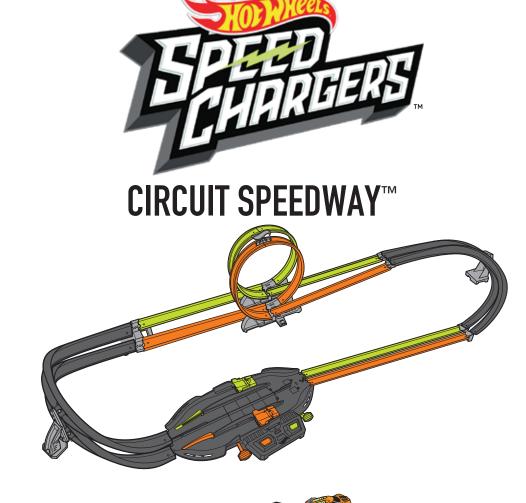




COLORS AND DECORATIONS MAY VARY.


service.mattel.com HOTWHEELS.com



CONTENTS

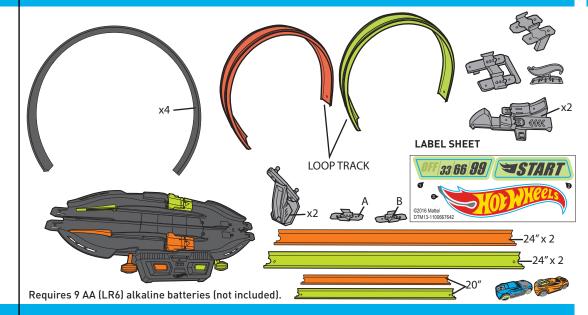


APPLY LABELS

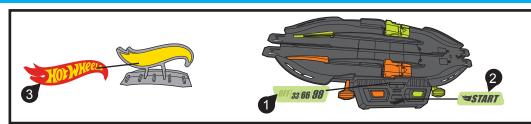

BATTERY INSTALLATION

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 9 AA (LR6) alkaline batteries (not included) in the orientation (+/-) shown.
- Replace battery cover and tighten screw. \bullet Replace the batteries in the top or bottom row when pit
- lane on that side can no longer charge cars. • Replace the batteries in the middle row when lap counter
- lights dim. For longer life use alkaline batteries. • When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and

re-install the batteries.

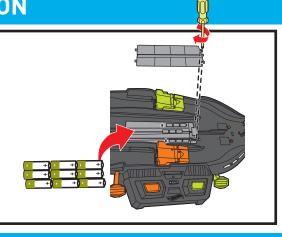

ASSEMBLY

LOOP TRACK

