

Fisher-Price®

DTM17



Keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver (not included).

Water or sand is needed to fill the base (not included).

IMPORTANT! Backboard height should be adjusted only by an adult.

fisher-price.com

Consumer Information

Care

- The frame and net may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse this toy.
- To prolong the life of the net, store this toy indoors.
- Do not leave this toy outside in freezing weather. Water left inside the base will freeze and possibly damage the base.
- This toy is for outdoor or indoor use. When bringing it inside, make sure to drain, rinse, and thoroughly dry first.
- We recommend indoor storage if this product will not be used for an extended period of time.
- Periodically check all fasteners regularly to be sure they are tight. If the fasteners are not tight, tighten them as necessary.
- Check plastic parts regularly and if broken or cracked, dispose of them properly.

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.


Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Parts



CAUTION


This package contains small parts. For adult assembly only.

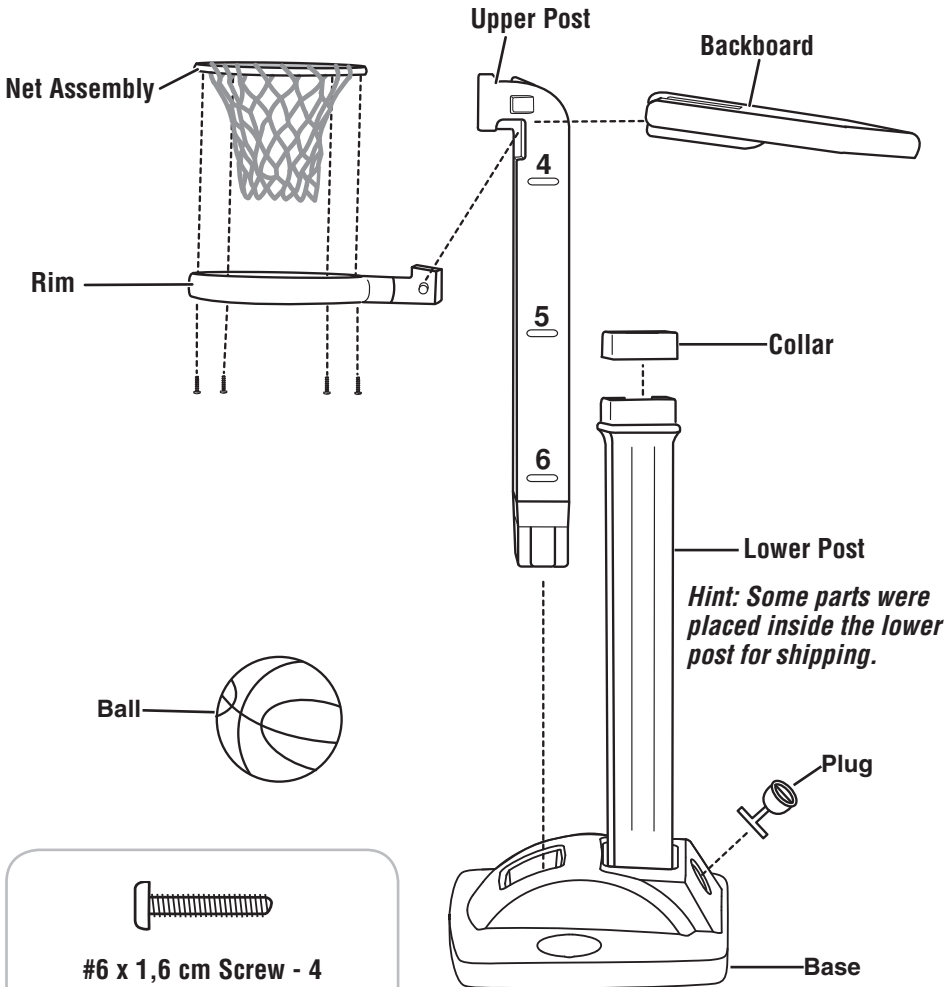

#6 x 1,6 cm Screw - 4
SHOWN ACTUAL SIZE



Note: Label not shown

Assembly

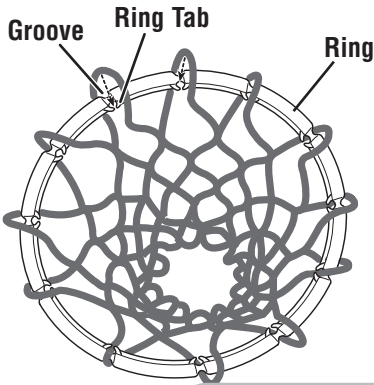


1

- Place the loops at the top of the net into the grooves on the ring.
- Pull each loop through a ring tab, as shown.

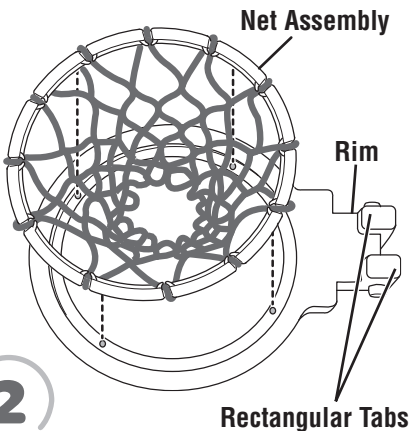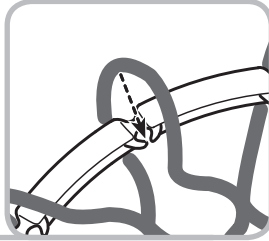


2

- Place the rim on a flat surface with the rectangular tabs facing up.
- Locate the four screw holes on the underside of the net assembly.
- Align the four screw holes on the underside of the net assembly with the four holes in the rim.
- Place the net assembly onto the rim.

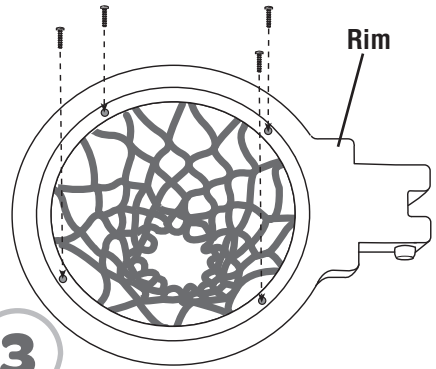

3


- While holding the ring assembly and rim together, turn them over.
- Insert four screws into the rim.
- Partially tighten the screws with a Phillips screwdriver. Turn the rim over to ensure that the net loops are still in the grooves and through the ring tabs before completely tightening the screws. Do not over-tighten the screws.

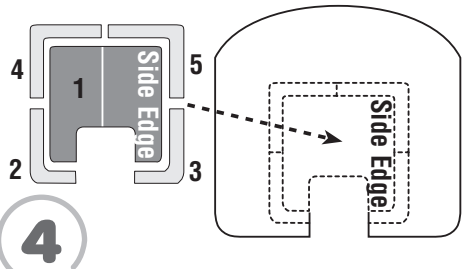

4


- Wipe the backboard with a clean, soft, dry cloth to remove any dust or oils.
- Peel the backing from one half of label 1. Do not remove all of the backing!
- Align the side edge of label 1 (where backing is removed) with the side edge of the label area on the backboard and apply.
- While rubbing the label in place, continue to peel the backing from the other half of the label.
- Apply the remaining labels to the backboard. Labels 2-5 are designed to overlap.
- Dispose of the label backings properly.

Assembly

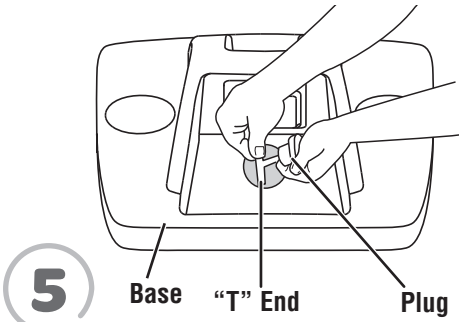

- Bend the “T” end of the plug and insert it into the hole in the base.


Note: After assembly is complete, fill the base with water or approximately 50 lbs. (22,7 kg) of sand (water and sand not included) to keep this product stationary. Simply lift the plug, fill the base, and replace the plug.

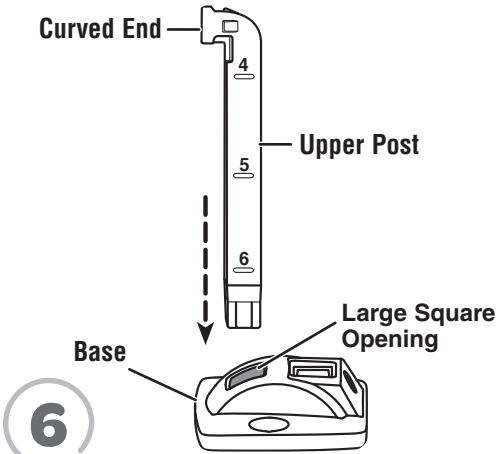


- Position the base as shown.
- Position the upper post so that the straight end is down and the curved end is up and facing away from the base.

Hint: For easier assembly, apply liquid soap or rub a candle or bar soap around the bottom of the upper post (especially on the corners) and the inside of the large square opening. If assembling inside, place a tarp under the base to protect the floor surface.

- Insert the upper post into the large square opening in the base and, using a circular motion, push it all the way down.

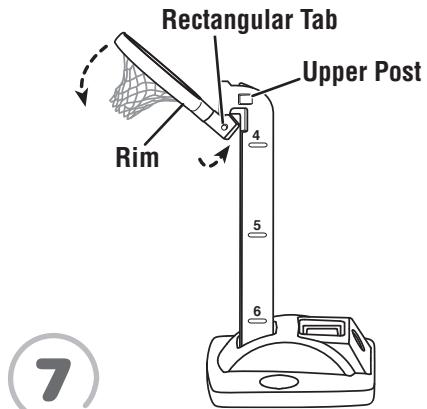

- Hook the rectangular tab on each side of the rim to the upper post, as shown.
- Rotate the rim down until it snaps into place on the upper post. Push down on the rim to be sure it is secure.


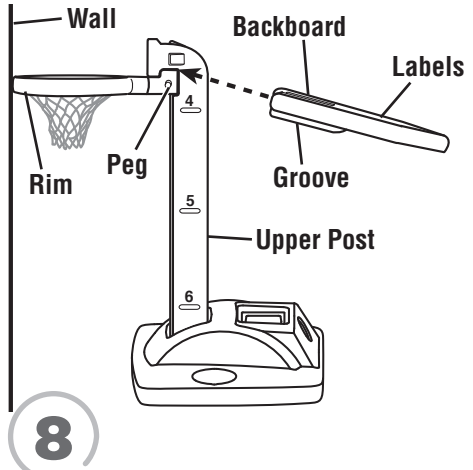


- Lean the rim against a wall for support.
- Locate the pegs on each side of the rim and the grooves on the backboard.
- Position the backboard with the label side facing up.
- Place your foot on the base to hold it steady and slide the backboard onto the upper post at an angle, as far as it will go.

Note: There should be no gap between the upper post and the backboard.

- Move the assembly away from the wall.


Assembly

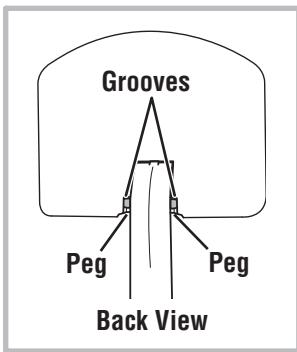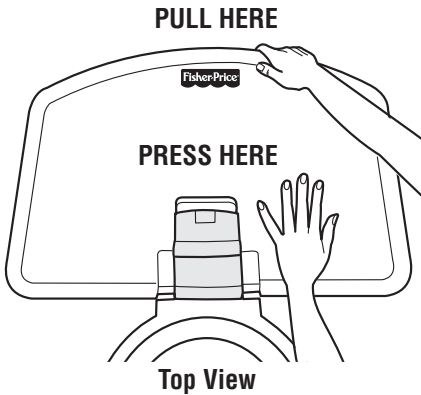

9

- Place your foot on the base to hold it steady.
- Press down firmly on the lower backboard while rotating the backboard up.
- When properly assembled, the pegs on the upper post rest in the grooves in the backboard, as shown.

Note: The height of the rim is 3 feet (1 m) as assembled.

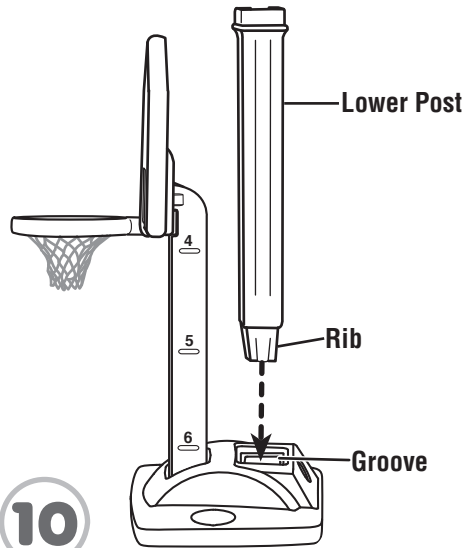


10

IMPORTANT! Assembly of the lower post to the base is a permanent assembly.

- Align the rib on the bottom of the lower post with the groove in the opening in the base.

Hint: For easier assembly, apply a small amount of liquid soap around the bottom of the post. If assembling indoors, place a tarp under the base to protect the floor surface.

- Push down on the lower post, using a circular motion, until it snaps into place.

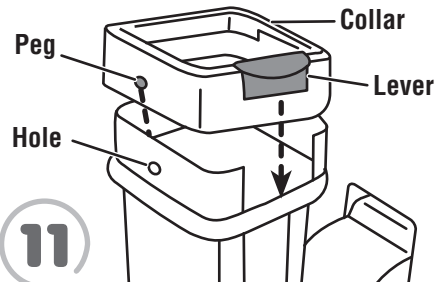


11

Note: The collar may be factory assembled.


- Align the lever on the side of the collar with the notch in the top of the lower post.
- Fit the collar onto the lower post, making sure the peg on each side of the collar snaps into the hole on each side of the post.

Adjusting Rim Height

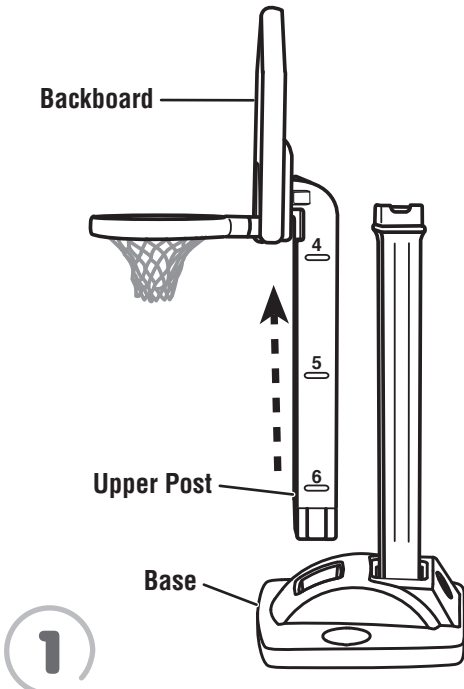


- As assembled, the rim height is 3 feet (1 m).
- To raise the rim height to 4, 5 or 6 feet (1,2 m, 1,5 m or 1,8 m), place your foot on the base and pull up on the backboard with both hands to remove the upper post from the base. You may need to rock the upper post to loosen it from the base.

IMPORTANT! Since this may require a lot of force, DO NOT stand with your face or chest above the backboard.

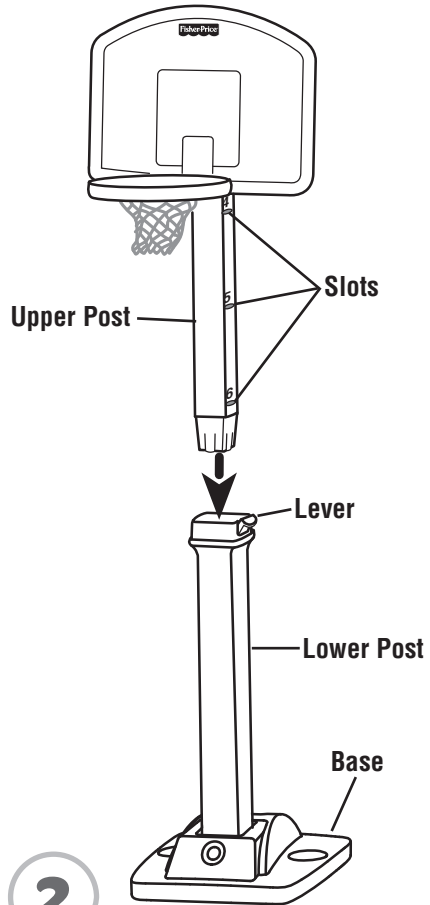


- Pull the lever on the lower post down.
- Insert the upper post into the lower post.
- Push the lever into one of the slots on the side of the upper post at the desired height.

Adjusting Rim Height

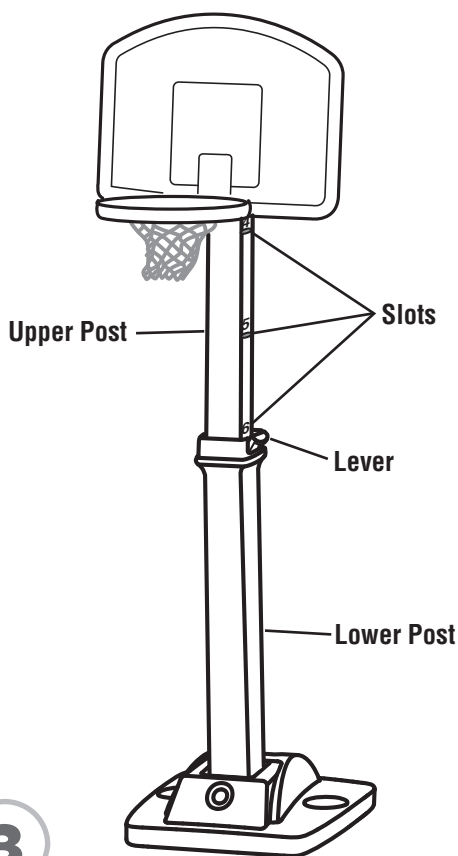

- **To lower the rim height:** while holding the upper post, push the lever on the lower post down. Lower the upper post and push the lever into the slot at 4 or 5 feet (1,2 m or 1,5 m).
- **To raise the rim height:** simply lift the upper post and push the lever into the slot at 5 or 6 feet (1,5 m or 1,8 m).

Maintenance

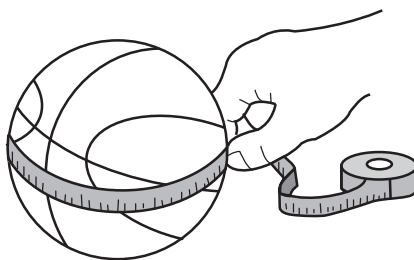

- This toy includes an inflatable ball. If the ball becomes soft, inflate it with a standard, manual air pump with a standard air needle.
- The ball will contain the correct amount of air when its circumference measures about 21-22 inches (53-56 cm). Measure the circumference of the ball with a tape measure or with a piece of string cut 21-22 inches (53-56 cm) long. Do not over-inflate the ball.