



Product features and decoration may vary from the photograph above.

Keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

This toy can be used indoors or outdoors.

Water is needed to fill the base for outdoor use.

IMPORTANT! Rim height should be adjusted only by an adult.

fisher-price.com

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:


Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

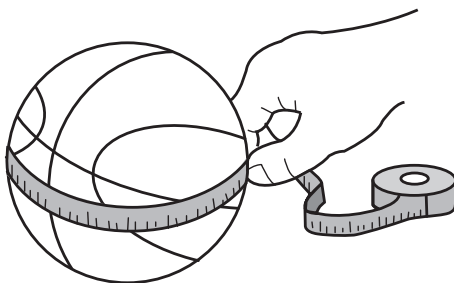

- This toy includes an inflatable ball. If the ball becomes soft, inflate it with a standard, hand-operated air pump with a standard air needle (both not included).
- The ball will contain the correct amount of air when its circumference measures 21 to 22 inches (53 to 56 cm). Measure the circumference of the ball with a tape measure or with a piece of string cut 21 to 22 inches (53 to 56 cm) long. Do not over-inflate the ball.

Care and Maintenance

- Wipe with a clean, damp cloth. Be sure to remove soap residue.
- Do not immerse this product.
- Do not leave this toy outside in freezing weather. Water left inside the base will freeze and possibly damage the base.
- This toy is for outdoor or indoor use. When bringing it inside, be sure to drain, rinse, and thoroughly dry first.
- Check all fasteners regularly to be sure they are tight. If the fasteners are not tight, tighten them as necessary.
- Check plastic parts regularly and if broken or cracked, dispose of them properly.
- We recommend storing this product indoors if it will not be used for an extended period of time.

Assembled Parts

Hint: Some parts were placed inside the lower post for shipping.



Backboard



Net/Ring Assembly



Upper Post



Lower Post



Rim



Sure Score™ Rim



Base



#6 x 1/2" (1,3 cm) Screw - 4



#8 x 3/4" (1,9 cm) Screw - 4

BOTH SHOWN ACTUAL SIZE

Note: Tighten all screws with a Phillips screwdriver. Do not over-tighten the screws.


Note: Label sheet not shown.

Assembly



CAUTION


This package contains small parts. For adult assembly only.

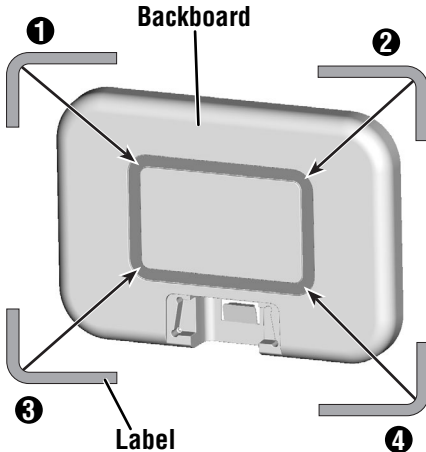

1


For best results, avoid repositioning a label once it has been applied to the backboard.

- Carefully peel a label from the label sheet and attach it to the backboard, as shown.
- Smooth out the label to remove any air bubbles.
- Repeat this procedure to apply the remaining labels to the backboard.

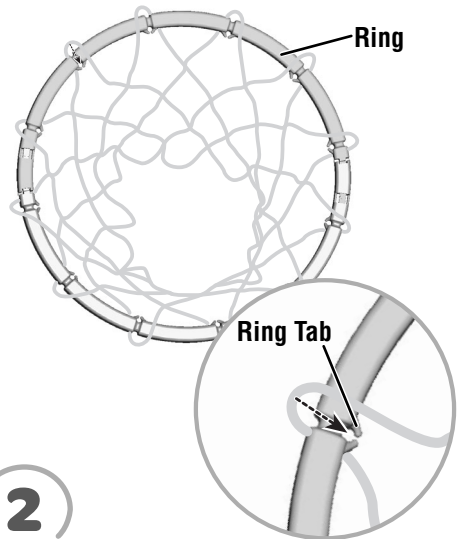

2


- Place the loops at the top of the net into the grooves on the ring.
- Pull each loop through a ring tab, as shown.

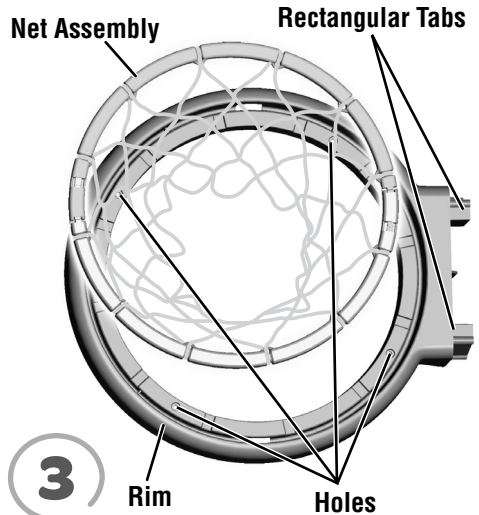

3

- Place the rim on a flat surface with the rectangular tabs facing up.
- Locate the four holes in the underside of the net assembly. Align the four holes in the underside of the net assembly with the four holes in the rim.
- Place the net assembly onto the rim.


Assembly

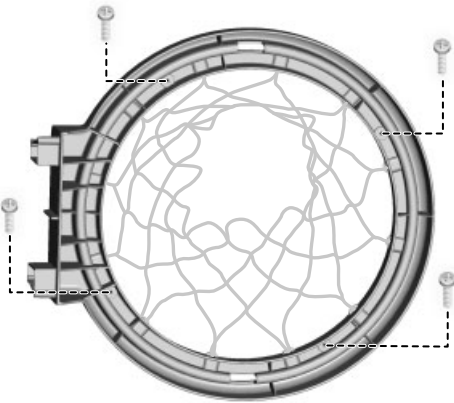

4




- While holding the ring assembly and rim together, turn them over.
- Insert four #6 x ½" (1,3 cm) screws into the holes in the rim, making sure each hole in the rim is still aligned with each screw hole in the net assembly.
- Partially tighten the screws. Next, turn the rim over to ensure that the net loops are still in the grooves and through the ring tabs. Then, fully tighten the screws.

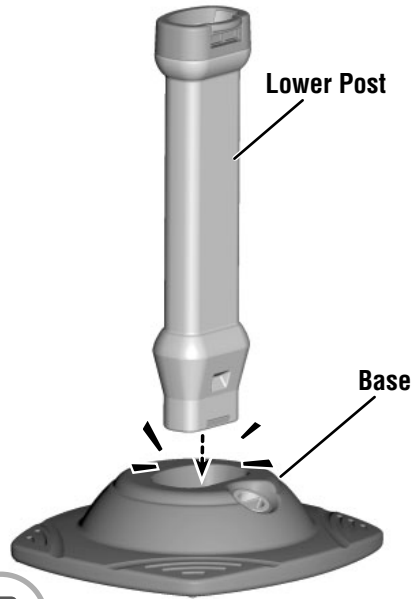


5

- Insert and "snap" the lower post into the base.


Assembly

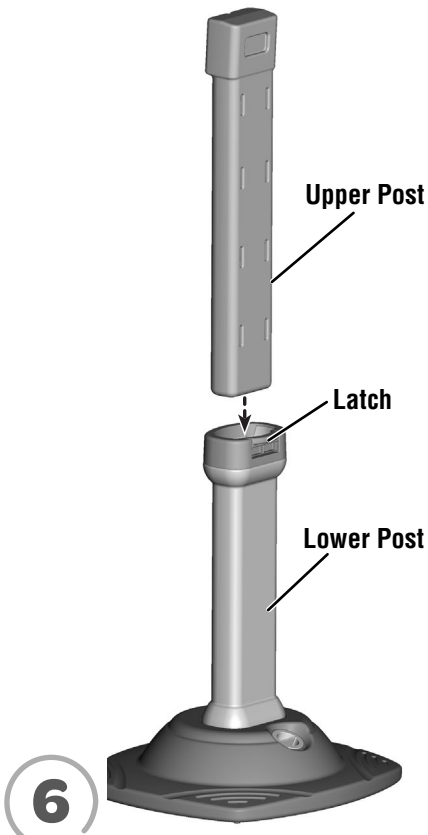

- Flip down the latch on the lower post.
- Insert the upper post into the lower post.

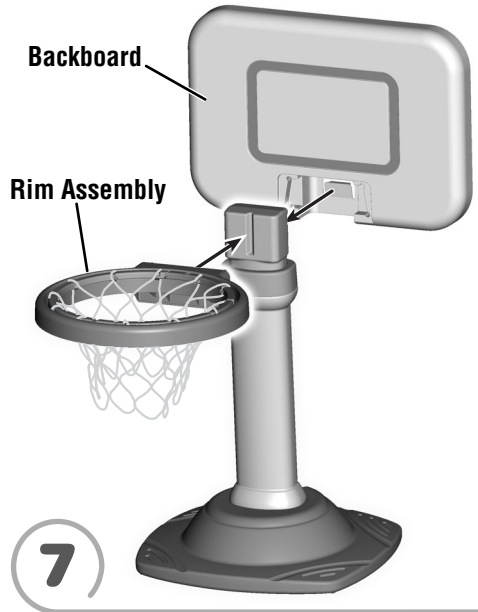

- Attach the rim assembly and backboard to the upper post.

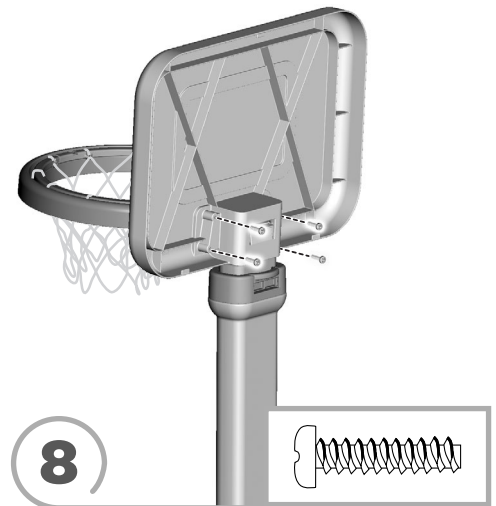

- Insert four #8 x $\frac{3}{4}$ " (1,9 cm) screws into the holes on the back side of the backboard. Tighten the screws.


Assembly

Sure Score™ Rim

Rim Assembly

9

- “Snap” the Sure Score™ rim onto the rim assembly.

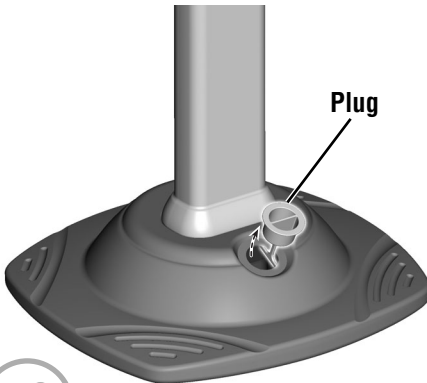



Plug

10

- After assembly is complete, fill the base with water for outdoor use to keep this product stationary. Simply lift the plug, fill the base and replace the plug. Be sure to drain, rinse, and thoroughly dry the base before indoor use.

Adjusting the Rim Height

IMPORTANT! Rim height should only be adjusted by an adult. Also, make sure children are not standing below the rim when adjusting the rim height.

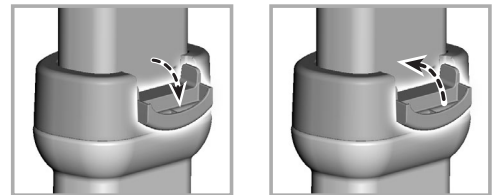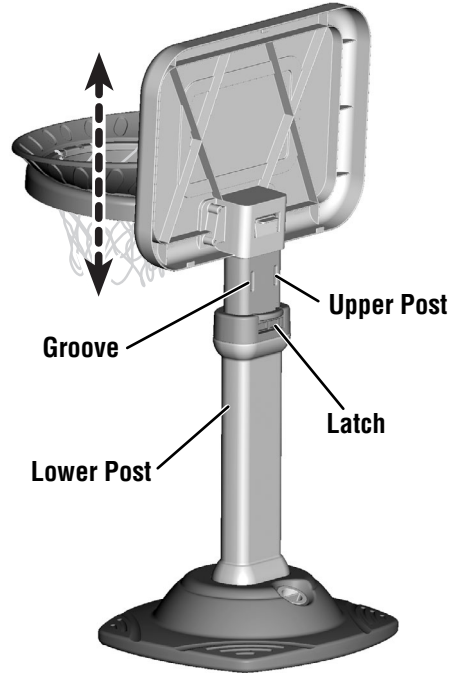

- **To lower the rim height:** While holding the upper post, flip the latch on the lower post down. Lower the upper post and flip the latch into the groove to secure in place.
- **To raise the rim height:** While holding the upper post, flip the latch on the lower post down. Then, lift the upper post and flip the latch into the groove to secure in place.

Let's Play!




- Sure Score™ rim guides the ball to the basket.



- Remove the Sure Score™ rim to add more challenge!

Storage

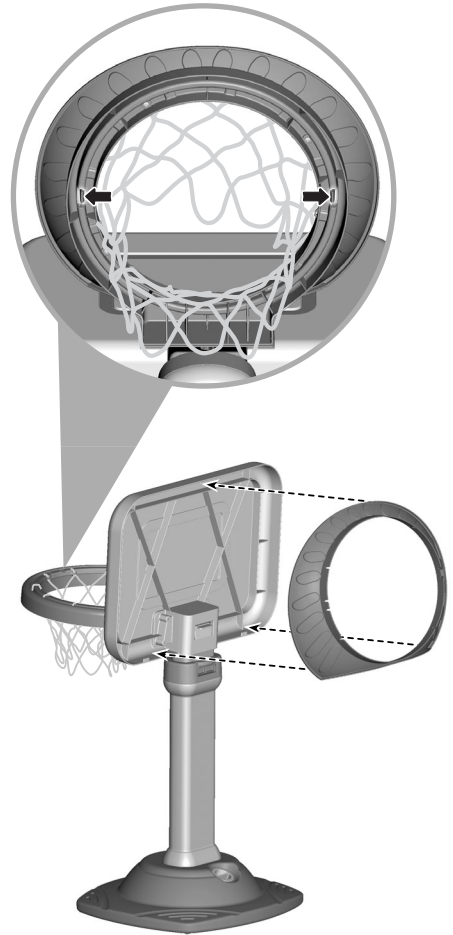

- Press the tabs on the bottom of the rim assembly to remove the Sure Score™ rim.
- Store the Sure Score™ rim behind the backboard.