

Bob
THE BUILDER

SWITCH & FIX BOB

Keep these instructions for future reference as they contain important information.

WHAT'S INCLUDED



x1



x1



x1



x1



x1



HELPFUL HINTS

When selecting a tool, rotate the belt so the tool loop clicks into place.

The 3 tools are made to fit in the tool loops (and Bob's free hand) in one specific orientation. When manually attaching tools, align the tool properly and slide into place.

ASSEMBLY



Attach the welding mask to Bob's helmet (mask is removable).



Align each tool with a belt loop and slide into place.

HOW TO PLAY



Each tool can fit in Bob's free hand. Ensure the tool is aligned properly.



Welding mask is adjustable.

HOW TO PLAY

1



Rotate Bob's belt to select a tool (belt rotates in either direction).

2



**LIGHTS & PHRASES WHEN
HELMET IS PRESSED**

Press down on Bob's helmet so his arm lowers and the selected tool clicks into place, then release.

3



Press the tool to a surface for lights & sounds.


4




To unload, ensure the empty spot on Bob's tool belt is selected. Press down on Bob's helmet so it detaches, then release.

BATTERY INSTALLATION:

Unscrew and lift away cover from back of helmet. Replace batteries as indicated inside the battery compartment. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 3 "AG13" (LR44) batteries.

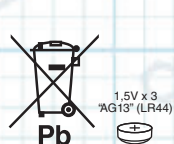

REQUIRED TOOL:
PHILLIPS SCREWDRIVER
(NOT INCLUDED).

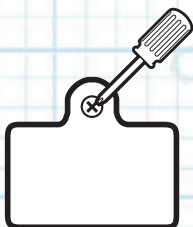

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

TROUBLESHOOTING

SYMPTOM

SOLUTION

Tool does not attach to belt

The tools are made to fit in only one specific orientation. Make sure the belt is clicked into place and that the tool is properly aligned with the tool loop on the belt.

Tool does not attach to Bob's tool hand

Rotate the belt so the belt loop clicks into place. You will know when the tool loops are aligned properly when they click into place.

Tool does not fit into Bob's free hand

The tools are made to fit in only one specific orientation. Make sure the tool is properly aligned with the opening in Bob's hand.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gonde 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.



©2016 HIT Entertainment Limited and Keith Chapman.
The Bob the Builder name and character, related characters
and logo are trademarks of HIT Entertainment Limited.

©2016 HIT Entertainment Limited.

HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2016 Mattel. All Rights Reserved. * and ™ designate U.S. trademarks of
Mattel, except as noted. **PRINTED IN CHINA.**
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

DTP37-0970
1101365794-DOM

For videos, activities and more, visit:
WWW.BOBTHEBUILDER.COM

Fisher-Price®

fisher-price.com

DTP37

