
## **BATTERY INSTALLATION**

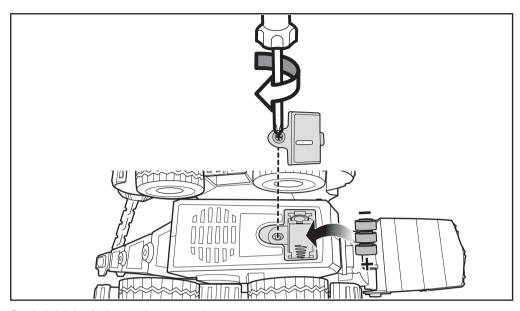

- · Batteries included are for demonstration purposes only.
- · Replace the batteries if sounds distort.
- . Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new button cell (AG13, LR44) batteries in the orientation (+/-) shown.
- · Replace battery cover and tighten screw.
- For longer life, use alkaline batteries.

## **BATTERY SAFETY INFORMATION**

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- •Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- . Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- . Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.



Please keep these instructions for future reference as they contain important information.

## **CONTENTS**

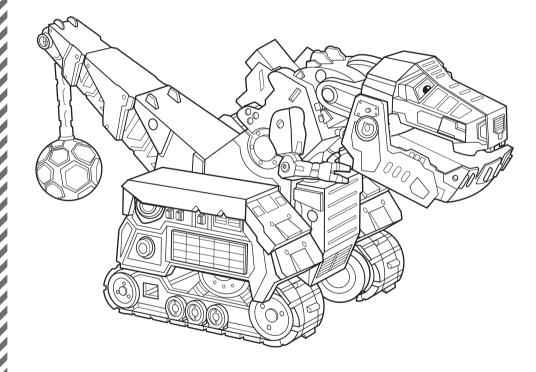

©2016 Mattel. All Rights Reserved. ® and Mesignate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.










Dinotrux © 2017 DreamWorks Animation LLC. All Rights Reserved.

## TO PLAY

 A. Push tail down to activate battle armor, chomping action and sounds!

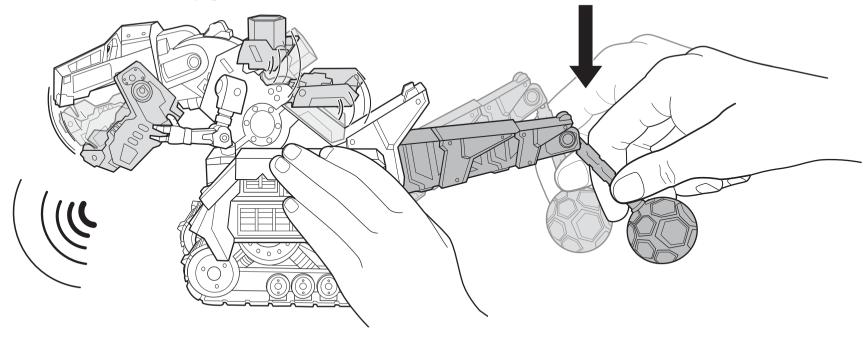



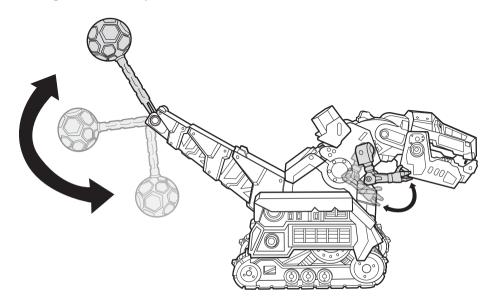

C. Attach Revvit or other reptools (sold separately).

