


Ceyser Blast Playset


Keep these instructions for future reference as they contain important information.

DXY84-0970 1101163244-DOM


WHAT'S INCLUDED

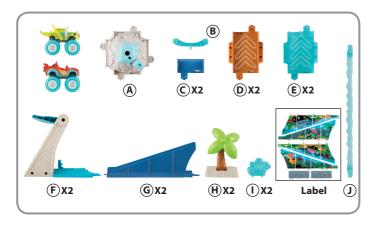


LABEL PLACEMENT

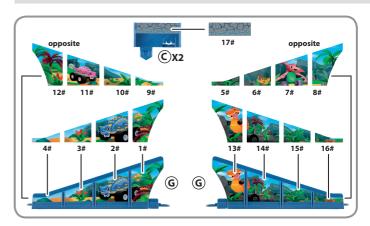



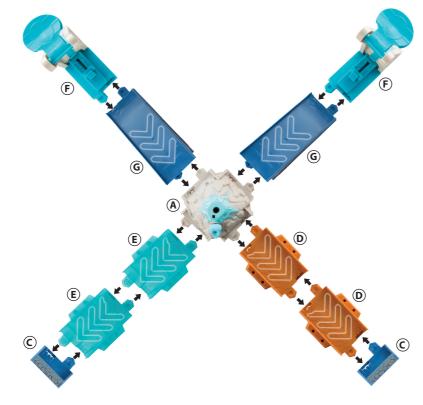

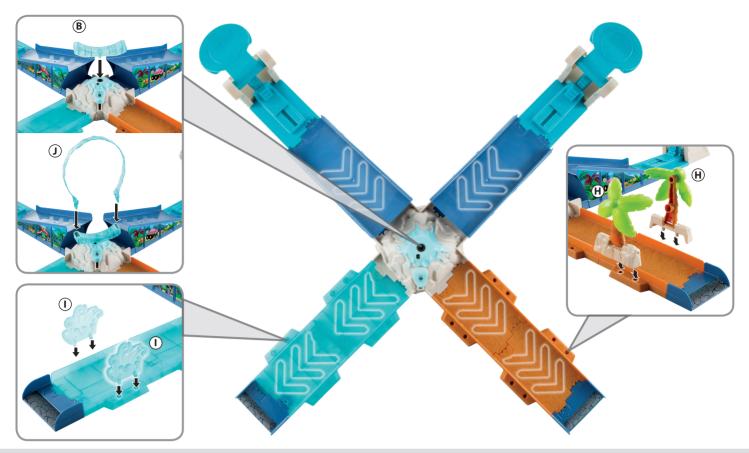

HOW TO PLAY



1. Load the vehicle into the launcher.



2. Set the trees up as shown.



3. Slide the rock-shaped button down and release to cause the ring of water to start spinning. The more you press, the longer it spins.



4. Slam down on the back of the launcher with your fist to race.



5. Launch the vehicle through the ring of water!



6. The vehicle knocks down the trees.



7. You can load and launch 2 vehicles at one time.

© 2016 Viacom International Inc. All Rights Reserved. Nickelodeon, Blaze and the Monster Machines and all related titles, logos and characters are trademarks of Viacom International Inc.

©2016 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA**.

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.

www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



ADULT ASSEMBLY REQUIRED.

No tools needed.

