



SUNNY'S FAN-TASTIC SALON

INSTRUCTIONS


Keep these instructions for future reference as they contain important information.



Adult assembly required.

Tool needed:
Phillips screwdriver
(not included).

ASSEMBLY PARTS

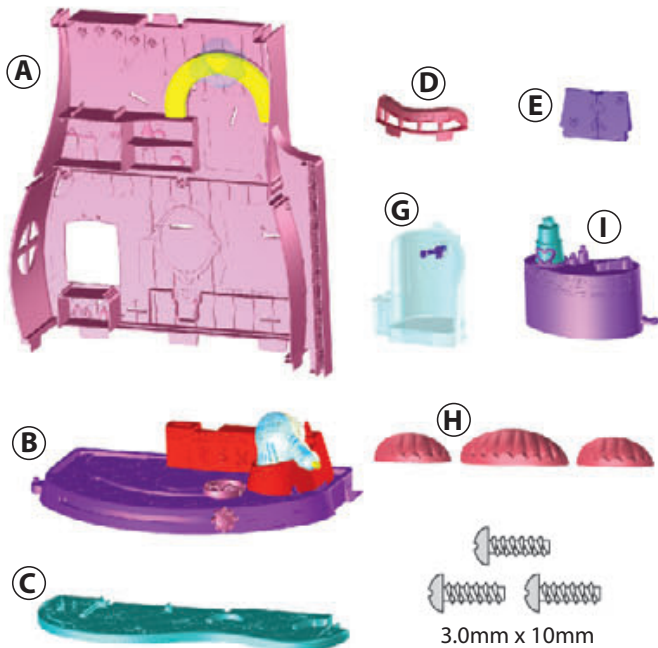

DYD12




ADDITIONAL PLAY PIECES




LABEL PLACEMENT

Add labels to the playset using the corresponding numbers on the label sheet (included).

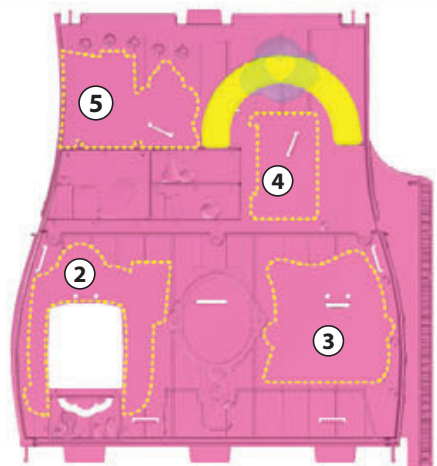


ASSEMBLY


★ **NOTE:** Steps marked with a star are "one-time snaps". Press firmly until each part clicks into place. Once these pieces are snapped together, they cannot be taken apart.

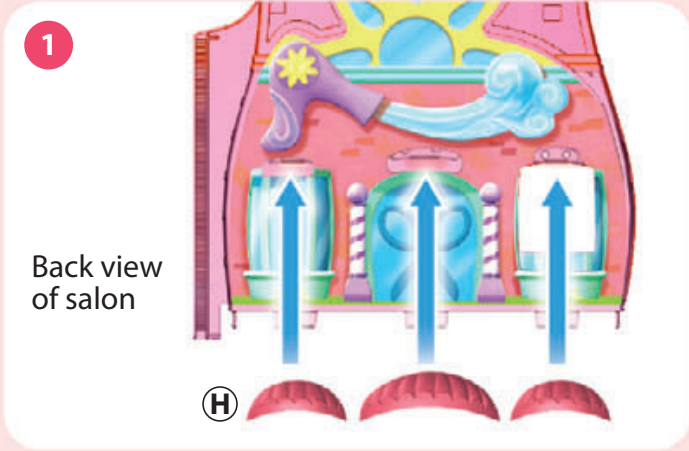


Insert the awning pieces to the front of the salon until they snap into place.

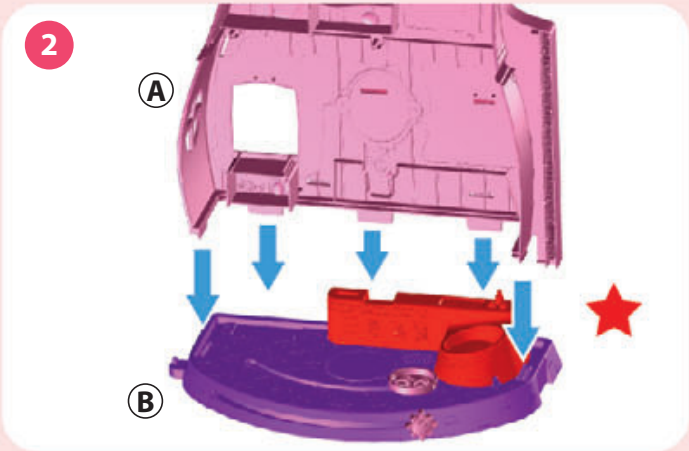


Insert the pink body into the purple base until it snaps into place.

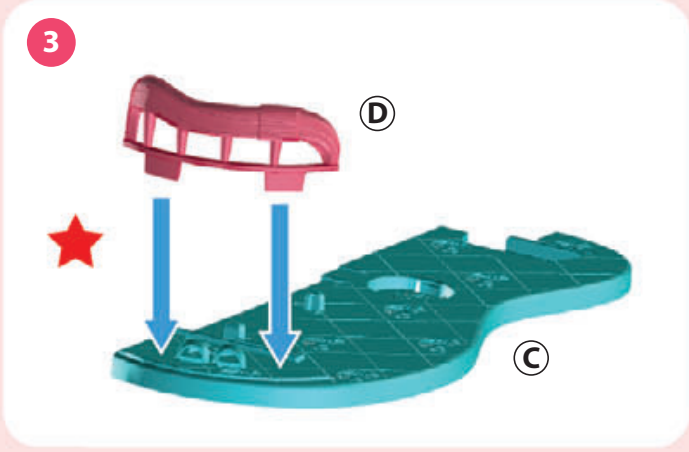


Insert the terrace into the floor piece until it snaps into place.

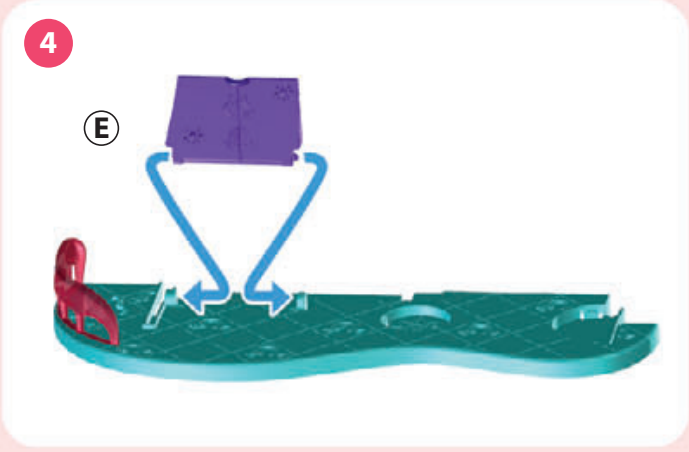

Insert the drawer piece into the floor until it snaps into place.

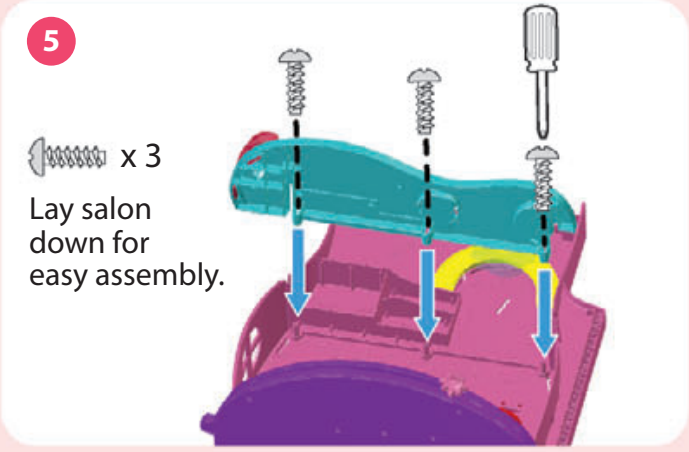


Insert the blue floor piece and fasten into place with the included screws (Phillips screwdriver needed).

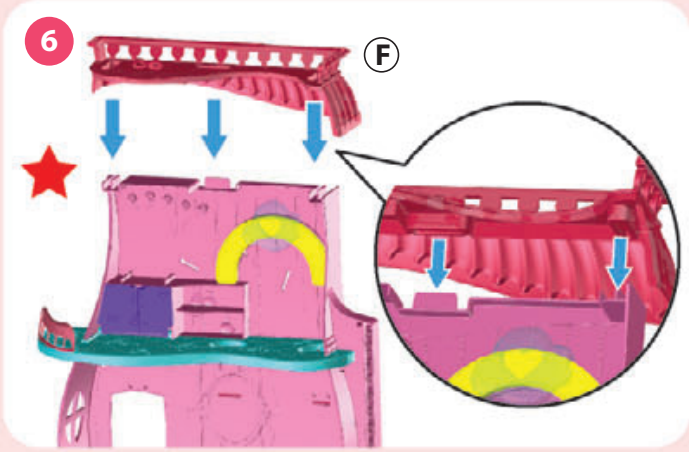

Insert the roof piece into the top of the salon until it snaps into place.




To attach the elevator, lift the base, align the elevator and slide through.

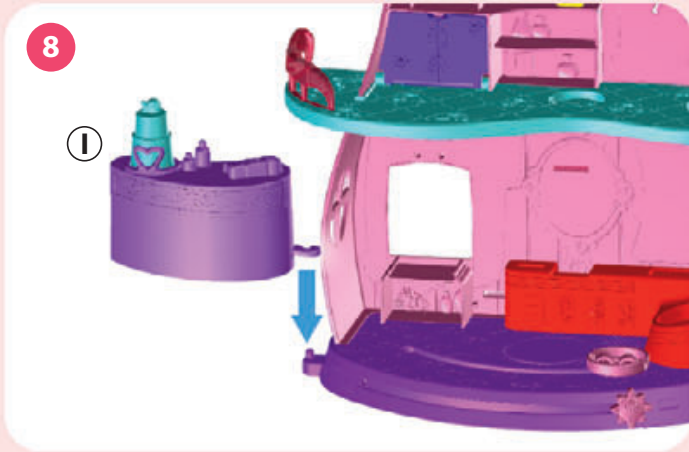

Blair's station can attach to the salon or be played with independently.

BEFORE YOU PLAY

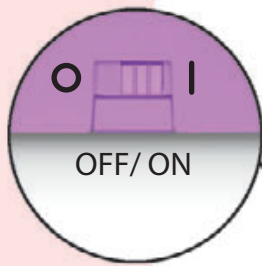

Insert batteries before turning the salon on.

HOW TO POP-IN STYLE

Sunny has 9 pop-in spots on her head. Other pop-in spots can be found throughout the salon playset (see How to Play section).

 


BATTERY INFORMATION


BATTERY INSTALLATION:

Unscrew and lift away cover from bottom of product.
Install batteries as indicated inside the battery compartment.
For longer life use only alkaline batteries.
If the product begins to malfunction, check the battery installation.
You may need to reset the electronics by removing the batteries and reinstalling them.
If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries.

Requires 3 "AA" (LR6) batteries.



BATTERIES ARE NOT INCLUDED.

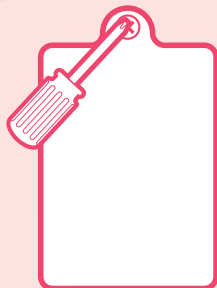

**REQUIRED TOOL:
PHILLIPS SCREWDRIVER
(NOT INCLUDED).**

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Consult the dealer or an experienced radio/TV technician for help.
- NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

HOW TO PLAY



HOW TO POP-IN STYLE



Plug Pop-In accessories into 30 Pop-In spots. Accessories pop right in!



©2018 Viacom International Inc. All Rights Reserved. Nickelodeon, Sunny Day and all related titles, logos and characters are trademarks of Viacom International Inc.
 Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 13, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

WARNING:
 CHOKING HAZARD - Small parts.
 Not for children under 3 years.