nickelodeon.



## Magic Carpet Adventure


Keep these instructions for future reference as they contain important information.



ADULT ASSEMBLY REQUIRED.

No tools needed.

## **WHAT'S INCLUDED**

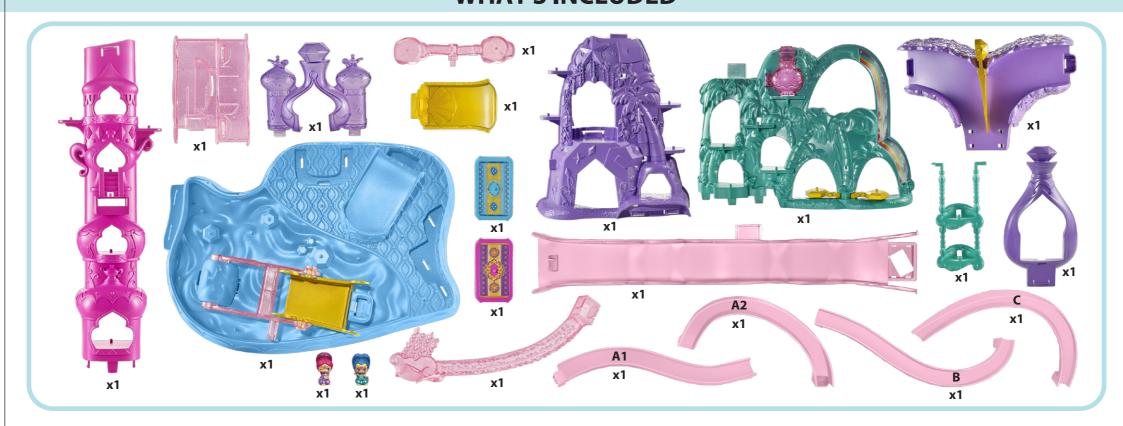

## **ASSEMBLY**



## **HOW TO PLAY**



Push carpet to see genie slide down to the magical cloud track!



Carpet really floats on magical cloud track!



Choose the path!



Lift to take the genie on a gondola ride!



Play on the swing!



Play on the seesaw!



Spin the genies.



Hide a genie inside!



Spin the genies!



This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.

 $\ensuremath{\text{@}}$  2017 Viacom International Inc. All Rights Reserved. Nickelodeon, Shimmer and Shine, Teenie Genies and all related titles, logos and characters are trademarks of Viacom International Inc.

©2017 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



DYW01-0970-G1 1101444577-DOM



Side 1	Side 2	Fold
COVER		COVER

Date