



Ages
8+

T5482-0920

EZ Scrapbook Maker

YOUR PICS. YOUR LIFE. YOUR STYLE.

Making a scrapbook has never been so easy! You'll find tons of cute digital stickers, exciting backgrounds, cool fonts and great colors, all easy-to-use with the click of a mouse! Then print, place them in your scrapbook album, and decorate with the markers and reusable sticker. You'll turn your plain old pics into a cool keepsake to show off to friends and family!

INSTRUCTION MANUAL

Keep these instructions for future reference as they contain important information.

CONTENTS

- 1 Installation Software CD
- 1 Scrapbook Album
- 4 Markers
- 3 Sticker Sheets



Please remove all components from the container and compare them to the contents list. If any items are missing, please call 1-800-803-9611. Outside the U.S., please consult the listing of your local Mattel offices at the end of these instructions.

Note:

- Only use the washable markers that come with the toy.
- Recap markers after use.
- Markers may stain some surfaces. Protect play area before use.

INSTALLATION

- Insert the Installation CD into the CD-ROM drive of your PC.
- Follow the installation prompts that appear on your screen.
- At the end of installation, leave the "Run EZ Scrapbook Maker now" box checked and follow the prompt to launch the program.
- The first time you launch the application, you will be prompted to download it, which you must do in order to use the application. (NOTE: You need an Internet connection in order to download the application, but you will not need it to use the application).




QUICK START

- 1) When you open the application, first-time users will see a Welcome screen; all other times, the application opens in the Library.
- 2) In the Library you can open a new scrapbook or one you started previously.
 - Double-click the  sign to start a new scrapbook.
 - Double-click a thumbnail of a scrapbook cover to edit a current scrapbook.
- 3) When starting a new scrapbook, you will be prompted to type in your scrapbook name and a description. Then click "Create."
- 4) You will be taken to the "Edit Mode" where you can decorate and design your scrapbook using stickers, backgrounds, and your photos! All you have to do is drag and drop objects onto your pages!
- 5) You can also create text, choose font, and select from a rainbow of colors.
- 6) Roll your mouse over any icon and a pop-up will tell you what it is.
- 7) If you have any questions, or need more information as you design, click "Help." It's filled with lots of information and tips to help you create a fabulous scrapbook!




NEED MORE INFO?

Click the "HELP" icon at any time to get more detailed instructions, tips and trouble-shooting answers to your questions!

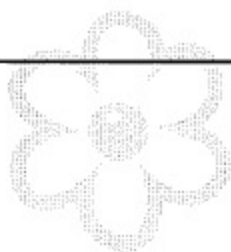


UNINSTALLING THE EZ SCRAPBOOK MAKER

 To uninstall, go to the Start menu on your PC. Open the Control Panel and select "Add or Remove Programs." Then select EZ Scrapbook Maker and click "Remove."

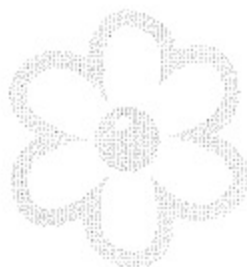

EDIT MODE

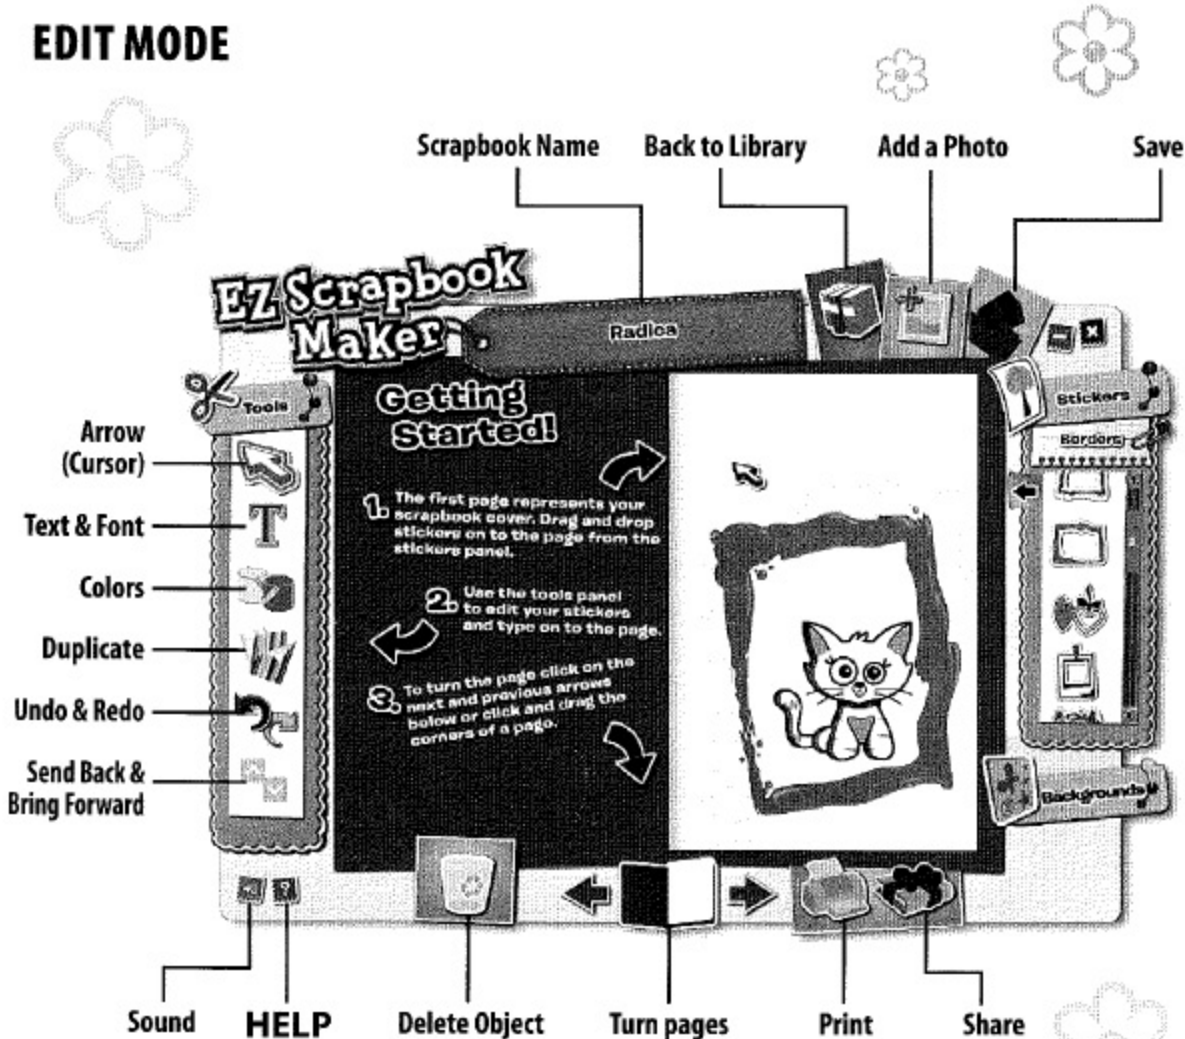 

PUTTING YOUR SCRAPBOOK TOGETHER

- 1) Print your pages.
- 2) Cut each along the dotted line.
- 3) Don't forget to use the markers and stickers to make your design even better!
- 4) Insert the pages into the pockets of the scrapbook album in the order you want them. (If you need more details on how to do this, click "Help.")
- 5) Share your scrapbook with friends and family. They'll be so impressed!
- 6) You can print out additional copies of your scrapbook to make paperback versions.
- 7) You can even click "share" to save a PDF of your scrapbook on your computer. Then you can email the PDF to family and friends. (You will need an email account and Internet access to do this. Please remember to never give out personal information—such as your name or address—by email or over the Internet.)

MINIMUM SYSTEM REQUIREMENTS

PC Specification:

Operating system: Windows XP / Vista / 7

(only 32 bit operating system are supported)

Processor: Intel® Pentium® 4 or AMD Athlon™ Dual-Core

Processor speed: 1.8Ghz

Memory: 1.5 GB RAM

Available HD space: 250mb available disk space

Graphics card: with 128 MB VRAM

Hardware peripherals:

CD-Rom drive required for installation

Keyboard and mouse

Recommended screen resolution: PC: 1024 x 768 pixels, 32 bit

Internet access: 56k Dialup (512k Cable/DSL recommended).

Internet access is required to install and update this application.



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963 / MARKERS CONFORM TO ASTM D4236.

© 2010 Mattel, Inc. All Rights Reserved.

RADICA USA Ltd. www.radicagames.com Helpline 1.800.803.9611 or service.mattel.com.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2.

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312 Mattel East Asia Ltd.,

Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Ditimprom & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe,

Persiaran Tropicana Golf Country Resort, 47410 PJ, Tel:03-78803817, Fax:03-78803867

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1.800.803.9611
(US and Canada only).

SERVICE.MATTEL.COM