



Keep these instructions for future reference as they contain important information.

The image displays 18 individual components for a train set, arranged in a grid-like fashion. Each component is shown with its corresponding label and quantity:
 

- YS X1**: A grey Y-shaped track switch.
- BS1 X1**: A small grey track component.
- S8 X1**: A small grey track component.
- S2 X1**: A long grey straight track section.
- CS X8**: A grey curved track section.
- X1**: A yellow train car.
- X1**: A blue and black steam locomotive.
- YS X1**: A grey Y-shaped track switch.
- X1**: A grey curved track section with a red center.
- X1**: An orange and yellow signal box.
- X2**: A green truss bridge.
- X1**: A large grey bridge with a blue arrow pointing right.
- TRS X1**: A grey T-shaped track switch.
- TU2 X1**: A grey track component with two wheels.
- X1**: A red square track component.
- X1**: A green rectangular track component.
- X1**: A large grey bridge with a blue arrow pointing right.
- X1**: A long orange track component.
- X1**: A curved orange track component.
- X1**: A small grey track component.
- X1**: A grey track component with a blue arrow pointing right.





## HELPFUL HINTS



Note: Some engines may not work on this track set.

**ADULT ASSEMBLY REQUIRED.**  
No tools needed.

# ASSEMBLY

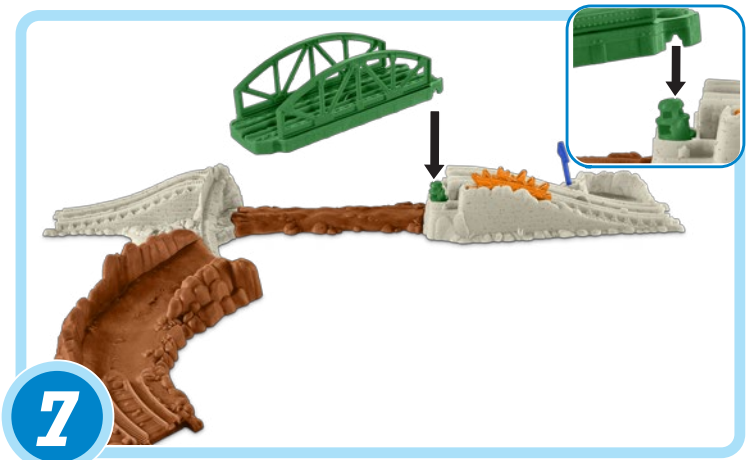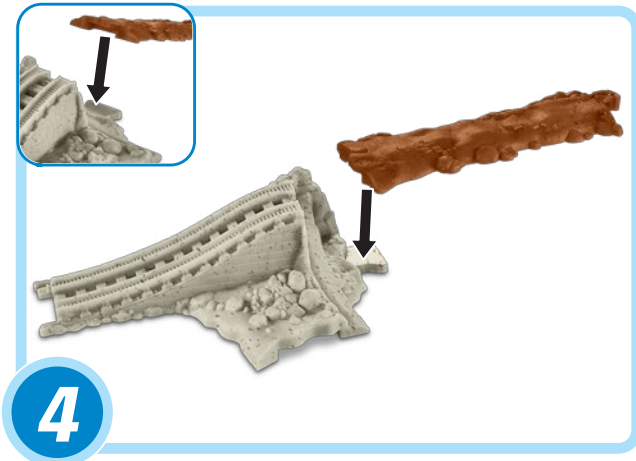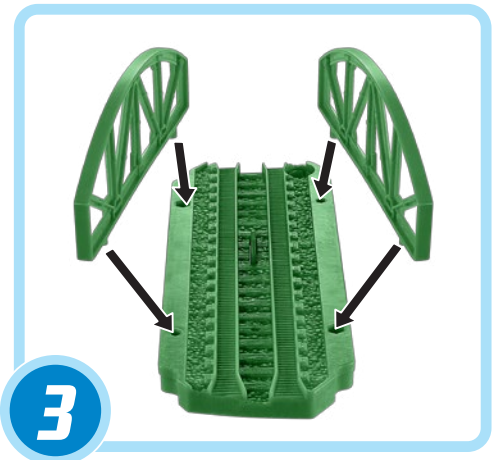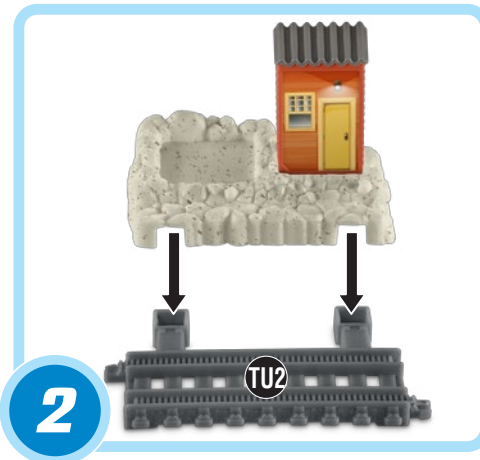

## BATTERY INFORMATION

### BATTERY INSTALLATION


Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries.

**Required tool: Phillips screwdriver (not included)**


### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

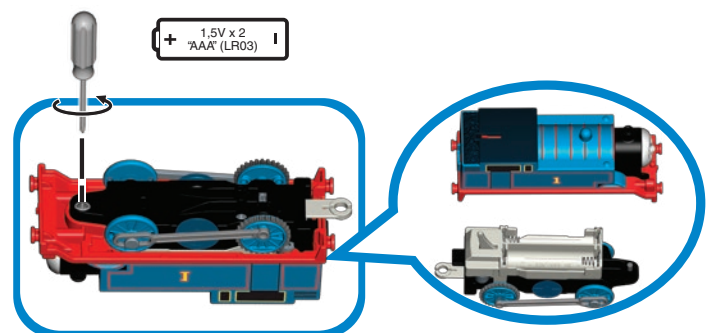

# TRACK LAYOUT

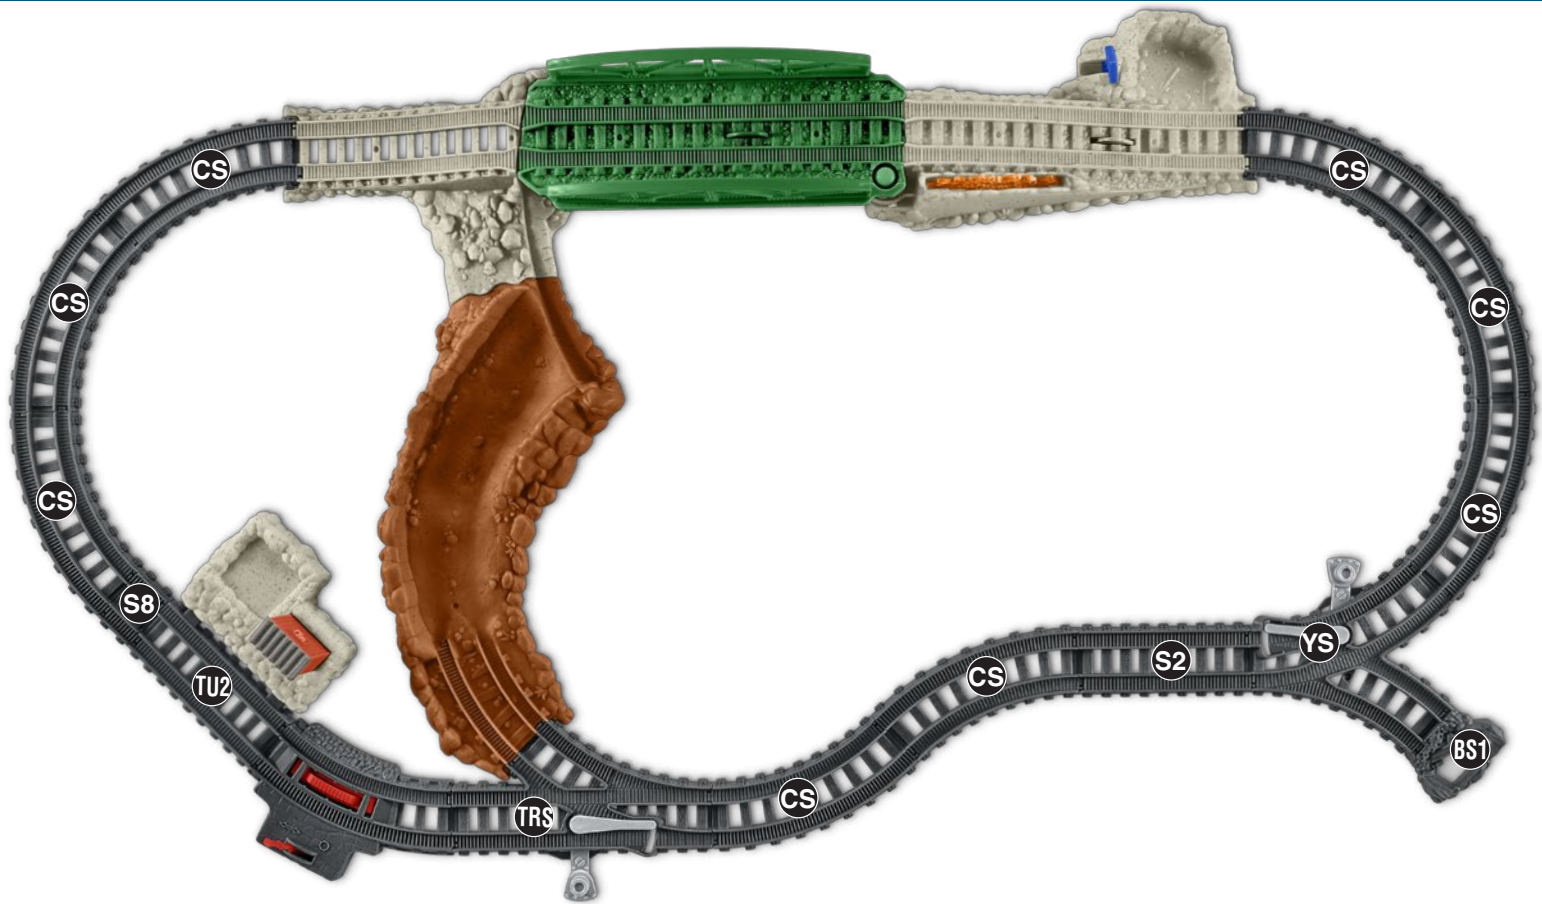


## BEFORE YOU PLAY

Set the stop-track to "stop".


Use the switch-track to control your engine's direction.

Store the crate of TNT next to the shed.

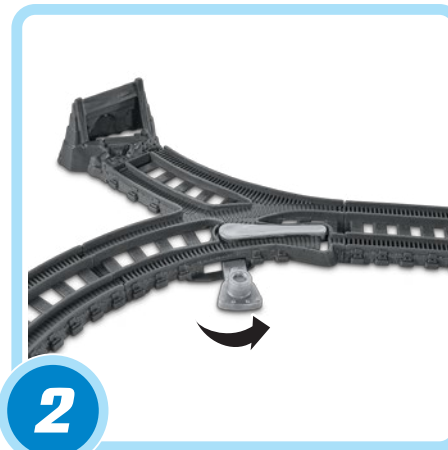

Connect and set the bridge, and push the flame down.

To make Thomas derail, push down the sign, or... To send Thomas safely across the bridge, place the sign in the upright position.

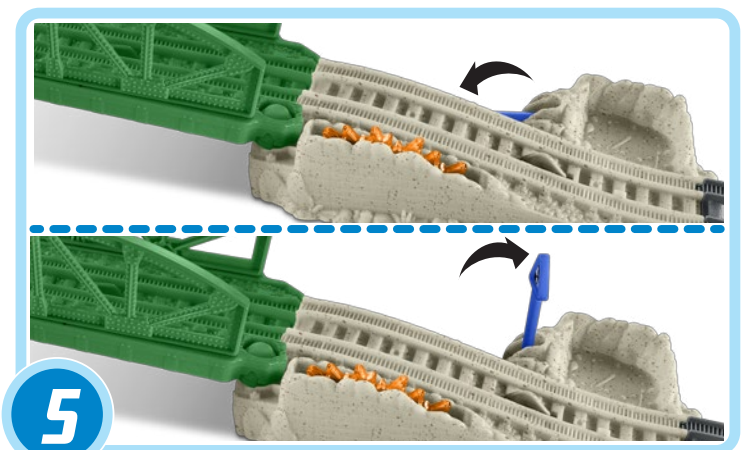


# HOW TO PLAY

The engine should move forward in the direction of the arrow.

Load the crate of TNT into the cargo car. Flip the switch and send Thomas forward.

The crate pops out of the cargo cart and the flame bursts up.

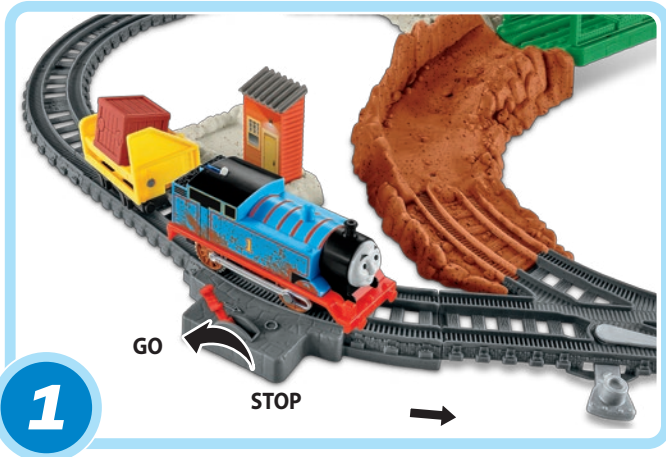

The bursted bridge derails Thomas.

Note: Flip the sign to the upright position before Thomas reaches the bridge for him to travel safely across.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



**CAUTION:**  
To prevent entanglement, keep hair away from wheels.



Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

#### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Thomas the Tank Engine & Friends™



CREATED BY BRIT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2017 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends  
and Thomas & Friends are trademarks of Gullane (Thomas) Limited.

©2017 HIT Entertainment Limited. HIT and the HIT logo are trademarks  
of HIT Entertainment Limited.

©2017 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of  
Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room  
503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui,  
HK, China. Tel.: (852) 3185-6500. Mattel South Africa (PTY) LTD,  
Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

FBK07-0970  
1101332969-DOM



**FBK07**  
**BDP12 Asst.**

**Fisher-Price®**