TechTouch Lightning McQueen

FULL-COLOR TOUCHSCREEN

- Touch the screen with your finger.
- When you see the Swipe icon >> , you can press, or touch and drag left in a swiping motion to advance screens.

HOME BUTTON

- Press to turn ON.
- Hold to turn OFF.
- During play, press at any time to stop the toy and return to Race screen.



Touch to change Settings.

- Touch to see the trophies you have earned and any trophies that are left to unlock. The more miles you drive, the more trophies you can win.
- Shows you have completed
- Shows you can swipe or touch to advance screens.
- Shows something is wrong with your Race settings.
- Touch to go back to the previous screen.

MAIN MENU OPTIONS

Press the Home button to turn on. Wait for screen to load.

MENU SCREEN



Choose from three different ways to play.

RACE



Choose this mode to race tracks from the movie.

CUSTOM RACEWAY



Choose this mode to design your own tracks.

STORY



Choose this mode to hear Lightning McQueen talk.

RACE



When you're ready to race, place Lightning McQueen on a hard, flat surface. Press RACE, and watch him go!







From the Race screen, press GO.



GO!

FLORIDA 500

Choose a race track from the movie. Press GO.



Choose your room size (SMALL, MEDIUM, LARGE).

BEGINNER



For basic racing, press RACE. (For other options, see ADVANCED section below.) Place Lightning McQueen on a hard, flat surface, and watch him go!







Congratulations—you earned a trophy!





Press HOME to return to the RACE screen, PIT CREW to move to advanced racing options, or REPLAY to do the same race again.

ADVANCED



Join Lightning McQueen's pit crew and experiment with tire selection, speed, and tune-up options!



Choose your tires based on race terrain. You'll then return to the PIT CREW screen, where you can race or continue to choose more racing options.



Slide the bar to increase or decrease racing speed, then press GO when finished.



Fill your gas and oil tanks, then press GO when finished.



When you're happy with your settings, press RACE to start the race! Place Lightning McQueen on a hard, flat surface, and watch him go.

RACING

CHALLENGES

The world of racing

is full of surprises! Here are

some challenges you might

experience during your races.



 
Congratulations—you earned a trophy!



Press HOME to return to the RACE screen, PIT CREW to change your racing options, or REPLAY to do the same race again.



FLAT TIRE OR TIRE BLOWOUT SPINOUT, CAR CRASH OR CAR STUCK





OUT OF GAS



Follow the prompts to fix the problem, and then continue your race or start over with a new race.

LOW OIL

CUSTOM RACEWAY



From the Custom screen, press GO.

TIP: If this is your first Custom race, you will move directly to designing your own race. Use your finger to trace a course on the display screen.



Place Lightning McQueen on a hard, flat surface, and watch him go!



After your first Custom race, the vehicle will start to save your previous 3 races. Now you can choose a previous race or design a new one by pressing NEW.



Choose your room size (SMALL, MEDIUM, LARGE).



Use the slider bars to fill up your oil and gas, then press GO. Place Lightning McQueen on a hard, flat surface, and watch him go!



Congratulations—you earned a trophy!




Press HOME to return to the Custom screen, TUNE UP to top off your oil and gas, or REPLAY to do the same race again.

STORY



From the Story screen, press GO.

This is where Cruz and I raced side by side!

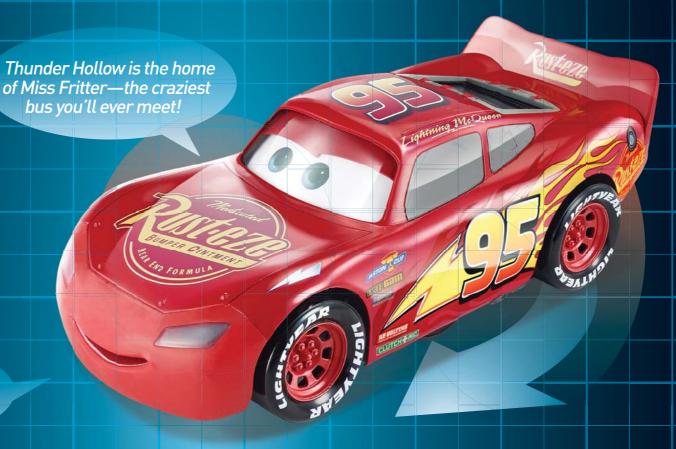

Turn around the vehicle and watch Lightning McQueen move and talk. Touch the screen to hear additional phrases. When you're ready to return to the Race screen, press the Home button.


BATTERY REPLACEMENT

- Note: The vehicle is equipped with an automatic shut-off feature that helps
- preserve battery life.
- Replace the batteries if lights dim, sounds distort, or motion slows. • Unscrew the battery cover with a Phillips head screwdriver (not included).
- Requires 6-AA (LR6) akaline batteries, not included.
- Install 6 new AA (LR6) batteries in the orientation (+/-) shown. Replace battery cover and tighten screw.
- For best performance, use only alkaline batteries.
- If vehicle malfunctions, reset by lengthening a paper clip and inserting
- the end into the hole. Press firmly until the toy powers off. Press the Home button to power back on.
- Keep these instructions for future reference as they contain important information.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision. • Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used. • Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product. • The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

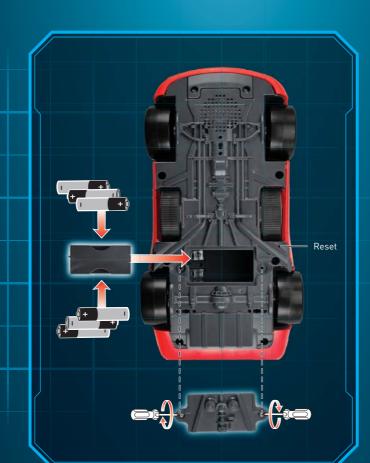

UPDATE CONTENT WITH USB

Insert the USB micro cable end into the port on the vehicle as shown. Connect the other end to your computer's USB port.





Go to http://cars.mattel.com/tech-touch-mcqueen.aspx. Follow the instructions for updating TechTouch content.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

- interference by one or more of the following measures: • Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

✓! WARNING:

Prevent serious injury:

Periodically check electronic device for cracks, broken glass or other damage. If damaged, immediately removed from this is product.

CAUTION: To prevent entanglement, keep hair away from wheels.

- This product is not recommended for use on loose dirt or wet surface.
- Do not connect to more than the recommend number of power supplies.

The toy is only to be connected to Class II equipment bearing the following symbol:



©2017 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel,

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867

© Disney/Pixar www.disney.com/cars



Caring for Your Touchscreen

- Keep away from direct sunlight.
- Only touch with pad of finger, not fingernail.
- To clean, turn off vehicle and wipe screen gently with a microfiber cloth.





service.mattel.com