

Fisher-Price®

FGG43



 
1

Lay and Play



2

Tummy-time Fun

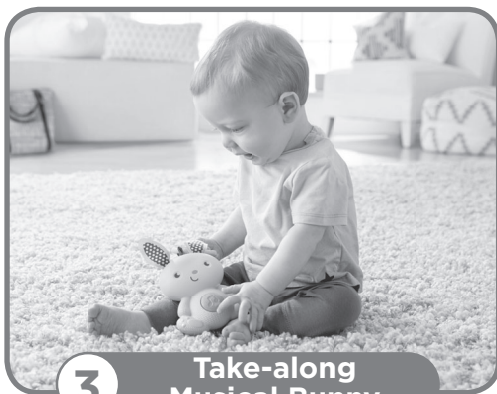

3

Take-along
Musical Bunny

Keep this instruction sheet for future reference,
as it contains important information.

Adult set up and battery installation are required.

No tools are needed for assembly.

Requires two AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation:

Phillips screwdriver (not included).

fisher-price.com

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.
SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3,
30 Melrose Boulevard, Johannesburg 2196.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation

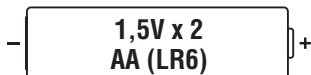

For longer life, use **alkaline** batteries.



- Locate the battery compartment door on the back of the musical bunny.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If the musical bunny begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sound from the musical bunny becomes faint or stops, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid **battery leakage**:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Parts



4 Toys



Mirror Toy



Tummy Wedge



Musical Bunny



 
Wrap-around Vine



Mat with Arches

Care

The mat is machine washable.
Remove the arch assembly from the mat.

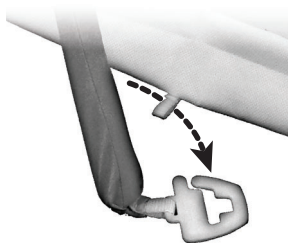

- While holding a mat loop, carefully unhook an arch clip. Repeat this process to unhook the remaining arch clips from the mat.
- Machine wash the mat, tummy wedge, wrap-around vine and carrot toy in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, musical bunny, mirror and toys are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

Setup



 
- Hang the toys from loops on the arches. Or attach the toys to the loops on the wrap-around vine and the tummy wedge.
- Wind the wrap-around vine around the arches at the top of the gym.
- Wrap the straps on the mirror toy around an arch or a loop and close the fasteners.




WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

Grows with your little one!

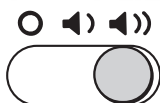

Power/Volume Switch

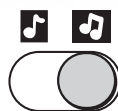 

Mode Switch

- Slide the power/volume switch on the musical bunny to ON with low volume, ON with high volume or OFF.
- Slide the mode switch on the musical bunny to short play mode or long play mode.
- In **short play mode** , hear a short tune each time you press the button on the musical bunny.
- In **long play mode** , press the button on the musical bunny to start 10 minutes of continuous music. When the music stops, press the button again for another 10 minutes of music.