

Fisher-Price®

FGY72



CAUTION


This package contains small parts.
For adult assembly only.



M4,5 x 19 mm Screw – 3

Shown Actual Size

Tighten screws with a Phillips
screwdriver. Do not over-tighten.

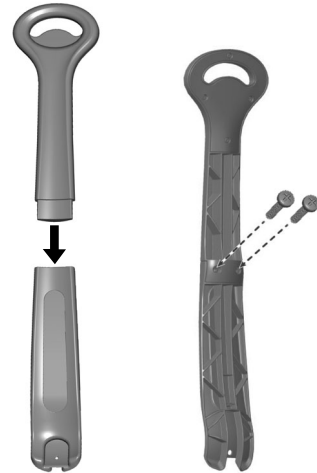

1

- Keep these instructions for future reference, as they contain important information.
- Adult assembly is required. You will need a Phillips screwdriver (not included) for assembly.


- Fit the handle pieces together.
- Turn the handle assembly over. Insert two screws and tighten.

fisher-price.com

Assembly




service.fisher-price.com

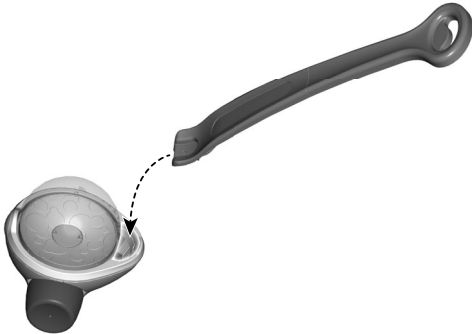

2

- Insert the handle assembly onto the socket in the popper.

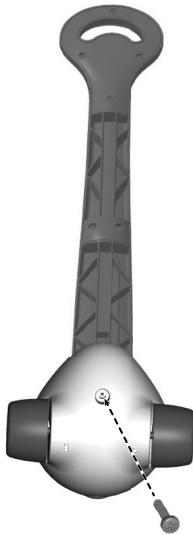

3

- Turn the assembly over so that the bottom faces you.
- Insert a screw into the hole in the popper and tighten.
- Pull up on the handle to be sure it's secure to the popper.

UNITED STATES

1-800-432-5437. Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

CANADA

Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

Remark:

Revision	Date	ID#	Changes
Primary - pr	06/29/2017	FGY72-0970-1101550305-DOM	NA