



 
 
# INTERACTIVE RING™ INSTRUCTIONS



6+


Please keep these instructions for future reference as they contain important information.

## CONTENTS

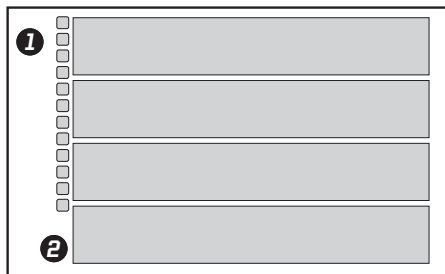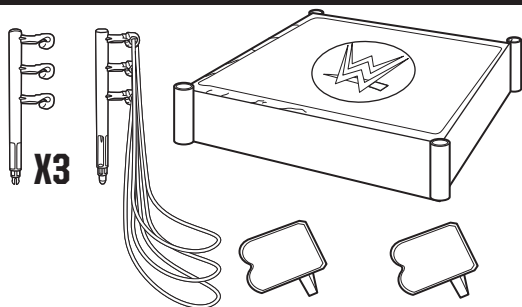

All WWE programming, talent names, images, likenesses, slogans, wrestling moves, trademarks, logos and copyrights are the exclusive property of WWE and its subsidiaries. All other trademarks, logos and copyrights are the property of their respective owners. © 2017 WWE. All Rights Reserved.

## 1. APPLY LABELS

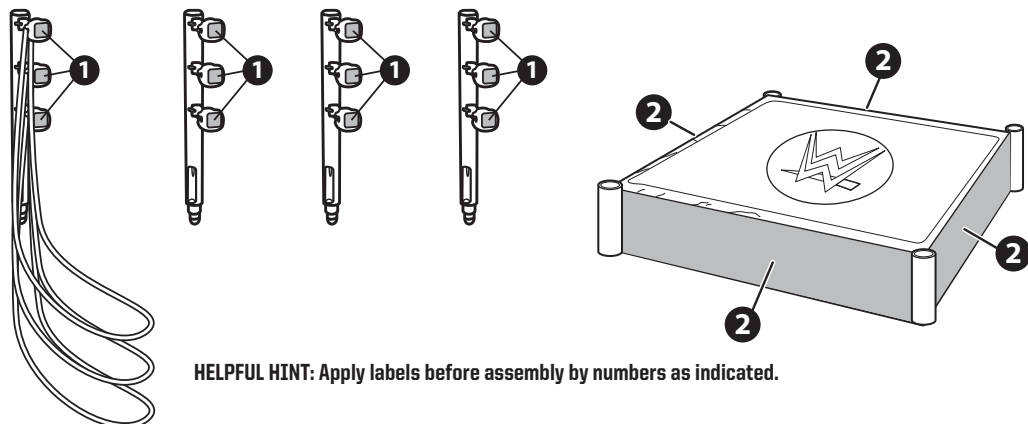 

**HELPFUL HINT:** Apply labels before assembly by numbers as indicated.


©2017 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

FMP33-0970  
1100225059-DOM





## 2. ASSEMBLY

 1A.



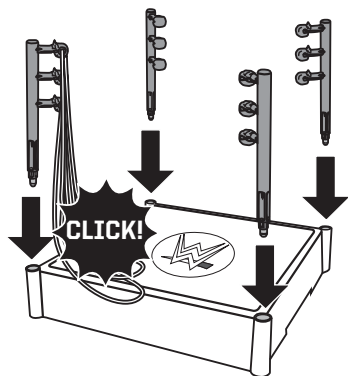


1B.

  To attach the ropes, start from the bottom up.

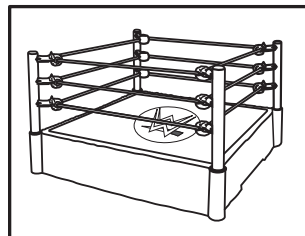
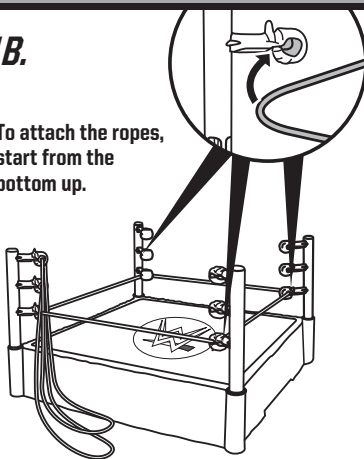


   2.

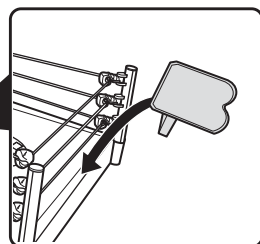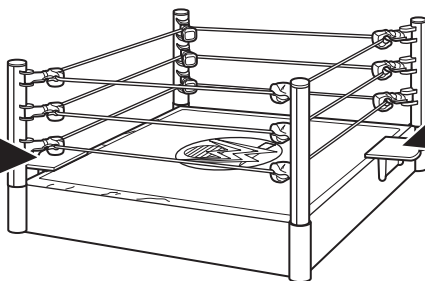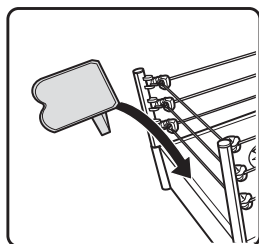


## 3. TO PLAY

  
1. Slide POWER SWITCH to ON (I). BELL will sound and crowd cheering will start.

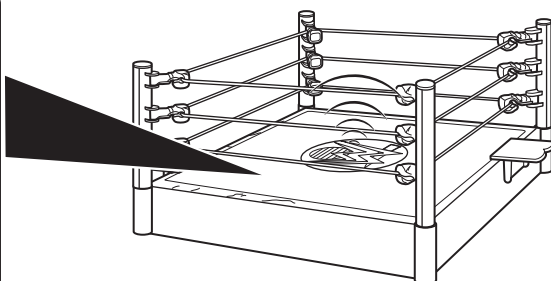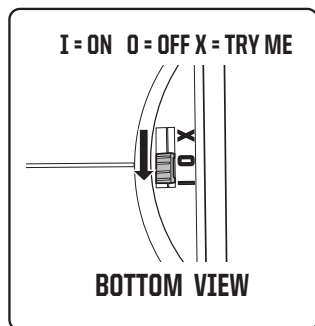


 
- 2A.** Press and hold button on each TOUGH TALKERS™ TOTAL TAG TEAM figure for around 2 seconds to enter PAIRING MODE. The figure is in PAIRING MODE when you hear the bell ringing sounds.

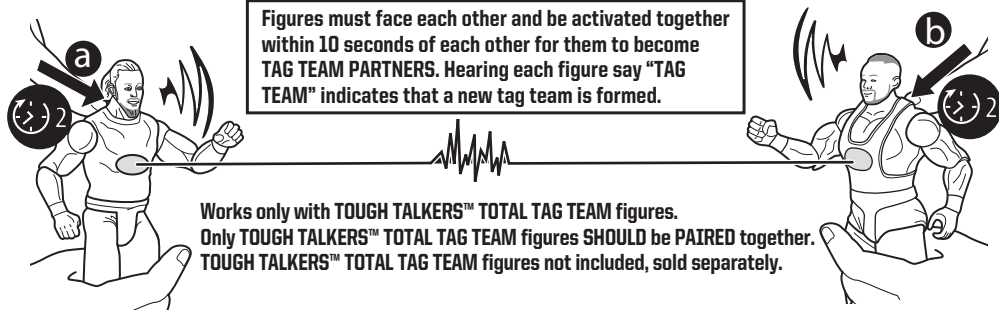

 - 2B.** Pair up 2 other TOUGH TALKERS™ TOTAL TAG TEAM figures to form another tag team.

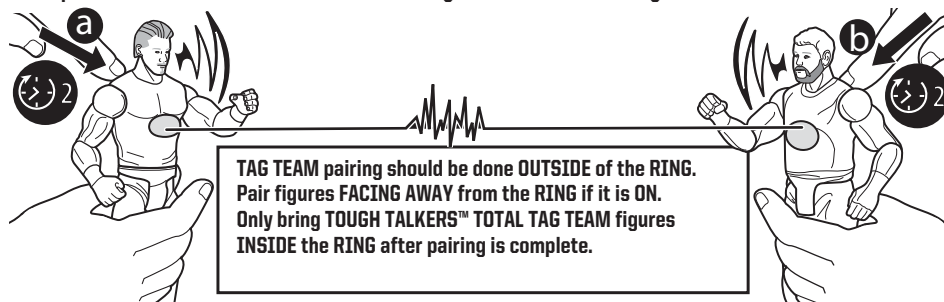

 
 
- 3A.** Bring one paired TOUGH TALKERS™ TOTAL TAG TEAM figure into the ring as the CHALLENGER. Face the figure towards the center of the ring then press and release the BUTTON on the figure to register him and his TOTAL TAG TEAM partner as the CHALLENGERS. After a few seconds, the tag team is announced and entrance music plays.

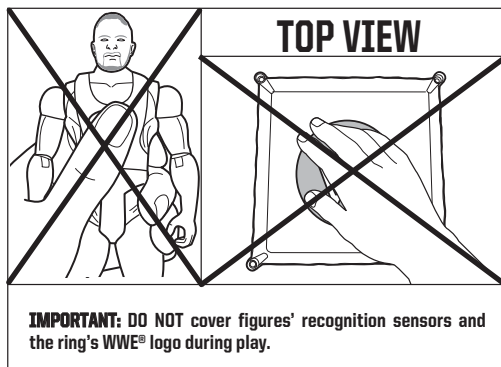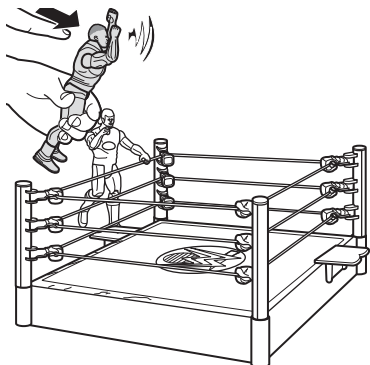

**NOTE:** DO NOT activate two TOUGH TALKERS™ TOTAL TAG TEAM figures at the same time when registering. Tag teams must be registered separately.

- 3B.** Register one figure as the **OPPOSING** tag team to the ring. The **OPPONENT** and his **TOTAL TAG TEAM** partner are announced.

  **NOTE:** DO NOT register both TAG TEAM partners on the same team. The **PARTNER** is automatically registered.

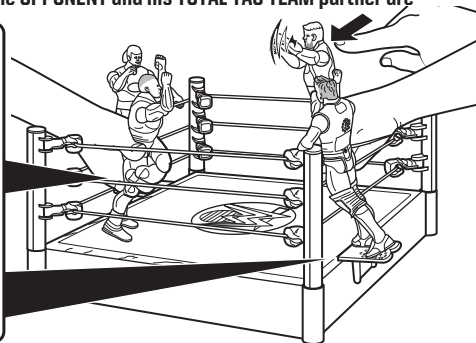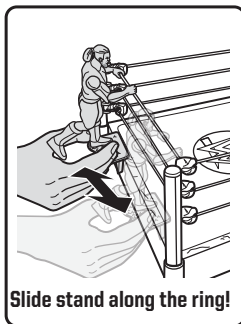


- 4.** The championship title match and tag teams are announced. You can select a different match by pressing the **RING** button after the championship title announcement.

Championship contend can be selected by pressing the **RING** button.


**CHAMPIONSHIPS:**

 WWE® CHAMPIONSHIP  
WWE® UNITED STATES CHAMPIONSHIP  
WWE® INTERCONTINENTAL CHAMPIONSHIP  
WWE® UNIVERSAL CHAMPIONSHIP  
WWE® RAW CHAMPIONSHIP  
WWE® SMACKDOWN CHAMPIONSHIP  
WWE® TAG TEAM CHAMPIONSHIP  
WWE® RAW TAG TEAM CHAMPIONSHIP  
WWE® SMACKDOWN TAG TEAM CHAMPIONSHIP

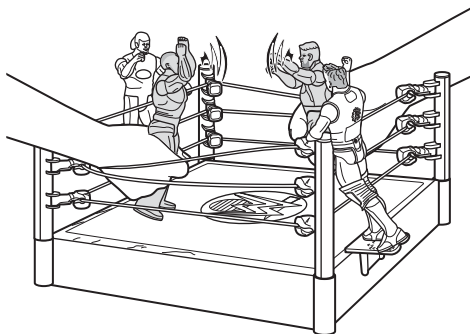


- 5A.** Match starts when the **BELL** rings! **RING** plays crowd and match sounds during the match. Press button on **FIGURES** to activate Superstar sounds and phrases.

 **SUPERSTAR TIP:** For proper performance, quickly press and release button on figures. **DO NOT** press and hold button during matches.

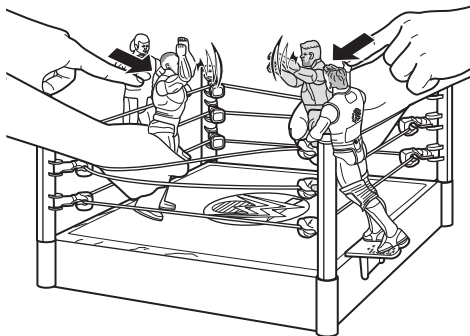

**5B.** Press and release button on the partner FIGURE to "tag" in.

 
**IMPORTANT:** Figures can be tagged in and out anytime during the match when you press the button on the figure NOT in the ring.

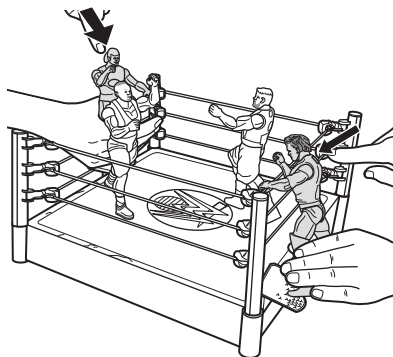

**5C.** Press the RING button to end match and start the three count!


The tag team activated most wins! Challengers win if neither tag team was activated.

 **NOTE:** Match will end automatically after 3 minutes if no figure's button is pressed. Press button on FIGURES to continue the match.

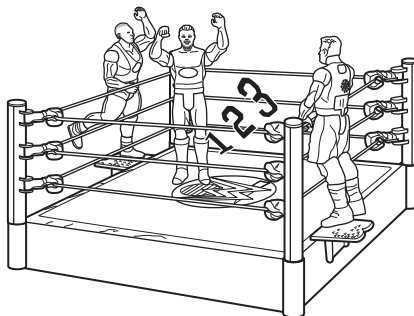


**6.** Press the RING button and repeat from STEP 3 to restart the match.

 To preserve battery life, RING will automatically power OFF when left idle for a few minutes. Press the RING button to reactivate.

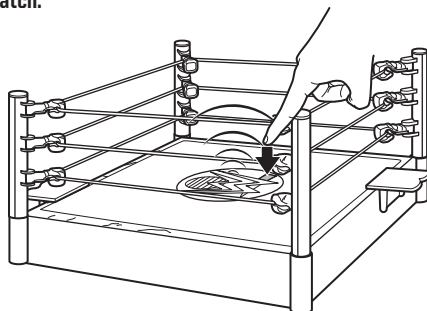

## 3. TO PLAY (CONTD.)

 7. To split the tag team, press and hold button on each TOUGH TALKERS™ TOTAL TAG TEAM separately for around 2 seconds. Do each figure individually and do not face the figures together.

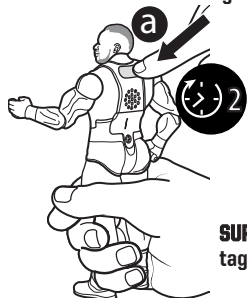

Unlink first figure, then wait 10 seconds before unlinking the other figure.




**SUPERSTAR TIP:** DO NOT press all buttons at the same time, unlink one tag team before starting on another.

### 2-ON-1 HANDICAP MATCH

 Start a 2-ON-1 HANDICAP MATCH by registering a paired up TOUGH TALKERS™ TOTAL TAG TEAM figure to the ring, then register a TOUGH TALKERS™ figure.


TOUGH TALKERS™ figures not included, sold separately.

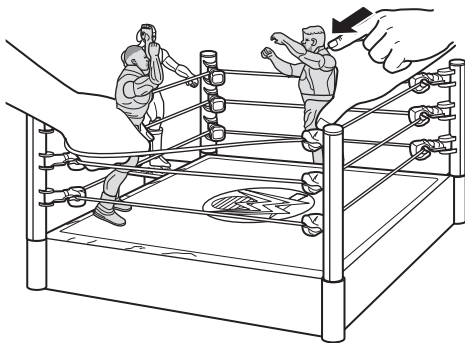

### SINGLES MATCH

Start a SINGLES MATCH by registering two TOUGH TALKERS™ figures or two unlinked TOUGH TALKERS™ TOTAL TAG TEAM figures to the ring!

 
**IMPORTANT:** Tag team features are unavailable in SINGLES MATCHES.

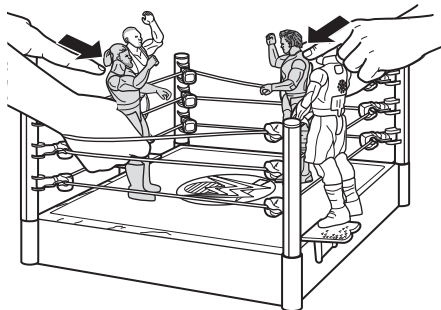


## 4. THREE MORE WAYS TO PLAY

1. Add additional TOUGH TALKERS™ figures or TOUGH TALKERS™ TOTAL TAG TEAM figures (not included) DURING the match! Register additional figures, ring will play their entrance music and signature phrases!

 
**NOTE:** Figures added during the match cannot win.

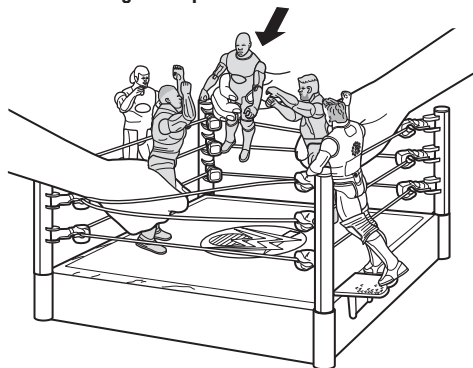

 2. Fight TOUGH TALKERS™ figures with a standard WWE® figure (not included). Register one TOUGH TALKERS™ figure and press the RING button to start the match!

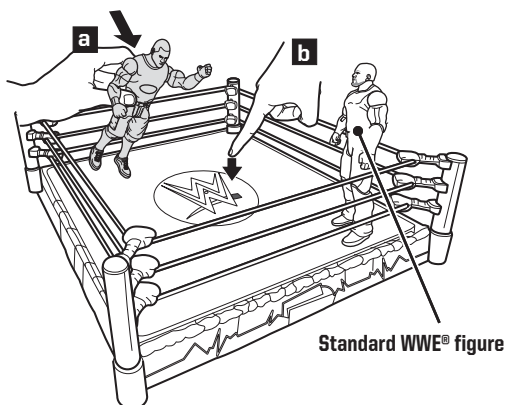


 3. Fight two standard WWE® figures! Push the RING button to start the match with WWE® sounds!

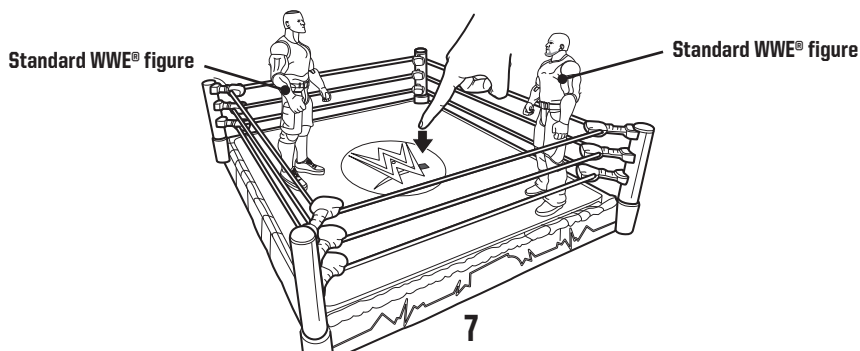

## 5. BATTERY INSTALLATION

 - Batteries included are for demonstration purposes only.
- Replace the batteries if sounds distort.
- Locate the battery box under the ring.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AA (LR6) batteries in the battery box in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life, use alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

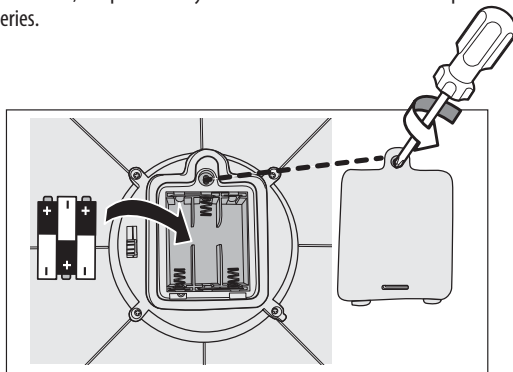

### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.