



MICKEY & GOOFY DELUXE PIT STOP


INSTRUCTIONS


Keep these instructions for future reference as they contain important information.

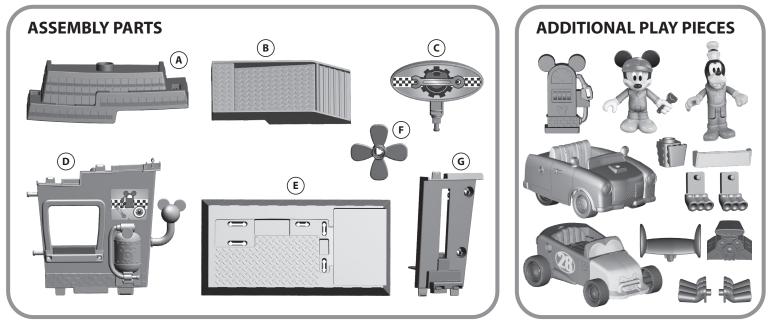


 ASSEMBLY NOTE: Assembly steps that are marked with a star are "one-time snaps". Press firmly until each part clicks into place. Once these parts are put together, they cannot be taken apart.

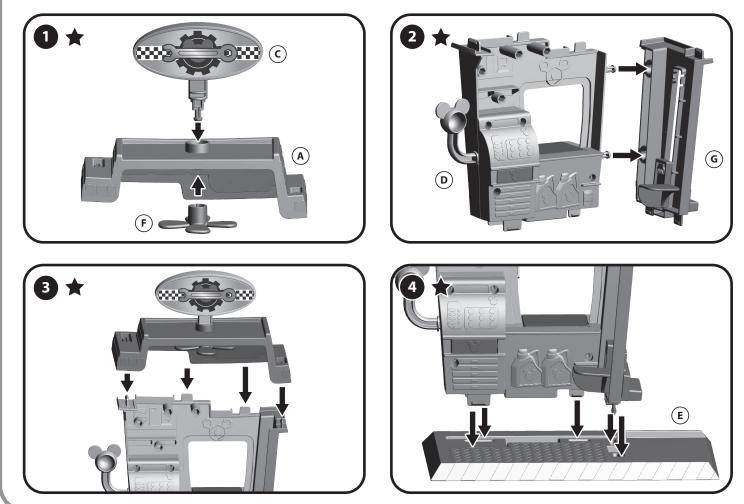

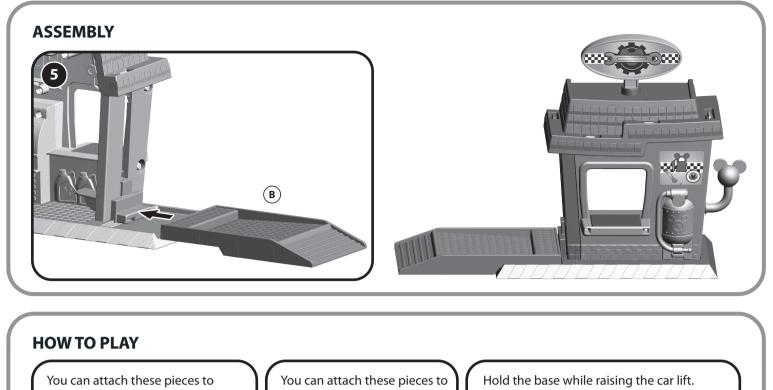

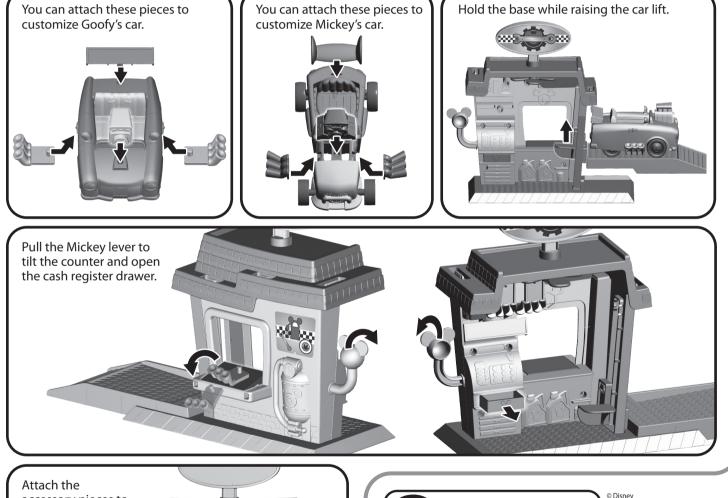



© Disney Visit DisneyJunior.com ©2017 Mattel. All Rights Reserved. **CONSUMER ASSISTANCE** 1-800-432-5437 (US & Canada) 1300 135 312 (Australia) and ™ designate U.S. trademarks of Mattel, except as noted. PRINTED IN CHINA. service.fisher-price.com Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470. Tel.: (852) 3185-6500. Outside the United States: Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com. \land WARNING: Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk CHOKING HAZARD - Small parts. Mattel Europa I.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Australia: Mattel Australia: Net Australia: Net Australia: New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland. Not for children under 3 years. FMP72 Fisher Price[®] SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

FMP72-0970-1101637057-DON