


Fisher-Price®

FNF23

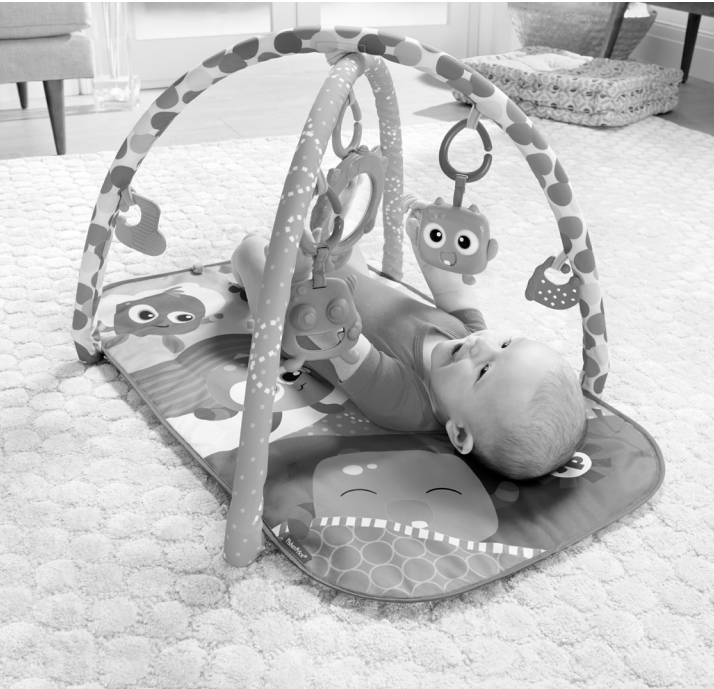

Hook the activity toys to any of the loops on the arches or the mat for lay & play and tummy time fun!

⚠ WARNING

To prevent entanglement injury, never place gym in a crib or playpen.
Never add strings, ties or other products to the gym.

Keep this instruction sheet for future reference, as it contains important information.

fisher-price.com



UNITED STATES: 1-800-432-5437.

Fisher-Price, Inc., 636 Girard Avenue,
East Aurora, NY 14052

GREAT BRITAIN: Mattel UK Ltd,
Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303
www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.

CANADA: 1-800-432-5437. Mattel Canada Inc.,
6155 Freemont Blvd., Mississauga,
Ontario L5R 3W2.

AUSTRALIA: Mattel Australia Pty. Ltd., 658
Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory
Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering
Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd., Room 503-09,
North Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.
Tel.: (852) 3185-6500.

MALAYSIA: Diimport & Diedarkan Oleh: Mattel
Southeast Asia Pte. Ltd., No 19-1, Tower 3
Avenue 7, Bangsar South City, No 8, Jalan
Kerinci, 59200 Kuala Lumpur, Malaysia.
Tel: 03-33419052.

SOUTH AFRICA: Mattel South Africa (PTY)
LTD, Office 102 I3, 30 Melrose Boulevard,
Johannesburg 2196.

Care

- The mat is machine washable. Remove the arch assembly from the mat.
- While holding a mat loop, carefully unhook an arch clip. Repeat this process to unhook the remaining arch clips from the mat.
- Machine wash the mat in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly and activity toys are surface washable. Wipe with a cloth dampened with a mild soap and water solution. Rinse to remove residue.