

Fisher-Price®



Sproutling™
Wearable Baby Monitor

Setup Guide



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 and 18 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

FCC Declaration of Conformity

Responsible Party: Mattel Inc., 636 Girard Avenue,
East Aurora, NY 14052, U.S.A. 1-877-219-8335

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Part 18 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC ID: PIYFNF59-17A5H
IC: 4390C-FNF5917A5H
Model: Modèle: FNF59

FCC ID: PIYFNF59-17A5S
IC: 4390C-FNF5917A5S
CAN ICES-3 (B)/NMB-3 (B)

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Use only on a table top, open area.

10. Clean the Smart Charger with a dry cloth only.
11. Dispose of battery safely.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Keep these instructions for future reference as they contain important information.

Mattel Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A.
1-877-219-8335

Warning

1. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Keep these instructions.
2. Rating plate was located at bottom enclosure of the apparatus.
3. The AC/DC adaptor shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
4. The AC/DC adaptor is used as disconnect device. The AC/DC adaptor of apparatus should not be obstructed OR should be easily accessed during intended used. To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
5. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
6. No naked flame sources such as lighted candles should be placed on the apparatus.


Setting up

1. Remove the Smart Charger, wearable, cable, and wall plug from the box.
2. Plug the cable into the Smart Charger.
3. Plug the cable into the wall plug, and then plug it into a power outlet in the room where your baby sleeps.
4. Place the wearable on top of the Smart Charger.
5. The Smart Charger will flash white briefly after being plugged in. Then after about 1 minute it will blink blue to indicate it's ready to pair with your smart device (smart device not included).
6. The Fisher-Price® Sproutling® app is available on the App Store® and Google Play™. Download the app and follow the directions to complete set up.
7. When successfully connected to Wi-Fi, the Smart Charger will turn green and play a chime.

For information on available compatible devices, please visit www.fisherprice.com/sproutling. Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

Putting on the wearable

1. Put the band on the wearable. Make sure the band ring fits completely into the groove around the sensor. The tabs on the sensor should be on the inside, touching baby's skin.

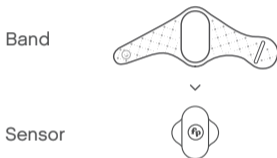

2. About 30 minutes before your baby goes to sleep, put the wearable on the back of your baby's ankle.

Make sure the wings of the band point down toward the ground for a fit that conforms to the ankle. Check the smiling face on the tab of the band to make sure it's smiling at you.



3. Fix the wearable on the back of baby's ankle by inserting the back of the tapered end into the slot and pressing down on both pieces of velcro. Then slide the band up the leg toward the knee. The band should be snug but not too tight.



- 4 You can put clothes or socks on top the wearable. Do not put clothing between the band and baby's skin.

To receive the most accurate insights, please make sure the sensor is fixed onto the back of your baby's high ankle, directly against the skin, and that it does not spin or shift around.

Keep the wearable within 25 feet of the Smart Charger to maintain connection.

How to charge the wearable

1. Remove the wearable from your baby when your baby is awake and charge it in between naps.
2. Place the wearable on top of the Smart Charger, which will blink white slowly when charging.



3. When the battery is fully charged the Smart Charger light will turn off.

Cleaning instructions

The band is washable

Hand wash



Machine wash



Cold water wash



Cleaning and drying your sensor:

Because the sensor is water resistant, you can use a lightly dampened cloth to wipe it clean. External heat sources such as hair dryers can cause damage.

For customer support, please visit service.fisher-price.com or call us at 1-877-219-8335.

⚠ WARNING

Strangulation Hazard – Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag.

