


SUPER CHARGED MCKEY DROP & LOOP PLAYSET

INSTRUCTIONS


Keep these instructions for future reference as they contain important information.

WHAT'S INCLUDED

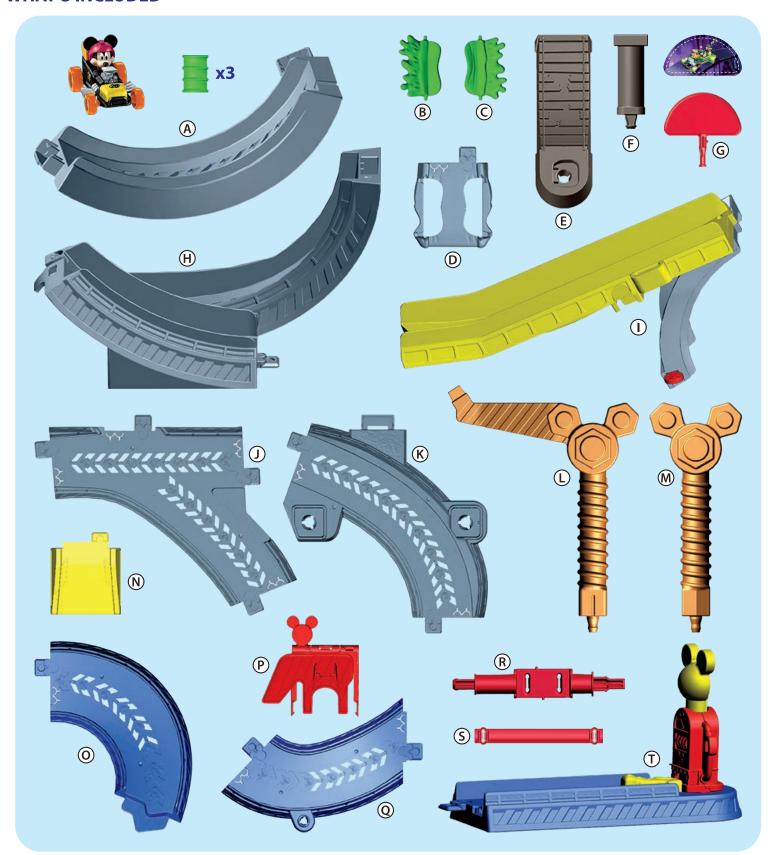


ASSEMBLY

NOTE: Steps marked with a star are "one-time snaps". Press firmly until each part clicks into place. Once these pieces are snapped together, they cannot be taken apart.

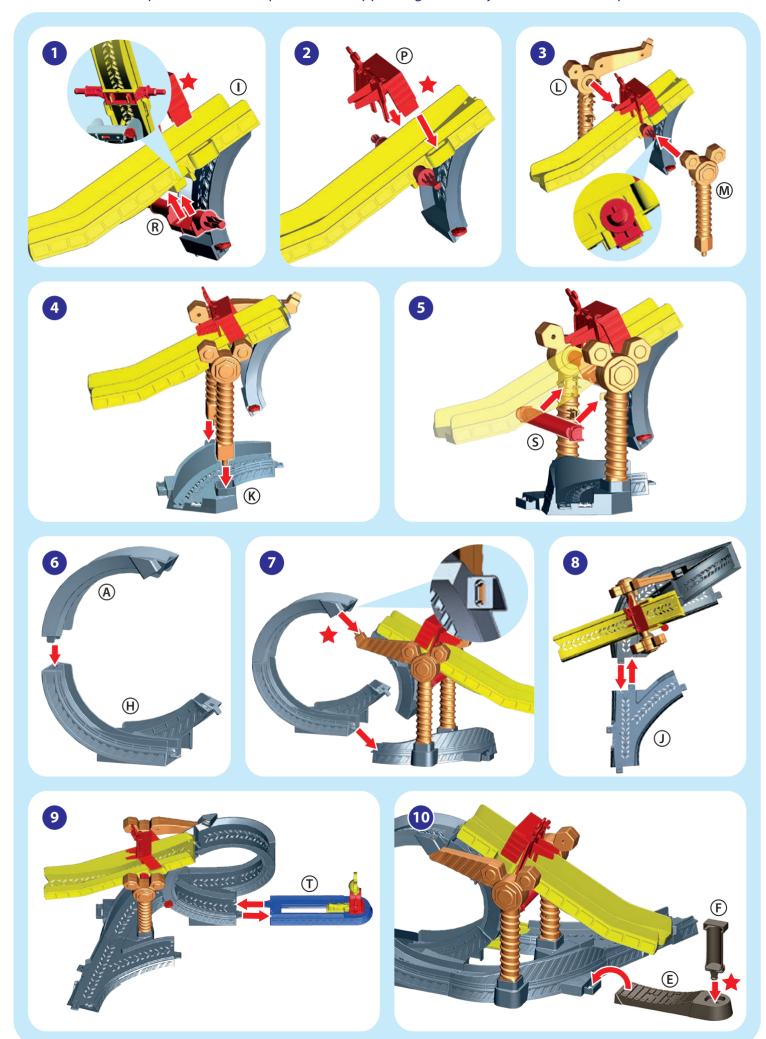

ASSEMBLY

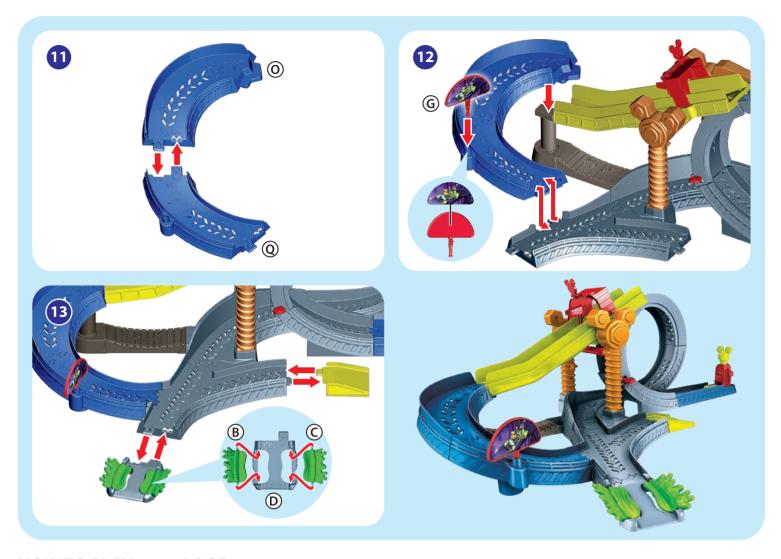



HOW TO PLAY: 360° LOOP




HOW TO PLAY: DROP-DOWN VERTICAL TRACK




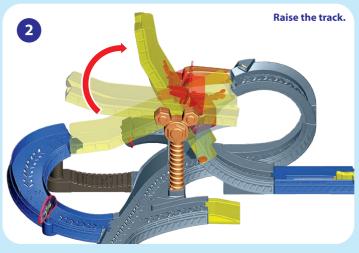

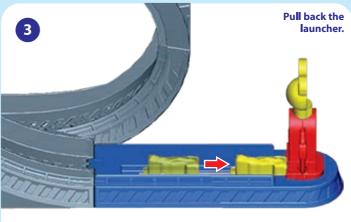



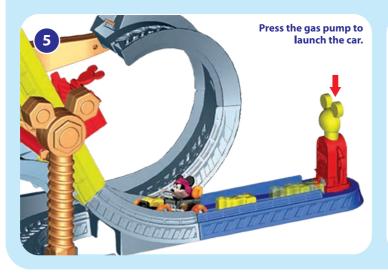

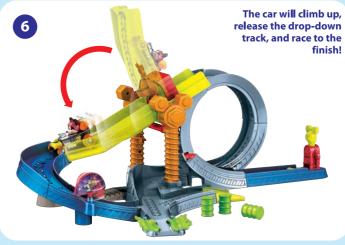



Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario LSR 3W2; www.service.mattel.com. Great Britain: Mattel UK Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

South Africa: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

© Disney

©2018 Mattel. $^{\circ}$ and $^{\mathrm{M}}$ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

Fisher-Price®