8+

HOEW

COLORS AND DECORATIONS MAY VARY.

INCLUDES A RECHARGEABLE 9.9V LITHIUM ION (LI-ION) BATTERY (NON-REPLACEABLE) FOR THE TRUCK.

UGHONS

REQUIRES 3 AA (LR6) ALKALINE BATTERIES (NOT INCLUDED) FOR THE REMOTE CONTROLLER. DISPOSE OF BATTERIES SAFELY.

Keep these instructions for future reference as they contain important information. **IMPORTANT:** Please read all instructions before operating your vehicle.

A CAUTION: The battery charger is not intended to be used by children. Only adults should charge batteries.

A CAUTION:

Surfaces may become hot and cause burns if electronics get wet. To prevent entanglement, keep all hair away from the wheels.

FRL17-0970 1101873483-DOM service.mattel.com HOTWHEELS.com



2.4GHz

CONTENTS




SUPER SPEED CHARGER



TRICK TRUCK VEHICLE

FEATURES

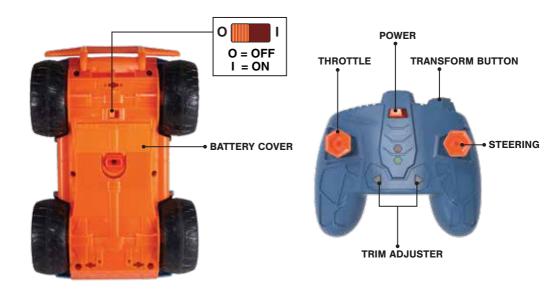

CONSUMER INFORMATION

Note to Adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

 
- The toy is not intended for children under 8 years old.
- NEVER drive your vehicle on streets! Streets are for real cars!
- DO NOT pick up the vehicle while it is in motion.
- Keep fingers, hair and loose clothing away from the wheels while the vehicle is switched ON.
- Never disassemble or attempt to modify the vehicle.
- Operating range of remote controller is around 65 feet (20 meters).
- When not in use, turn off the vehicle and remote controller. To avoid accidental operation, remove all controller's batteries.
- If the vehicle and/or remote controller are wet, thoroughly dry before next use.
- Regularly examine all wires and connectors. In the event of damage, do not use them.

LET'S GET STARTED!

 
Your TRICK TRUCK is equipped with a SUPER SPEED (Li-ion) battery. Now you can spend less time waiting and enjoy more time racing! Before first use, you MUST charge the 9.9V SUPER SPEED (Li-ion) battery with the 9.9V SUPER SPEED charger. Please follow the instructions below:

A CAUTION: Use only the charger supplied with this toy. Do not use any other charging source.

 
VEHICLE













- 1. Turn the vehicle upside down as shown. Unlock and open the battery cover.
- 2. To disconnect wires, push down on the connector clip and pull apart.
- 3. Connect one side of the wires leading from the vehicle to the charger. Make sure the two connectors are tightly snapped together.
- 4. Plug the charger into standard electrical outlet.
- 5. A red light will light up to indicate the battery is charging.
- 6. The battery can be charged in 30 minutes. Charging time may vary.
- 7. A green light will light up to indicate the charging is complete.
- 8. After charging, the battery and the truck will be warm. This condition is normal when the battery is fully charged.
- 9. Charging the battery for more than what is recommended will not give you a longer running time.
- 10. To disconnect wires, push down on the connector clip and pull apart.
- 11. Reconnect two sides of the wires in the vehicle. Make sure the two connectors are tightly snapped together.
- 12. Replace and lock the battery cover.
- 13. Recharge the SUPER SPEED battery if vehicle runs slowly or vehicle does not respond well to the remote controller..
- 14. Unlike alkaline batteries, where the power loss is gradual, a Li-ion battery will run for its normal running time, depending on your particular vehicle, and then lose most of its power at once. It is now time to recharge the battery.
- 15. After use, the battery will be hot! Wait at least 20 minutes until the battery cools before recharging. Recharging a warm or hot battery will greatly reduce the number of times your battery can be recharged.

Charging temperature range: 0 ~ 45°C Operating temperature range: -20 ~ 60°C Battery Storage temperature range: 25 ± 5°C


REMOTE CONTROLLER

- 1. Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 3 new AA (LR6) alkaline batteries (not included) in the orientation (+/-) shown.
- 3. Replace the battery cover and tighten screw.
- 4. Replace batteries if lights dim.
- 5. Dispose of batteries safely.
- 6. For longer life, use alkaline batteries.



PAIR CONTROLLER AND VEHICLE

You must pair the remote controller with the vehicle before you can control it. FIRST SWITCH ON THE VEHICLE ((a)), THEN IMMEDIATELY SWITCH ON THE REMOTE CONTROLLER ((b)). The controller's red light will stop flashing and stay ON when pairing is complete. If the red light does not stop flashing after around 10 seconds, switch off the controller and vehicle, then try again.

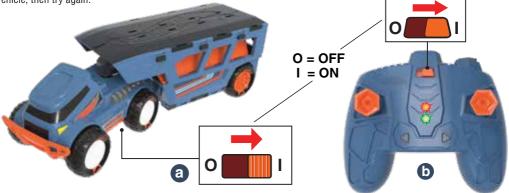

NOTE: When playing with multiple vehicles, each must be paired one at a time. A maximum of 6 vehicles can be paired in one location.

How To Connect Trailer

1 LOCATE CONNECTION POINT AND PRESS TO CONNECT.




NOTE: Only RED light is on when the trailer is disconnected.



NOTE: Both RED and GREEN lights are on when the trailer is connected.


CONTROLLER OPERATION

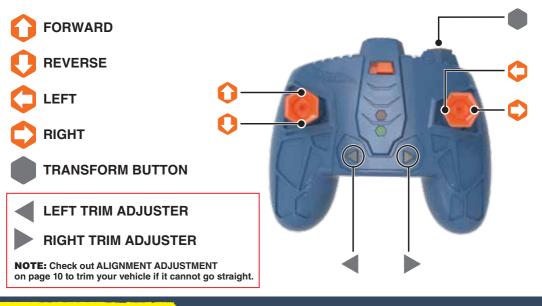

Drive And Drift

PUSH THROTTLE TO START YOUR ENGINE. CONTROL DIRECTION WITH STEERING STICK.




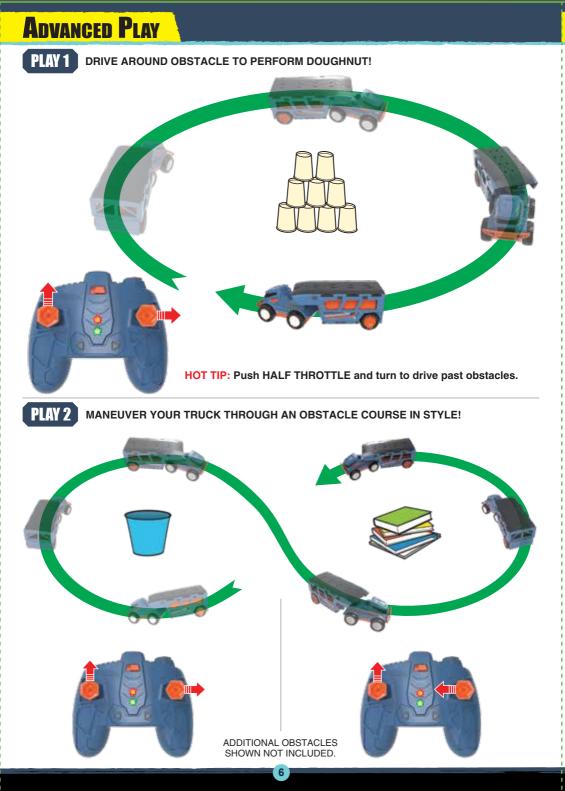

TRANSFORM

PRESS AND HOLD THE TRANSFORM BUTTON.

A. THE TRAILER POPS OPEN AND TURNS INTO A STUNT PARK!

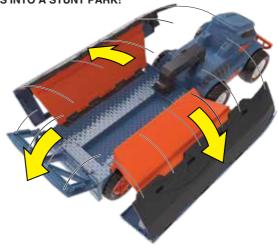



B. THE TRUCK DETACHES AND MOVES FORWARD AUTOMATICALLY.



NOTE: Only **RED** light is on when the trailer is disconnected.


7


Perform Stunts



IMPORTANT: Spinning is only available when the trailer is disconnected.

STUNT 2 SPEED UP AND DRIVE TOWARDS THE LOW RAMP FOR A DISTANCE JUMP!

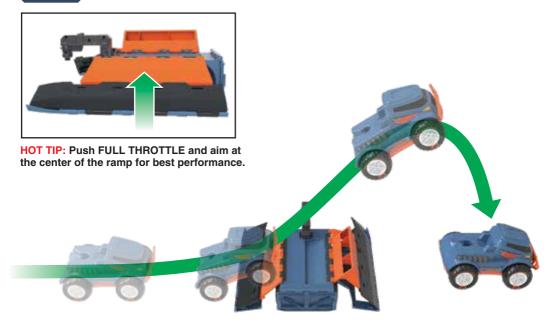

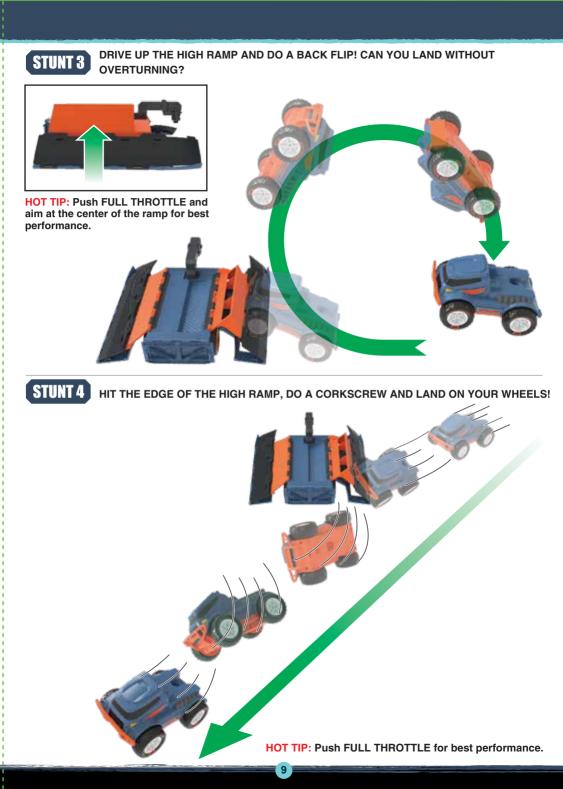

ALIGNMENT ADJUSTMENT

- 1. Drive your vehicle slowly backward and forward without steering to see if it veers towards the left or right.
- 2. If the vehicle veers right, stop the vehicle and press the LEFT trim adjuster.
- 3. If the vehicle veers left, press the RIGHT trim adjuster.
- 4. You will see the green light flash when you have adjusted the steering one notch in that direction.
- 5. Repeat steps 2 or 3 until the vehicle can travel in a straight line.

ß


CLICK

10



1.


2.

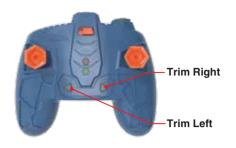

C

а

QUICK TIPS

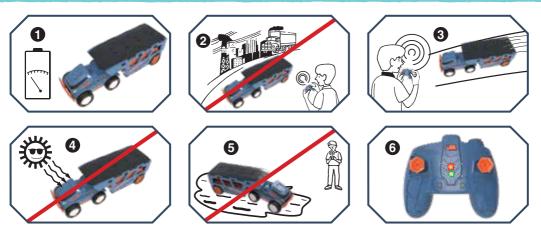

- (1) When your vehicle starts to lose power, it may lose functionality or performance. It's time for a recharge. Your vehicle's running time may change depending on your driving style and driving environment.
- (2) Radio interference can affect your vehicle's performance. Interference can be caused by other R/C vehicles running on the same frequency, electrical wires, large buildings or CB radios. Try to stay away from these!
- (3) Point your remote controller up, not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- (4) Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all controller's batteries for storage.
- (5) Don't drive your vehicle in sand or through water or snow. Do not immerse in water. If your vehicle or remote controller does get wet, wipe it with a towel, remove controller's batteries, and allow to dry completely overnight. Replace with fresh batteries before next use.
- (6) When the controller's light(s) keep flashing even it is successfully paired with the vehicle, the product may malfunction. Switch off both controller and vehicle. To resume normal operation of the vehicle, follow the instructions in TROUBLESHOOTING TIPS. To resume normal operation of the controller, remove and reinstall the batteries.

TROUBLESHOOTING TIPS

When the controller's light(s) keep flashing even it is successfully paired with the vehicle, the product may malfunction. Please follow the instructions below to resume normal operation of the vehicle:

- 1. When the red light is flashing, the connection is unstable. Switch off both controller and vehicle. After a few seconds, switch them on again to reset. Get closer to control the vehicle, or stay away from any radio interference sources.
- 2. When both lights are flashing together, the vehicle malfunctions due to overcurrent. Switch off both controller and vehicle. Wait until the vehicle cools, check its axles and clear the dirt around them.
- 3. When the green light is flashing, the vehicle is getting too hot. Switch off both controller and vehicle. Wait for 1 hour until the vehicle cools and recharge the battery.
- 4. When both lights are alternating flashing, the vehicle's battery runs low. Switch off both controller and vehicle. Wait until the vehicle cools and recharge the battery.

11

SAFETY TIPS

RECHARGEABLE BATTERY SAFETY INFORMATION

WARNING: Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

- (a) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the product. Carrying the product with your finger on the switch or energizing product that have the switch on invites accidents.
- (b) Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- (c) Under abusive conditions, liquid may be ejected from the battery pack or truck; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- (d) Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- (e) Do not expose a battery pack or product to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- (f) Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- (g) Do not recharge the battery pack if the truck is hot. Allow it to cool before recharging.
- (h) Do not attempt to use or charge the battery pack if it shows signs of leakage or corrosion.
- (i) Do not crush or disassemble the truck.
- (j) Exercise caution in handling a hot truck.
- (k) If the truck and/or charger are wet, thoroughly dry before charging.
- (I) Do not recharge non-rechargeable batteries.

NOTE TO ADULTS

- Rechargeable battery pack should only be charged by an adult.
- Periodically examine this product for damage to the plug, housing, or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.
- The battery charger is not a toy.
- This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- Periodically examine this battery charger for damage to the cord, housing or other parts that may result in the risk of
 fire, electric shock or injury. If the battery charger is damaged, do not use it.

BATTERY DISPOSAL

The SUPER SPEED (Li-ion) battery pack inside the truck are not intended to be replaced or removed by consumers. Before disposal in the waste stream, the batteries must be removed by a qualified professional and disposed of separately according to local regulations on battery collection and recycling.

FOR ADDITIONAL HELP, VISIT WWW.HOTWHEELS.COM

©2018 Mattel, Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6600. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.

12