



## TIPS

Dolls can stick on any of these SMART STICK<sup>™</sup> surfaces!

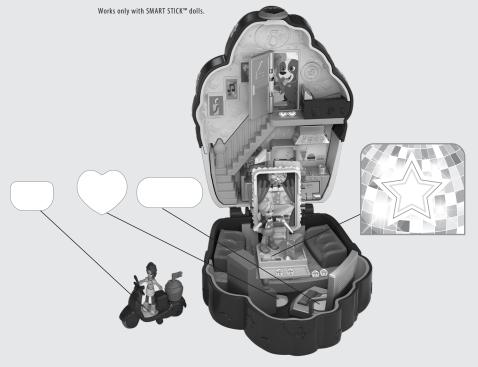

**IMPORTANT:** Remove dolls from SMART STICK<sup>™</sup> surfaces immediately after play.

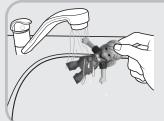

## **CLEANING**

Dust, dirt, and other debris can cause dolls to lose their adhesiveness. To clean the dolls, rinse them thoroughly with tap water or use tape to remove excess debris.

NOTE: Dry dolls before using them again.

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.







Please keep these instructions for future reference as they contain important information.

? service.mattel.com

©2018 Mattel and/or Origin Products Ltd.

FRY36\_0970\_1101862959\_DOM

4+

4

1 Cover


1



Table Flips To Karaoke Stage!


## LET'S PLAY!

 Doll Dances!



B. Extra stickers can go anywhere on the playset to create more SMART STICK<sup>™</sup> surfaces!



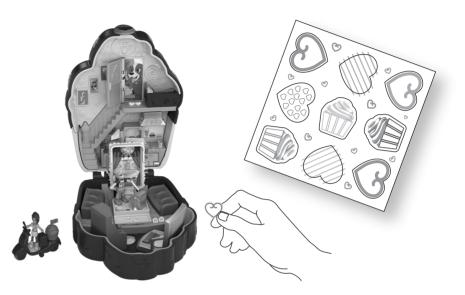

C. Close and take the playset on the go!





2