 

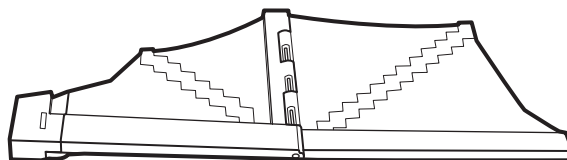


INSTRUCTIONS • INSTRUCCIONES MODE D'EMPLOI • INSTRUÇÕES

6+


Please Keep these instructions for future reference as they contain important information. • Lee y guarda estas instrucciones para futura referencia, ya que contienen información importante de este producto. • Conserver ce mode d'emploi pour s'y référer en cas de besoin car il contient des informations importantes. • Por favor, guarde estas instruções para futura referência, pois contém informações importantes.

CONTENTS • CONTENIDO • CONTENU • CONTEÚDO

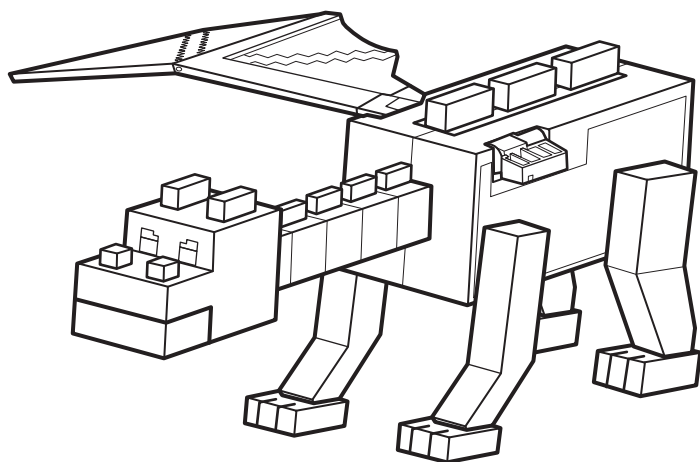

x10

1. ASSEMBLY • MONTAJE • ASSEMBLAGE • MONTAGEM

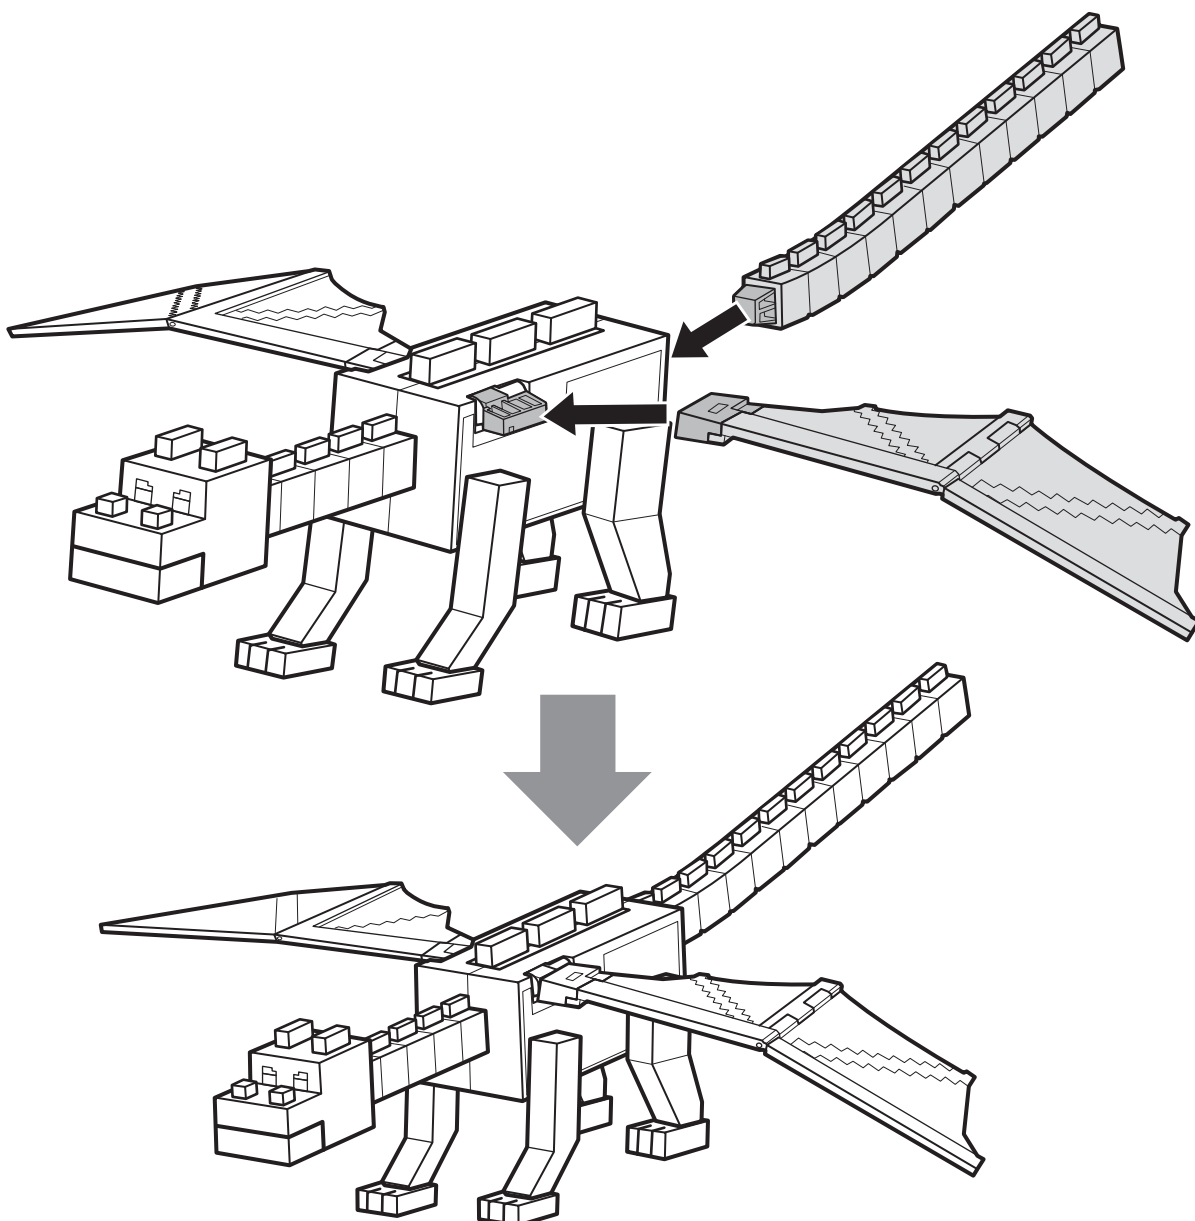


A. Press the middle button for roaring sounds and lights.

Presiona el botón del medio para activar rugidos y luces.



Appuyer sur le bouton du milieu pour activer des sons et des lumières.

Aperte o botão do meio para ouvir sons e ativar luzes.

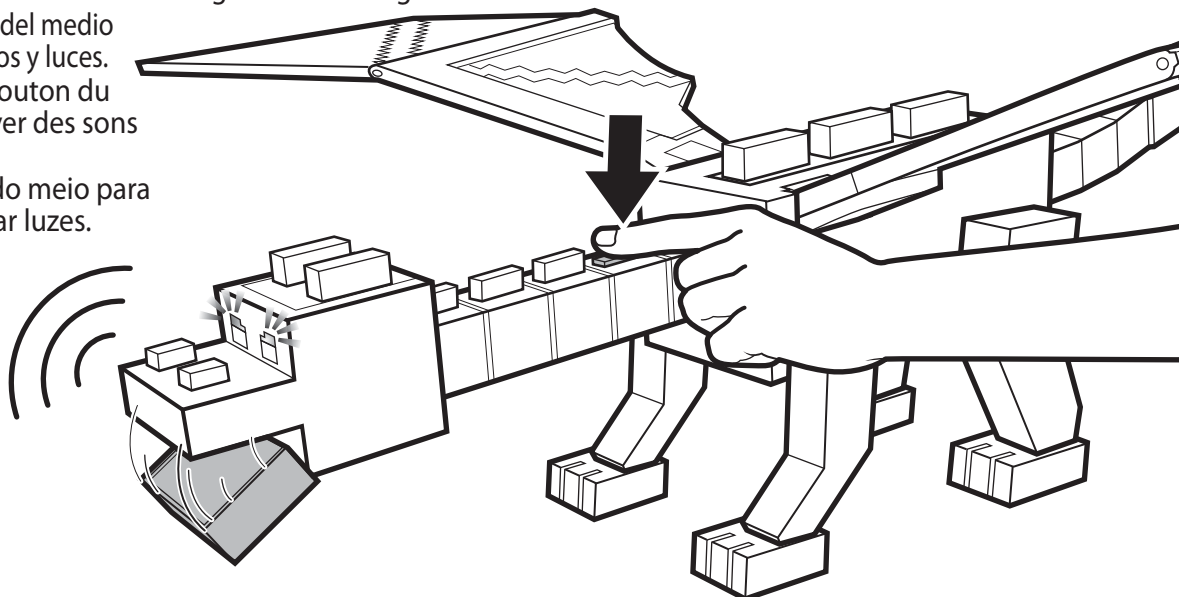

B1. Load discs. • Carga los discos.

Insérer les disques. • Coloque os discos.

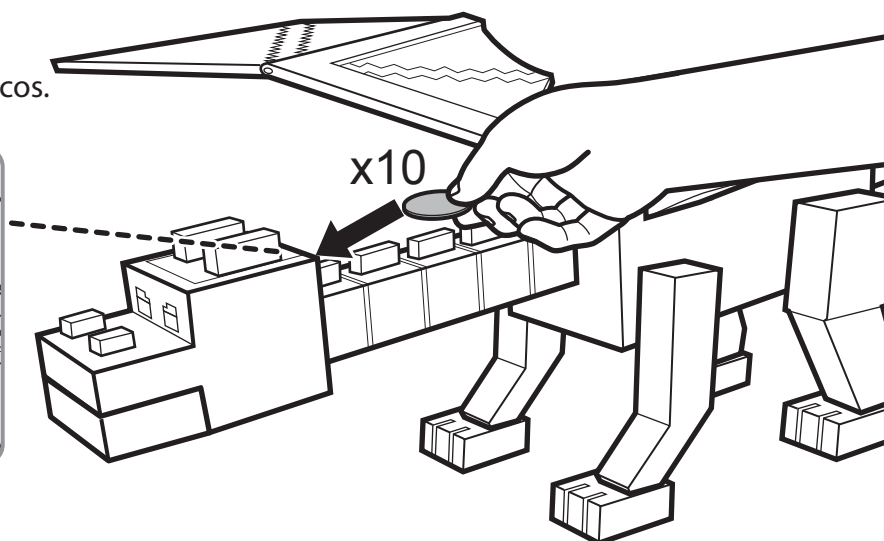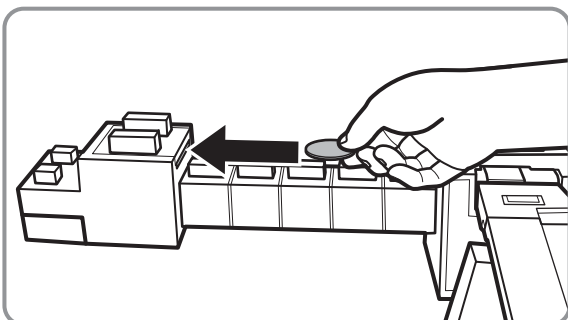

B2. Press the front button to fire and for roaring sounds and lights!

¡Presiona el botón del frente para lanzar discos y activar rugidos y luces!


Appuyer sur le bouton à l'avant pour activer et pour activer des sons et des lumières.

Aperte o botão dianteiro para fogo, sons e luzes.

Warning: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

ADVERTENCIA: Si adquirió un modelo con proyectil(es) incluido(s): utilizar únicamente el(los) proyectil(es) incluido(s) en este juguete. No apuntar a los ojos ni a la cara. No disparar a personas ni animales. No disparar a quemarropa.


ATTENTION : Ne pas viser les yeux ou le visage. N'utiliser que les projectiles fournis avec ce jouet. Ne pas tirer à bout portant.

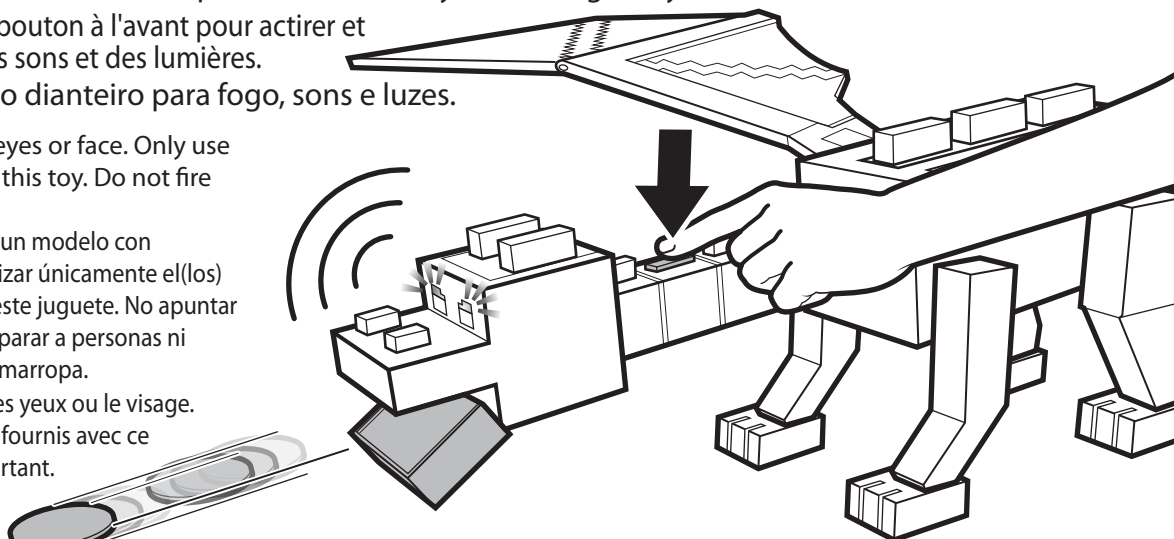


ATENÇÃO: Não apontar na direção dos olhos ou do rosto. Utilize apenas os projetéis fornecidos com este brinquedo. Não disparar excessivamente perto do alvo.

POUR JOUER • COMO BRINCAR


C1. Adjust wings.

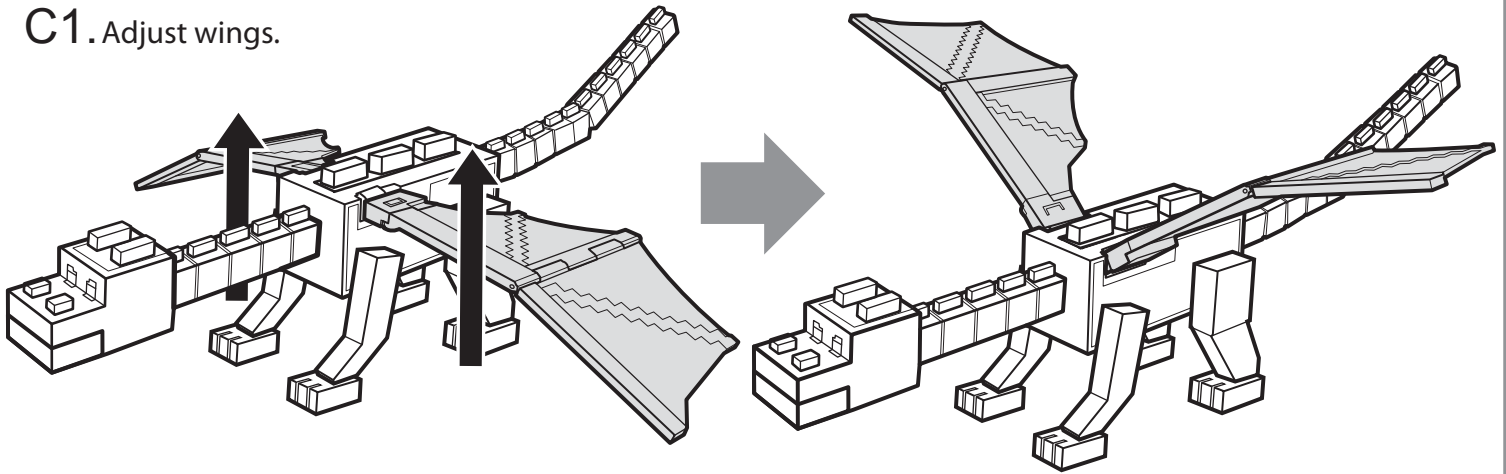

C2. Activate handle
by pulling it up.

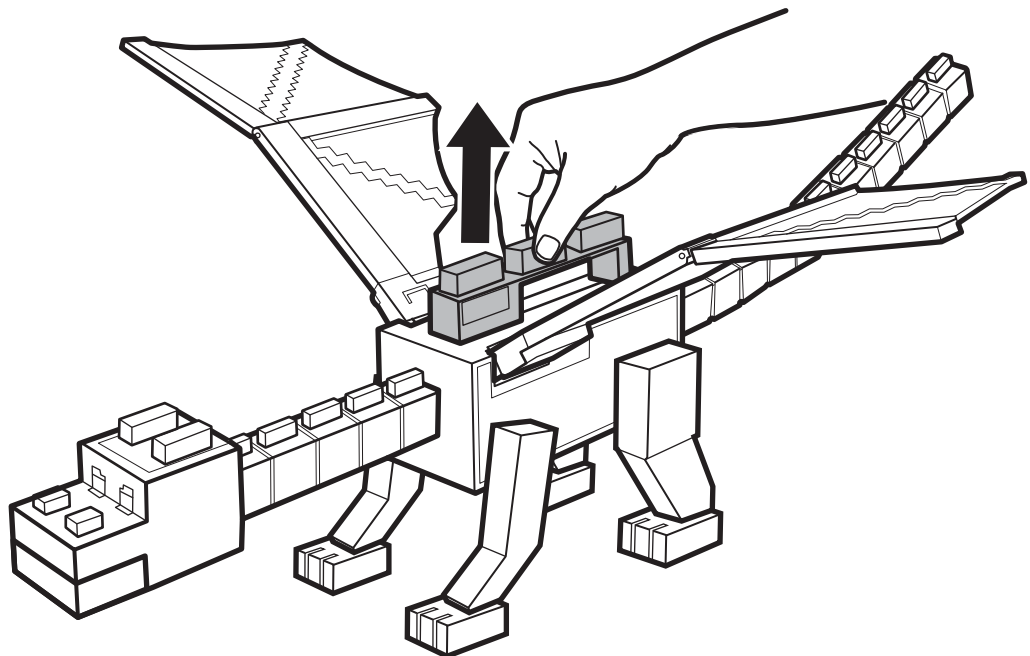


C3. Press the top button for
wing-flapping action
and for roaring sounds
and lights!

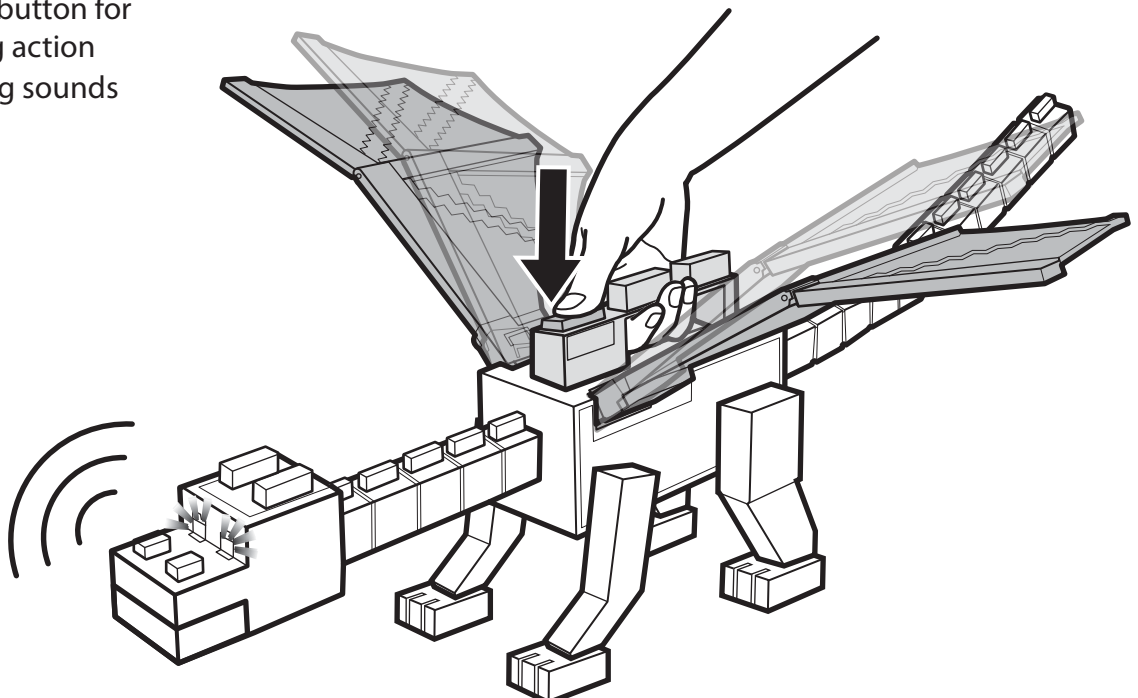

2. TO PLAY {CONT.}

D. Adjustable tail! Set the tail in different positions.

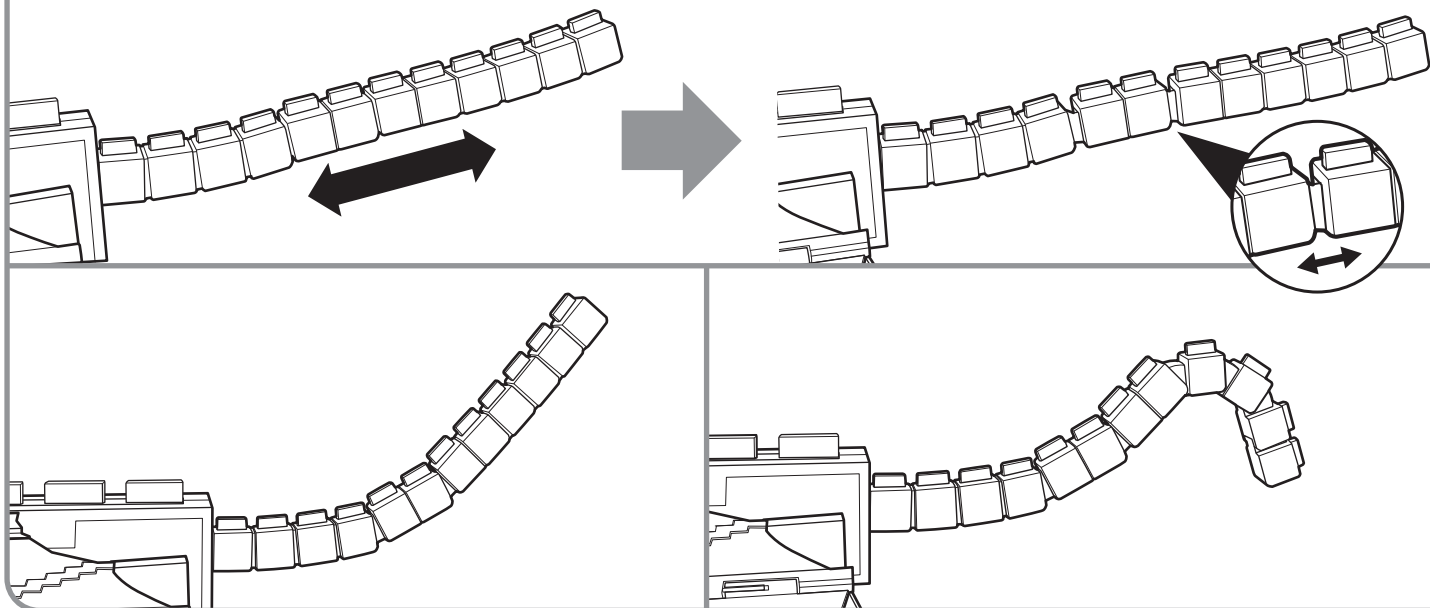


3. BATTERY REPLACEMENT

- Batteries included are for demonstration purposes only.
- Replace the batteries if lights dim or sounds distort.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AAA (LR03) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life, use alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction.

To resume normal operation, remove and reinstall the batteries.

NOTE: This product is equipped with an automatic shut-off feature that helps preserve battery life.

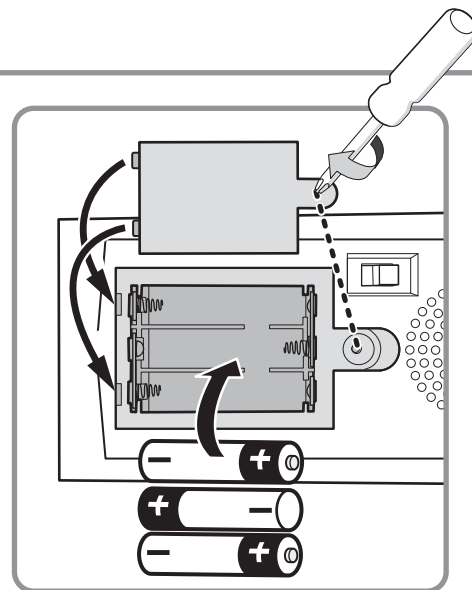

Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

© 2018 Mojang AB and Mojang Synergies AB. MINECRAFT and MOJANG are trademarks or registered trademarks of Mojang Synergies AB.

©2018 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.



FVG80-0970-G1
1101927003-DOM

? service.mattel.com

