

# Fisher-Price®



Keep these instructions for future reference,  
as they contain important information.

Requires three AA batteries (included).

Batteries included are for demonstration purposes only.

 
Only adults should replace batteries.

Tool required: Phillips screwdriver (not included).



For longer life, use **alkaline** batteries.

## FXC58

## REPLACE BATTERIES

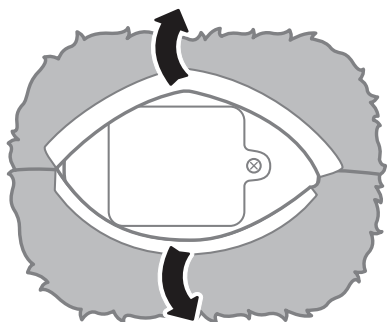


  - Open the fasteners and remove the electronic unit.

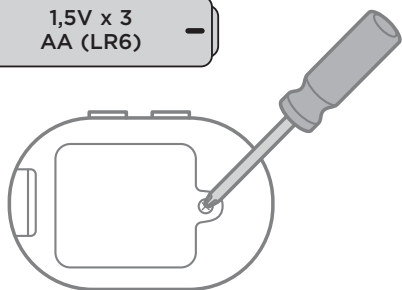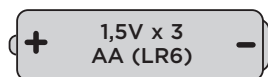

- Loosen the screw in the battery compartment door with a Phillips and remove the door.
- Remove the exhausted batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- When vibrations or sound from this toy become faint or stop, it's time for an adult to change the batteries.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.

## POWER-VOLUME & MODE SWITCHES

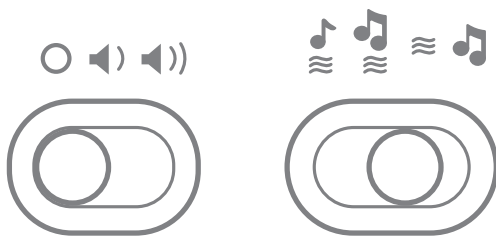 

- Before replacing the electronic unit, turn power on, select a volume level and mode for use.
  - ◀ On with Low Volume
  - ◀) On with High Volume
  - Off
- - ♪ Short Play
  - ♪♪ Long Play
  - ≡ Vibration Only
  - ♪ Music Only
- With the speaker facing the front of the toy, fit the electronic unit inside the toy. Close the fasteners.


## CARE

 - The plush cover is machine washable, but **first remove the electronic unit from the toy**. Place the plush cover in a pillow case and machine wash in cold water with a mild detergent on the gentle cycle. Do not use bleach. Tumble dry on low heat. Do not immerse the electronic unit.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

# COZY COMFORT

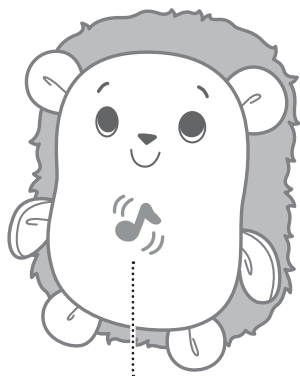

Press here to start music, sound effects or vibrations. Press and hold for a few seconds to turn off.



## **Short Play**

15 seconds of music and vibrations or a quick sound effect and vibrations



## **Long Play**

10 minutes of soothing music along with 5 minutes of calming vibrations



## **Vibration Only**

5 minutes of calming vibrations



## **Music Only**

10 minutes of soothing music

# NOTE

## **Battery Safety Information**

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+/-).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## **CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



service.fisher-price.com

**UNITED STATES:** 1-800-432-5437.

Fisher-Price, Inc., 636 Girard Avenue,  
East Aurora, NY 14052.

**GREAT BRITAIN:** Mattel UK Ltd,  
Vanwall Business Park, Maidenhead  
SL6 4UB. Helpline: 01628 500303;  
www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.

**CANADA:** 1-800-432-5437.

Mattel Canada Inc., 6155 Freemont  
Blvd., Mississauga, Ontario L5R 3W2.

**AUSTRALIA:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service  
1300 135 312.

**NEW ZEALAND:** 16-18 William  
Pickering Drive, Albany 1331,  
Auckland.

**ASIA:** Mattel East Asia Ltd.,  
Room 503-09, North Tower, World  
Finance Centre, Harbour City,  
Tsimshatsui, HK, China.  
Tel.: (852) 3185-6500.

**MALAYSIA:** Diimport & Diedarkan  
Oleh: Mattel Southeast Asia Pte. Ltd.,  
No 19-1, Tower 3 Avenue 7, Bangsar  
South City, No 8, Jalan Kerinchi,  
59200 Kuala Lumpur, Malaysia.  
Tel: 03-33419052.

**SOUTH AFRICA:** Mattel South Africa  
(PTY) LTD, Office 102 I3, 30 Melrose  
Boulevard, Johannesburg 2196.

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.