

Fisher-Price®

FXT05



⚠ WARNING

To prevent entanglement injury, never place the product in a crib or playpen.
Never add strings, ties or other items to the product.

Keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Requires three AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation and assembly: Phillips screwdriver (not included).

fisher-price.com



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Varwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Auckland 1331, Auckland.

South Africa: Mattel South Africa (PTY) LTD, Office 102 I3,
30 Melrose Boulevard, Johannesburg 2196.

Care



- The mat and seahorse (with the link removed) are machine washable. To remove the link from the seahorse fit the "T" end of the strap through the slot on the link. Wash them separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arches, submarine clacker, rollerball fish, crab teether, links, mirror toy and play panel are surface washable. Wipe them clean with damp cloth. Do not immerse the play panel.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Parts

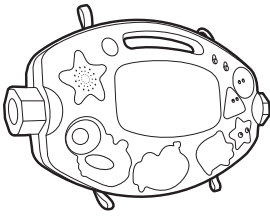

Play Panel



Seahorse



Crab Teether



Jellyfish Mirror




Submarine Clacker




Rollerball Fish



Mat

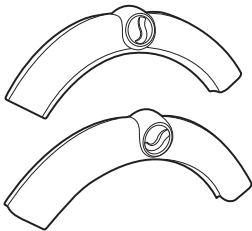

2 Arches

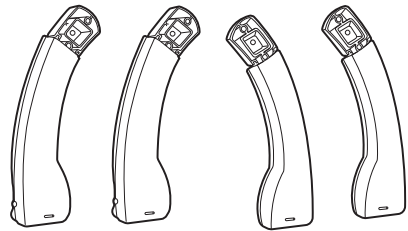

4 Legs




x 8

M4,5 x 16 mm Screw
SHOWN ACTUAL SIZE

Tighten and loosen screws with a Phillips
screwdriver. Do not over-tighten screws.

Battery Installation

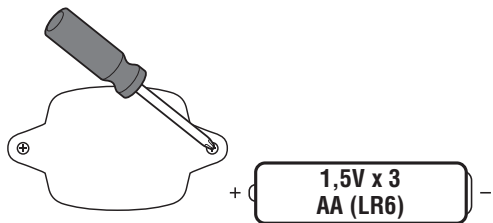

For longer life, use **alkaline** batteries.

- Locate the battery compartment door on the back of the play panel.
- Loosen the screws in the battery compartment door and remove the door.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- You may need to reset the electronics if the play panel begins to operate erratically. Slide the power-volume switch off and then back on.
- When sound or lights become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

One-time Arch Assembly

⚠ CAUTION

This package contains small parts.
For adult assembly only.

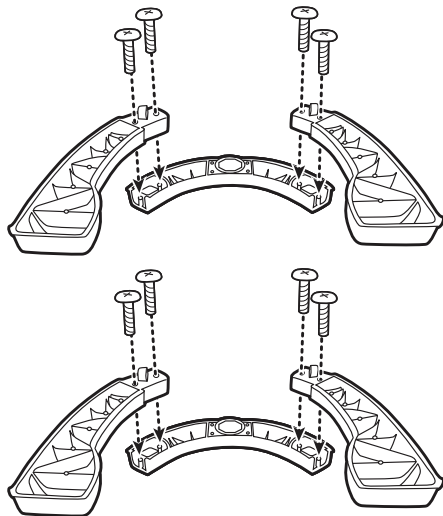

- Fit the legs to the arches. Then, insert two screws into each leg and tighten.



Newborn Gym Setup

1. _____

- At an angle that faces baby, fit the play panel into the socket in each arch.

2. _____

- Turn the knob on each arch to secure the play panel.

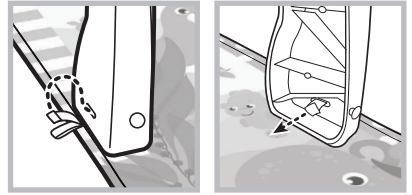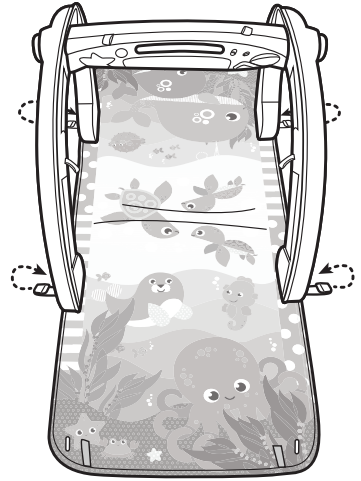


3. _____


- Place the arch assembly on the mat.
- Fit the mat "T" straps through the slot in each leg. Tug on the straps to be sure they're secured to the legs.

4. _____

- Attach toys with a link to the loops on the play panel for baby to play!

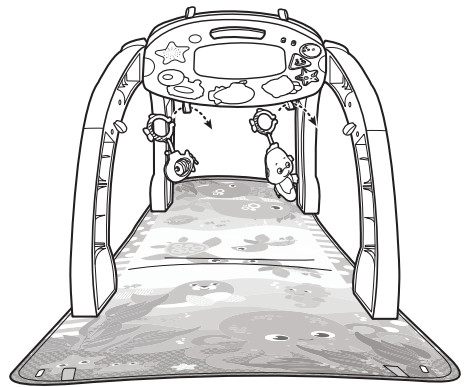


Crawl-Through Tunnel Setup

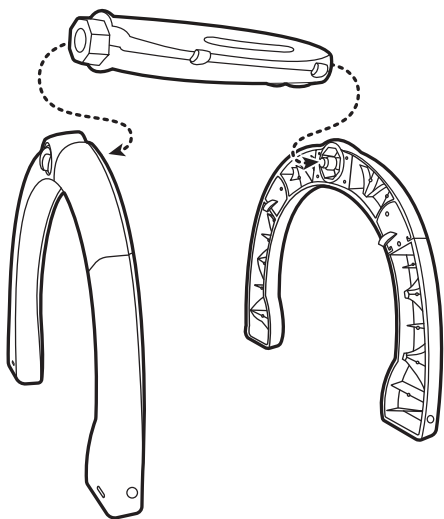


1. _____

- With the play panel facing down, fit it into the socket in each arch.

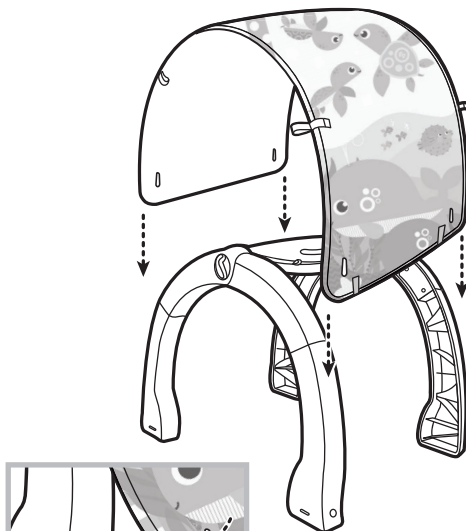


3. _____

- Place the mat on top of the assembly.
- Fasten the mat slots to the pegs on the end of each arch leg.

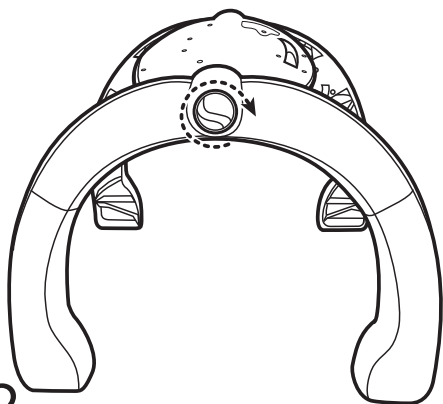

2. _____

- Turn the knob on each arch to secure the play panel.

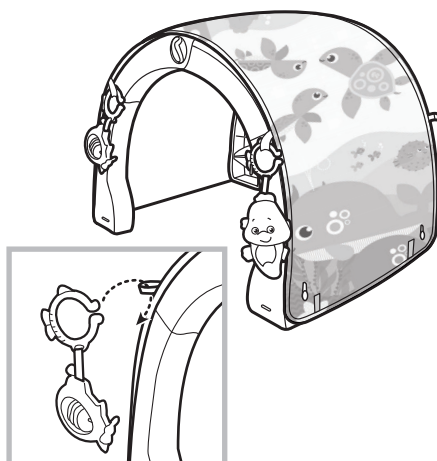


4. _____

- Attach the toys to any of the loops on the arches or the mat.


Stand and Play Table Setup

1.

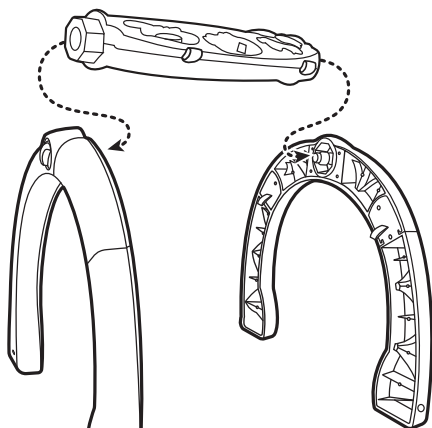


- With the play panel facing up, fit it into the socket in each arch.

2.

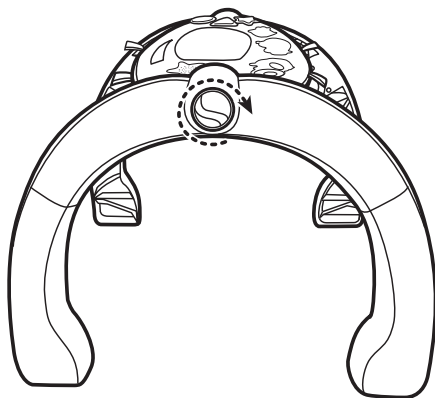


- Turn the knob on each arch to secure the play panel.

3.

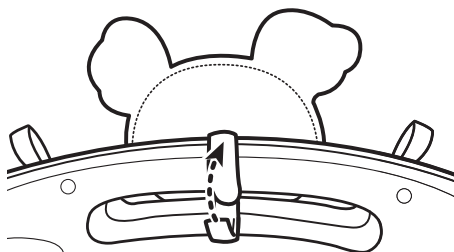



- Wrap the straps on the mirror toy around the handle on the play panel.

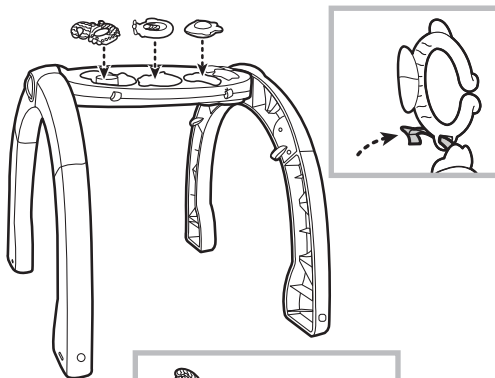

4.

- **"Snap"** the crab teether, submarine clacker and rollerball fish toys into the play panel.
Hint: You can remove the links from the toys, if you'd like. Simply fit the "T" end of the strap through the slot on the link.
- For easy toy removal, fit your finger into the recess near each toy and lift.

Get ready for a deep-sea learning adventure!

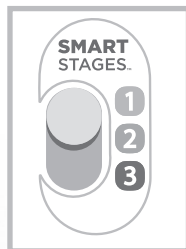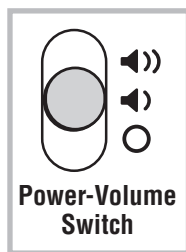

- Slide the power-volume switch to ON with low volume , ON with high volume  or OFF  when not in use.

- Slide the Smart Stages™ switch on the play panel to:

- 1 Sense**
Motion or a shape button press activates 15 minutes of music and a light show on the play panel! Baby can bat at toys when set up in gym or tunnel modes or press a shape button in table or take-along modes.
- 2 Discover**
Press a shape button for sound effects and fun music!
- 3 Explore**
Press a shape button to hear the puffer fish, crab, starfish, shape and color identified.