



## How To Play

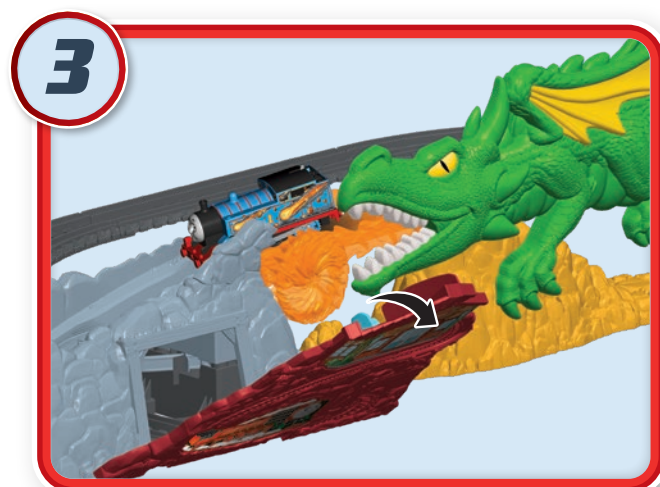

As Thomas and the dragon tip forward, the station collapses to reveal more track.

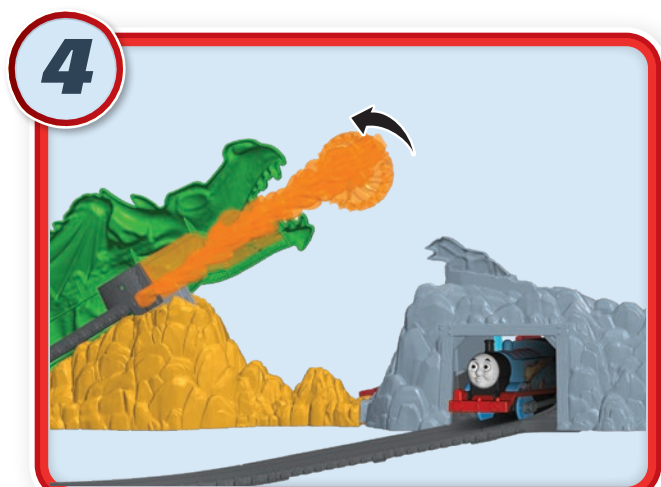

 
Thomas passes through the tunnel and automatically resets the dragon.

## Battery Information

### BATTERY INSTALLATION

Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries. For longer life use only alkaline batteries.


Required tool: Phillips screwdriver (not included)



### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

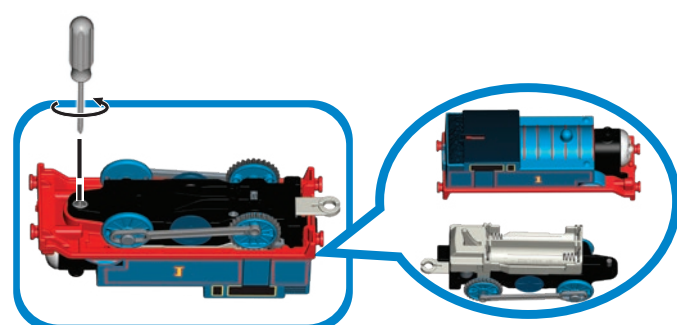

Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

**CAUTION:**  
To prevent entanglement, keep hair away from wheels.

**CONSUMER ASSISTANCE**  
1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Grand Avenue, East Aurora, NY 14052.  
Headline/registered consumers: 1-800-365-7470.

Outside the United States:  
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.  
Great Britain: Mattel UK Ltd., Vauxhall Business Park, Maidenhall SE18 4UB, Huddersfield: 01628 500303, www.service.mattel.com/uk  
Mattel Europe B.V., Gouda 1, 1186 MJ Amstelveen, Nederland.  
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Lonsdale Bag #970, Richmond, Victoria 3121 Australia.  
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.  
South Africa: Mattel South Africa (PTY) LTD, Office 102 B, 30 Melrose Boulevard, Johannesburg 2196.

Thomas the Tank Engine & Friends™



CREATED BY BRIT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.  
©2018 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.  
©2018 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2018 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**  
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
Tel.: (852) 3185-6500.



**Fisher-Price**

FXX66-0970-G1-1101936473-DOM




## DRAGON ESCAPE SET

### INSTRUCTIONS

Keep these instructions for future reference as they contain important information.



## What's Included

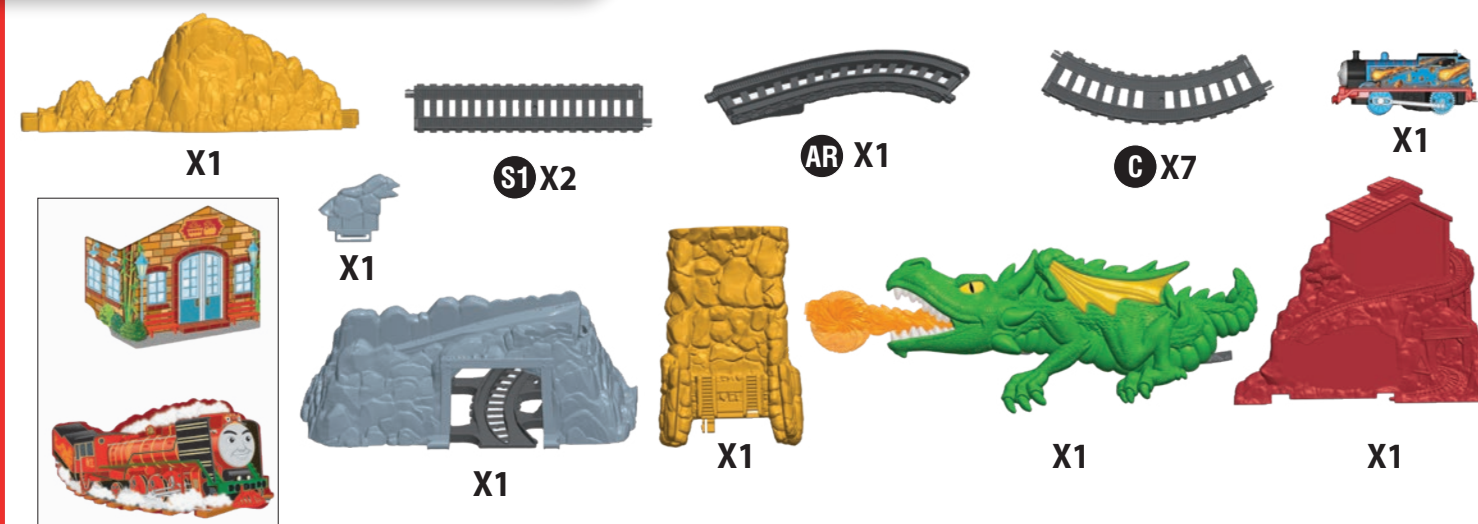

Labels X1

## Helpful Hints



Track marking codes are found on the bottom of tracks.


**★ ONE-TIME SNAP:** Assembly step that is marked with a star is a "one-time snap." Once this part is put together, it cannot be taken apart.

Note: Some engines may not work on this track set.





Metal engines will not activate motorized features of TrackMaster™ playsets.

**Adult assembly required.** No tools needed.


## Label Placement

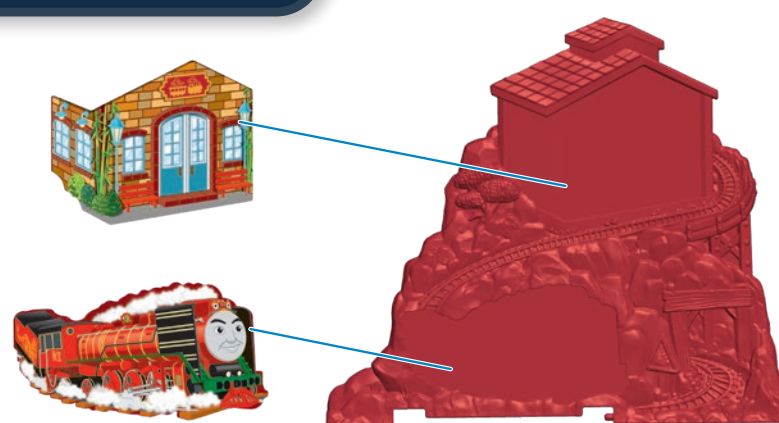

## Assembly

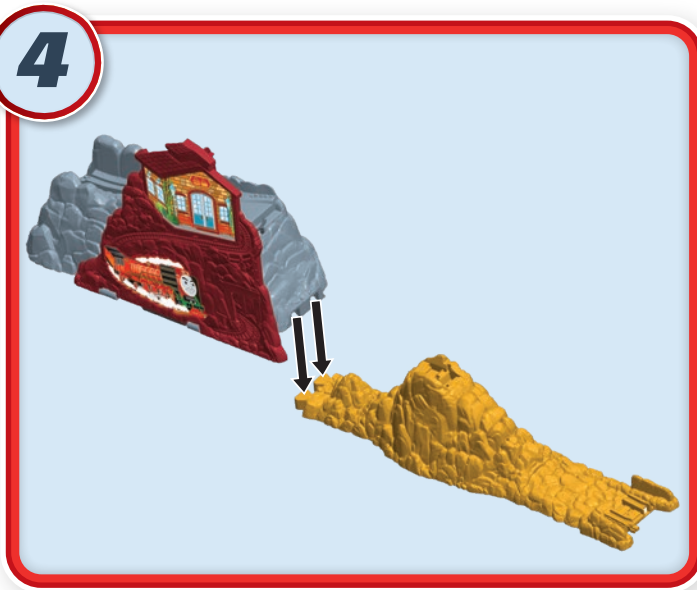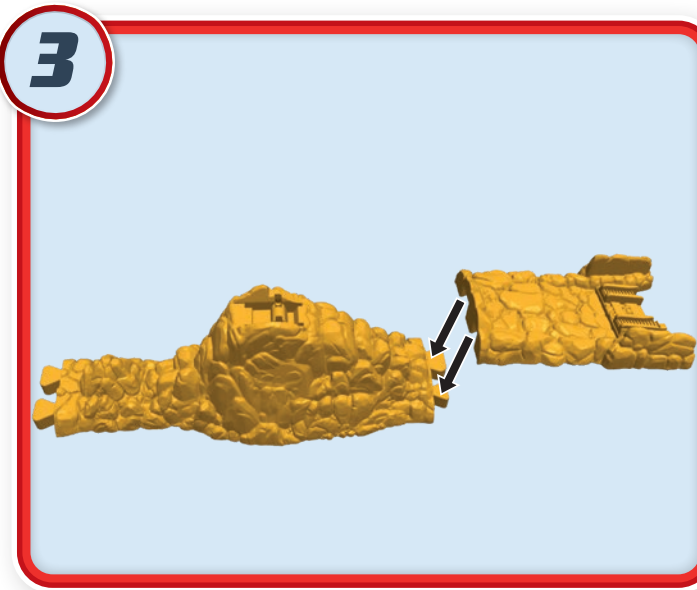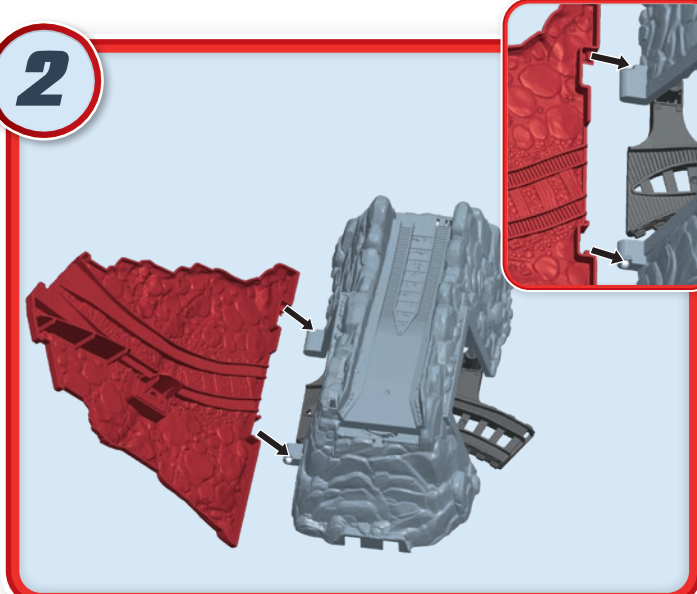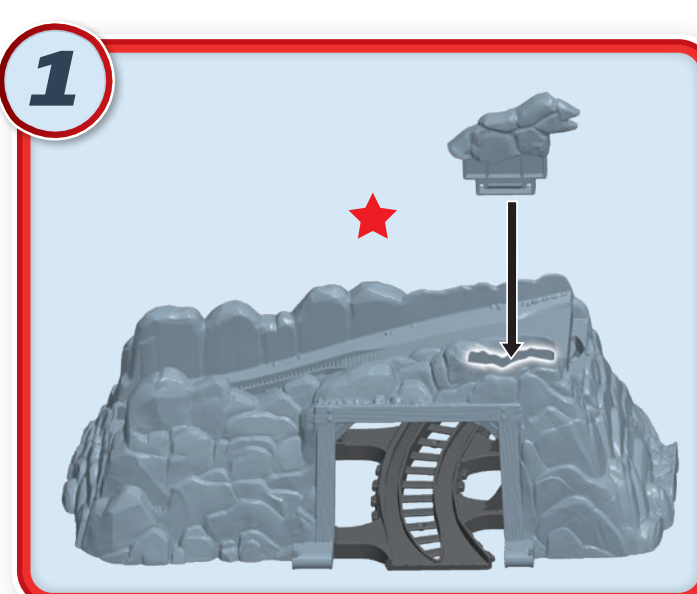

## Track Layout

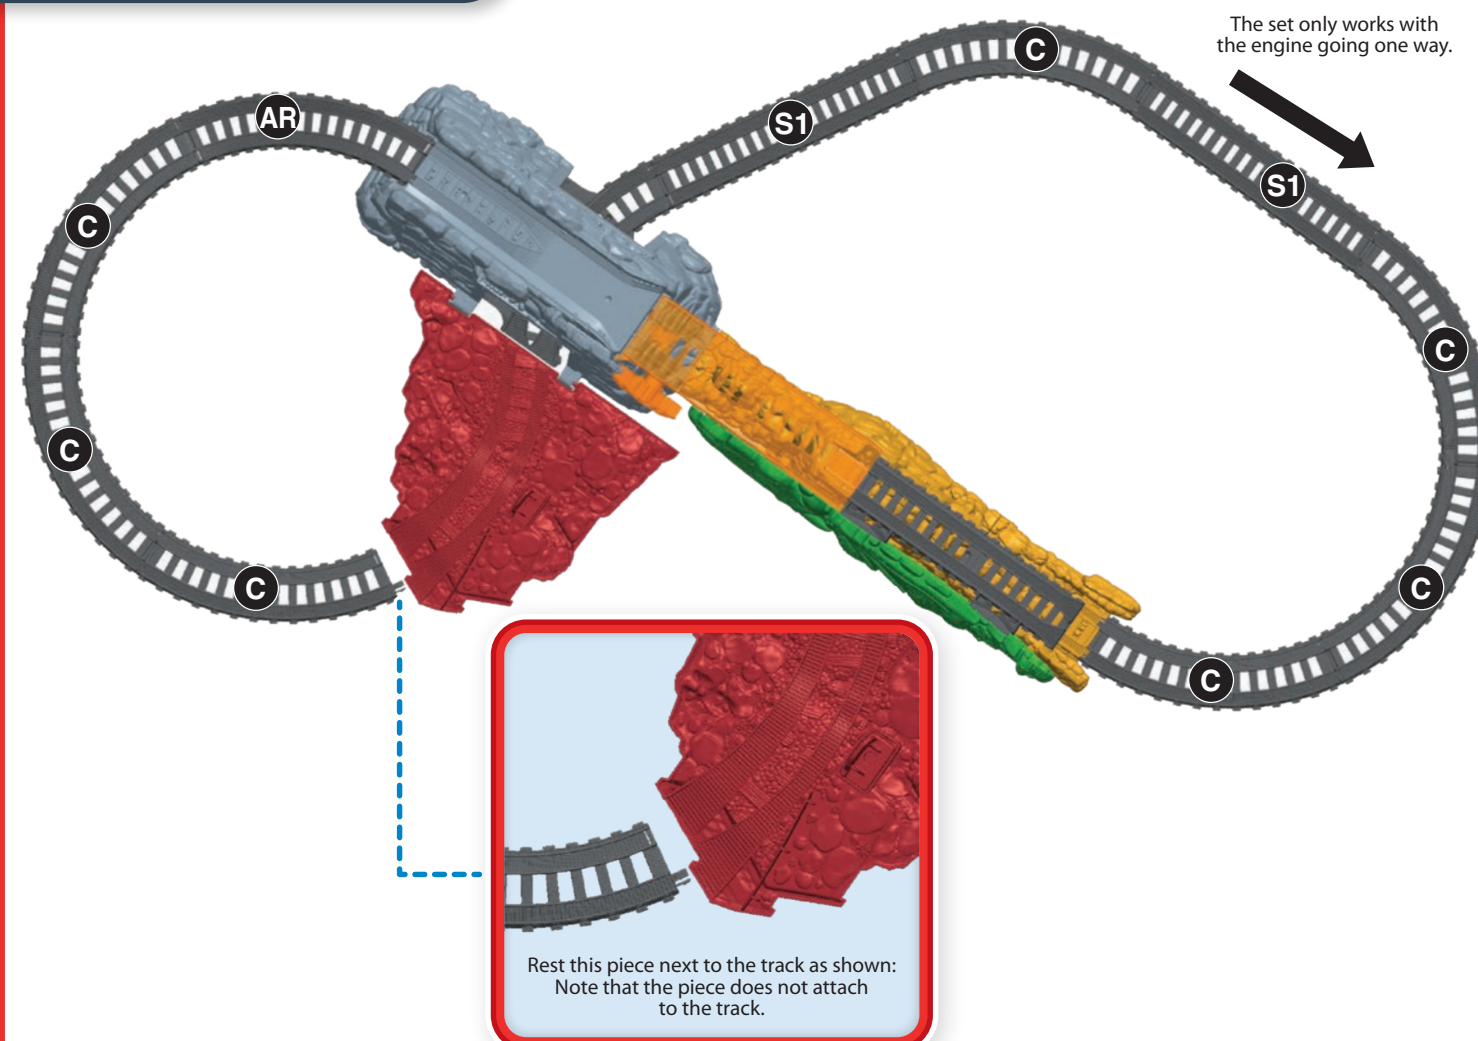

The set only works with the engine going one way.

Rest this piece next to the track as shown. Note that the piece does not attach to the track.

## How To Play

The engine should move forward in the direction shown.




Lift and set the collapsing station.



Thomas races up the hill behind the dragon.

8/31/2018 remark for G1:  
- Added Copy.

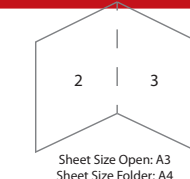

Item No : FXX66-0970-G1  
1101936473-DOM  
Size : A3  
Paper : Woodfree paper 70 gsm  
Color : 4C  
Date : 8/31/2018 (Emma Wei)