

CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only) M=F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052,

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2: www.service.mattel.com.

Great Britain: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk


Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331. Auckland.


Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A. ©2008 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel. Inc.


Fisher-Price Doodle Pro Designs

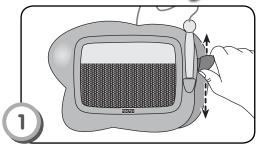

IMPORTANT! Before first-time use, completely darken the drawing screen with the drawing pen. Slide the eraser lever slowly up and down to clear the drawing screen. Repeat this procedure several times to enable the drawing screen to create the clearest, darkest images.

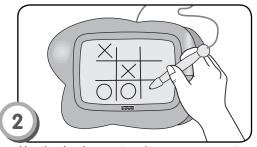

Use the drawing pen to write messages, create your own drawings or play games.

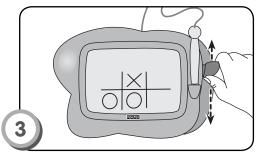

To erase the drawing screen, slide the eraser lever slowly up and down. Now you can create a new design!

IMPORTANT! To avoid damage to the drawing screen keep this toy away from extreme heat sources such as ovens, heaters and radiators.



Do not apply heavy pressure or force to the drawing screen. Heavy pressure is not necessary and could damage the drawing screen.

A light touch makes a dark line.



Use only the drawing pen included. Do not use any other object on the drawing screen.