


How-To video online! Go to...

play.lilgleemerz.com

Let's Start

CONTENTS: 1 Lil' Gleemerz™ Figure. Keep these instructions for future reference as they contain important information.

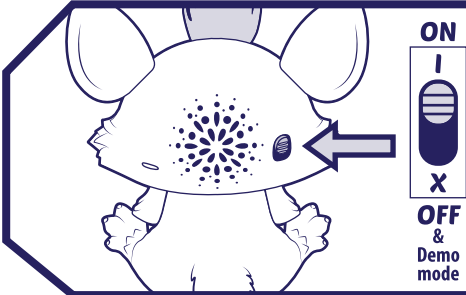


FOR FIRST-TIME USE

Flip the switch to the **ON (I)** position to take the toy out of demo mode; otherwise, the toy will not function properly. After doing this, the **X** becomes the **OFF** position on the switch.




SLEEP MODE NOTE: Your friend will go into sleep mode after a few minutes of inactivity. Wake her up by **pressing the NOSE for 2 seconds** or **flipping the switch OFF (X) and then back ON (I) again.**

At a Glance

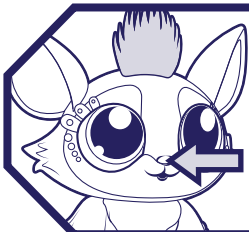Use this as a Cheat Sheet for how to interact with your Lil' Gleemerz™ Touch Points. For more info about how to play within each mode, see **Let's Play!**




Press My NOSE
My nose is how you change modes!
Press it to toggle through:


-  **Hangout Mode**
-  **Light Party Mode**
-  **Game Mode**




Pinch TAIL Once, Double-pinch or Hold
Pinch where you feel the button inside the tip for game play control and more interaction.

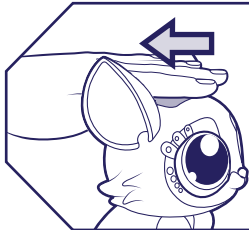


Pet My HEAD Front To Back
I love this! Find out what I'll do.

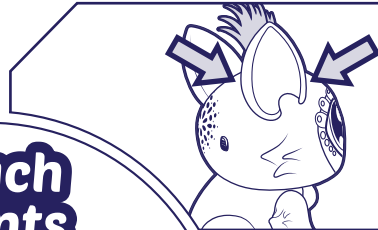


Press-and-Hold FOREHEAD and BACK OF HEAD Together
Let's get our gleem on!

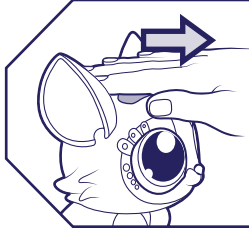


Pet My HEAD Back To Front
Discover how I react!

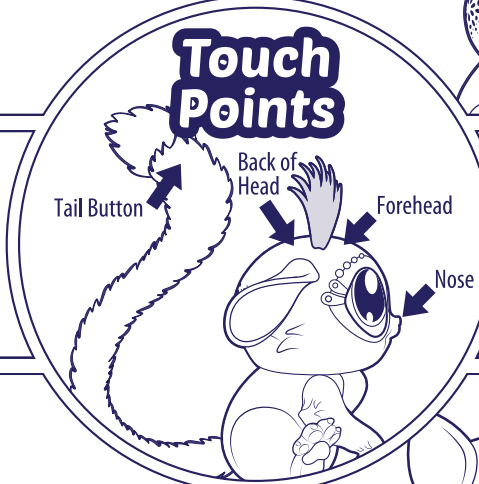


Press-and-Hold FOREHEAD
I've got surprises!

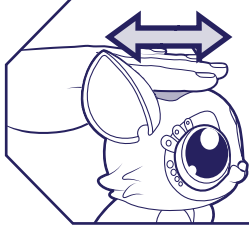


Rub My HEAD Back And Forth
Hmmm... how do I feel about this? Try it!

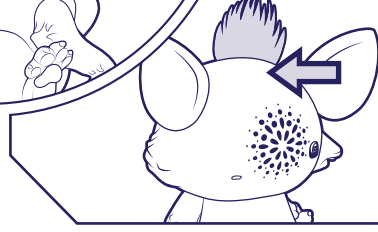

Press-and-Hold BACK OF HEAD
Aren't I funny?

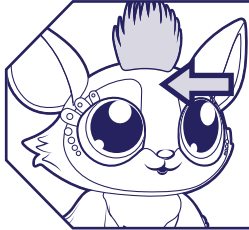

Tap My FOREHEAD
How will I respond?

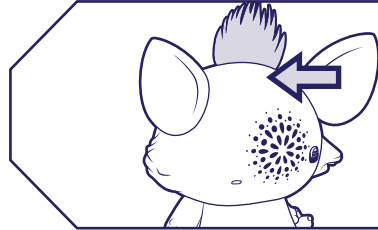


Tap BACK OF MY HEAD
Wow, additional responses!

Let's Play!

Hangout Mode

Press the nose to toggle modes until your Lil' Gleemerz™ says:

Let's hang out and play!

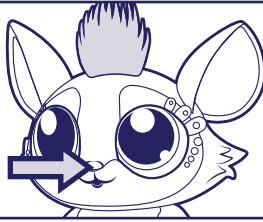


Interact with your friend through her head sensors and tail button (See **At a Glance**). She will respond with different phrases and colored lights!

Light Party Mode

Press the nose to toggle modes until your Lil' Gleemerz™ says:

Let's have a light party!

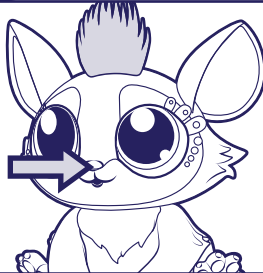

- 1 Clap or play music and your friend will react to the beat by putting on a light show with her rainbow tail and flashing eyes!
- 2 Press the tail button to change the light colors and pattern.
- 3 Pet head to change the direction of the light pattern.




NOTE: Make sure your Lil' Gleemerz™ is in a quiet area so that she isn't picking up background noise; she needs to "hear" only your music or clapping.


Game Mode

Press the nose to toggle modes until your Lil' Gleemerz™ says:

Let's play a game!

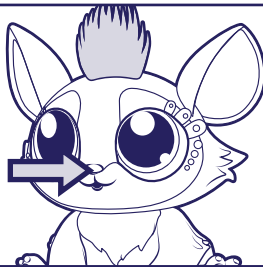

- 1 Pet head to scroll through the 3 games!
- 2 Reverse direction of petting to scroll back.
- 3 When you hear the name of the game you want, wait for your Lil' Gleemerz™ to tell you to press the tail to start.

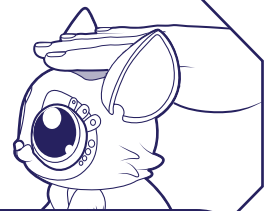

PARENTAL TIP! You can lower the volume during Game Mode by pressing the tail button for 4 seconds; the volume will be restored the next time the toy powers down or leaves this mode.

Game 1: Catch the Kiss ...but dodge the fart!




- 1 Your Lil' Gleemerz™ friend will send green lights and kisses to the tip of her tail; catch them by pressing the tip when they reach the end.
- 2 But be warned: your funny friend will sometimes send red lights with farts instead of kisses! Avoid pressing the tail when she's farting.
- 3 The lights will get faster as you keep catching the kisses. At the end of the game, she will tell you how well you did.

Game 2: Tail Tennis



- 1 Bounce the tail lights back and forth with your Lil' Gleemerz™ friend.
- 2 She will send green lights down her tail to the tip; when they reach the tip, pinch her tail to send the lights back to her.
- 3 The game will get faster as you continue to successfully bounce the light back. At the end of the game, she will tell you how well you did.

Game 3: Stop on the Spot

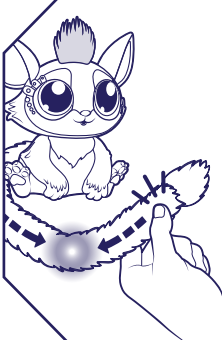

- 1 There will be a green light at the center of the tail; this is the target light.
- 2 A red light will bounce up and down the tail; when the red light crosses the green light, they will turn white — that's when you want to press the tail button to hit the target.
- 3 The game will get faster each time you successfully hit the target. At the end of the game, she will tell you how well you did.

Troubleshooting

If your Lil' Gleemerz™ isn't responding well, try flipping the switch to **OFF (X)** and then back **ON (I)**.

If the tail lights dim or become yellow, if there are sound distortions or clicking, or if the toy directs you to change the batteries, please change the batteries; use only Alkaline batteries (see **Battery Replacement**).


If your Lil' Gleemerz™ isn't responding to clapping or music, make sure you are in Light Party Mode by pressing her nose to toggle through the modes. If it still isn't responding, make sure you are in a quiet location so she isn't picking up background noise.

Battery Replacement

Includes 3 AAA (R03) carbon zinc batteries for demonstration purposes only. Replace batteries when sounds become distorted, lights become faint, the play modes do not work properly, or the toy directs you to change the batteries.

To Replace Batteries

Use a Phillips head screwdriver (not included) to open the battery cover. Insert 3 new AAA (LR03) alkaline batteries as shown. For longer life, use alkaline batteries. Replace battery cover and tighten screw. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by reinstalling the batteries.

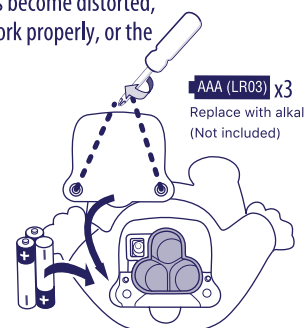

AAA (LR03) x3
Replace with alkaline batteries
(Not included)



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.