


Fisher-Price®

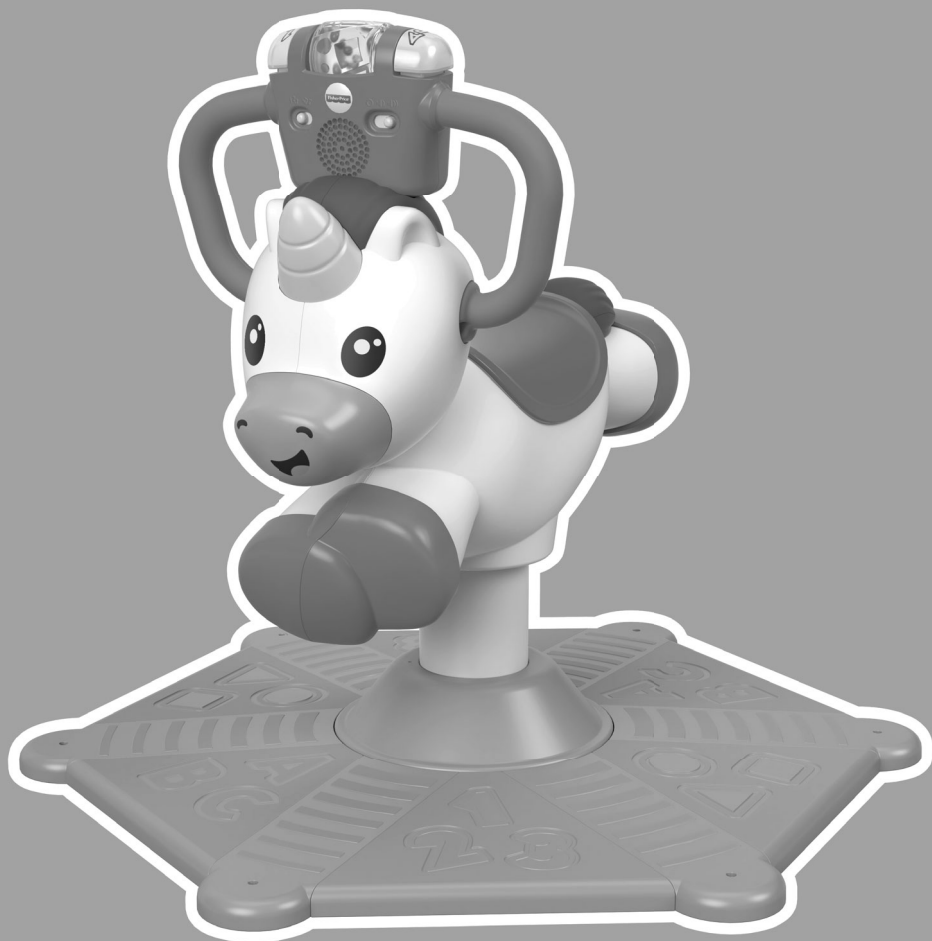

GGD19

ASSEMBLY GUIDE



UNITED STATES: 1-800-432-5437. Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

CANADA: 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

MALAYSIA: Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-33419052.

SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

GGD19-0970
1102061717-DOM

©2018 Mattel.
PRINTED IN CHINA

BEFORE YOU BEGIN



Keep these instructions for future reference as they contain important information.




Adult assembly is required. You'll need a Phillips screwdriver (not included) for assembly and battery installation. Do not over-tighten screws.



Set aside 30 minutes for assembly. Assembly instructions are on the back side of this sheet.



Clean with a damp cloth. Do not immerse.

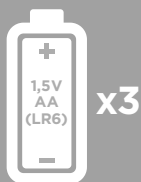

Three AA (LR6) **alkaline** batteries are required (not included).

For longer life, use **alkaline** batteries.

NOTE

Adult supervision required.

For children able to get on and off unassisted.

This product is intended for use indoors on carpeted surfaces.

This product spins only when a child is sitting on the seat.

Maximum weight: 55 lb (25 kg).

This toy has no consumer serviceable parts. Do not take this toy apart.

Check the plastic parts regularly and if broken or cracked, dispose of them properly.

Actual product may vary from images.

⚠ CAUTION

This package contains small parts. For adult assembly only.

INSTALL BATTERIES


Locate the battery compartment on the back of the handlebar.

Loosen the screw in the battery door and remove the door.

Insert three AA (LR6) **alkaline** batteries.


Replace the battery door and tighten the screw.

When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries.

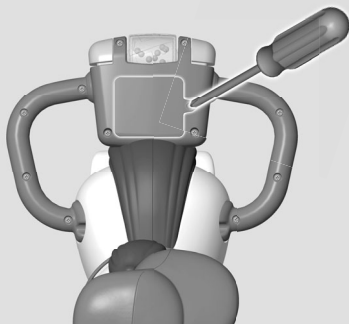


READY TO BOUNCE AND LEARN

Spin the roller for colorful lights, phrases, and a song. Press the ABC or 123 buttons to hear learning songs, phrases, and sounds.

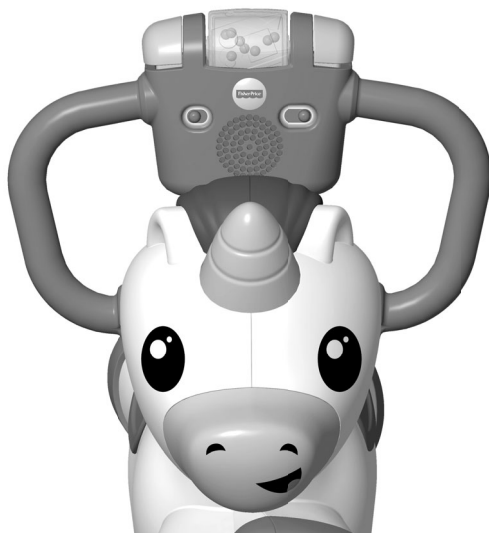


123 🎵

 

Slide to **123** for fun phrases that teach baby letters, numbers, and colors as they bounce along.

Slide to 🎵 and start bouncing to hear songs that encourage baby to bounce to the beat.

 🔊 🔊 🔊



Slide to turn power ON with low volume 🔊, ON with high volume 🔊) or OFF 🔊 when finished playing.

If this product begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

CONSUMER INFORMATION

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
 - Insert batteries as indicated inside the battery compartment (+ and -).
 - Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
 - Never short-circuit the battery terminals.
 - Use only batteries of the same or equivalent type, as recommended.
 - Do not charge non-rechargeable batteries.
 - Remove rechargeable batteries from the product before charging.
 - If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
-

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.




L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

ASSEMBLED PARTS




x 10


M5 x 2,2 cm

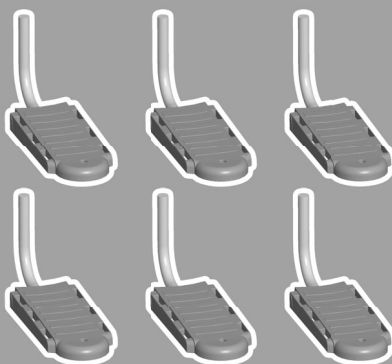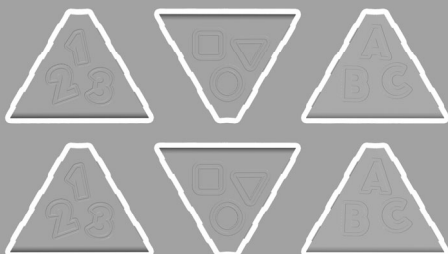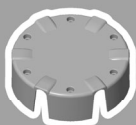





ASSEMBLY

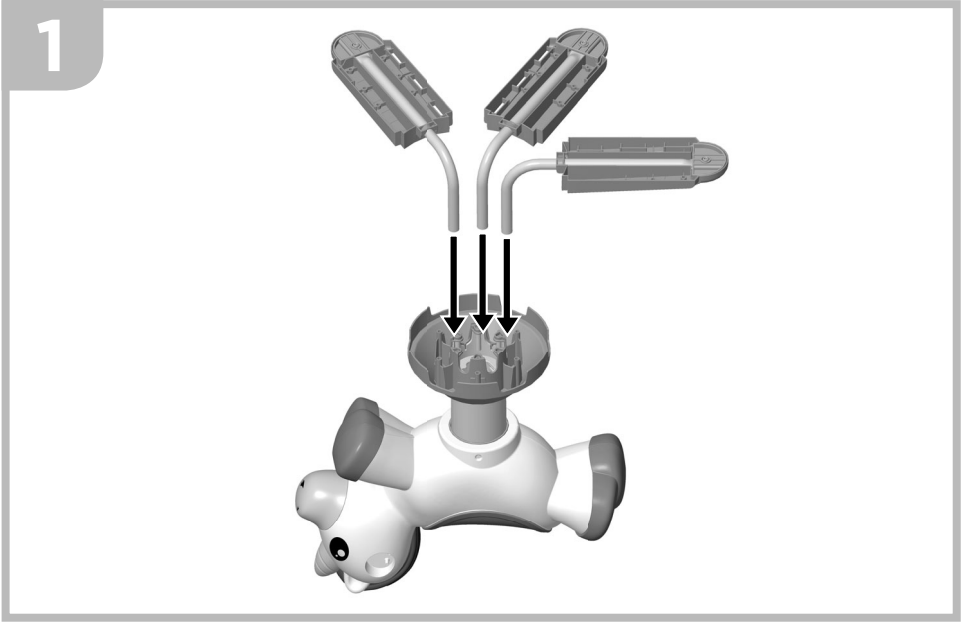

ASSEMBLY

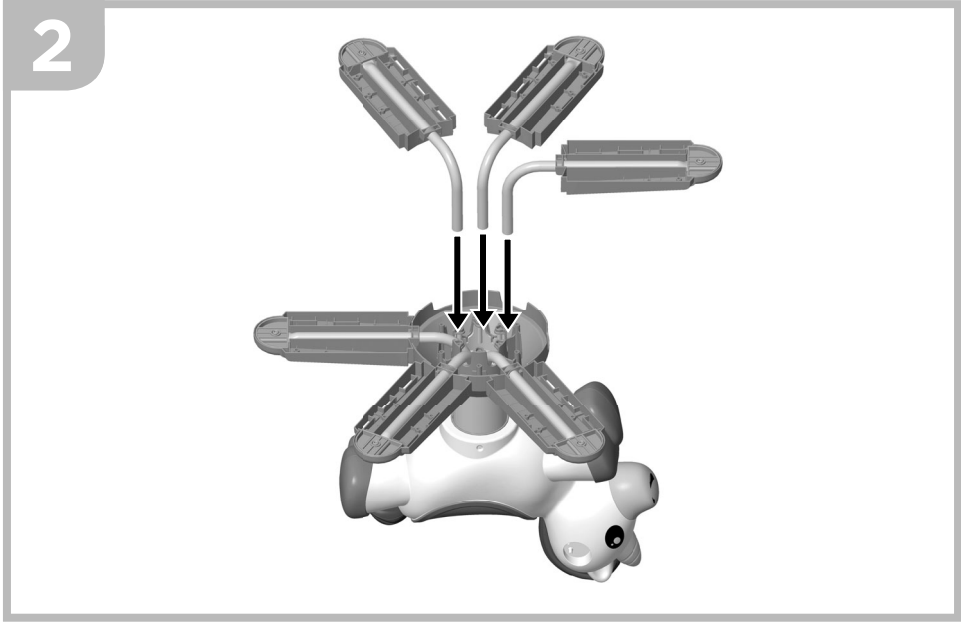


ASSEMBLY

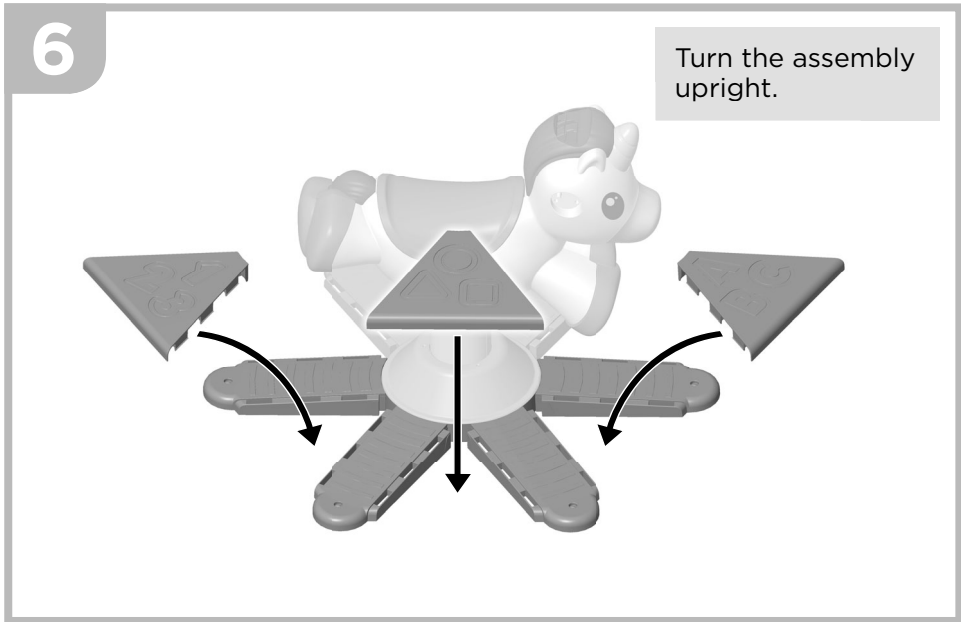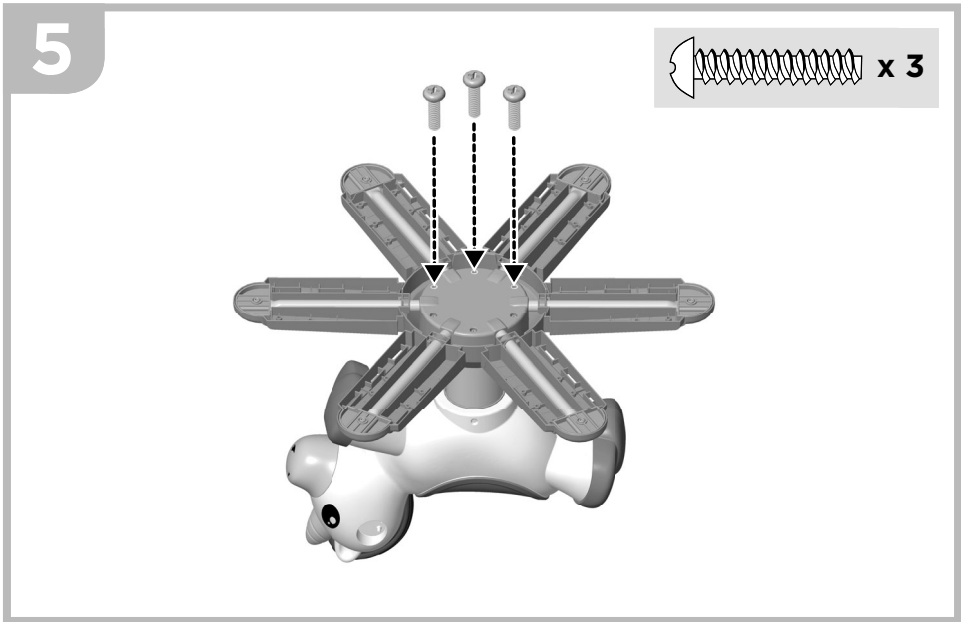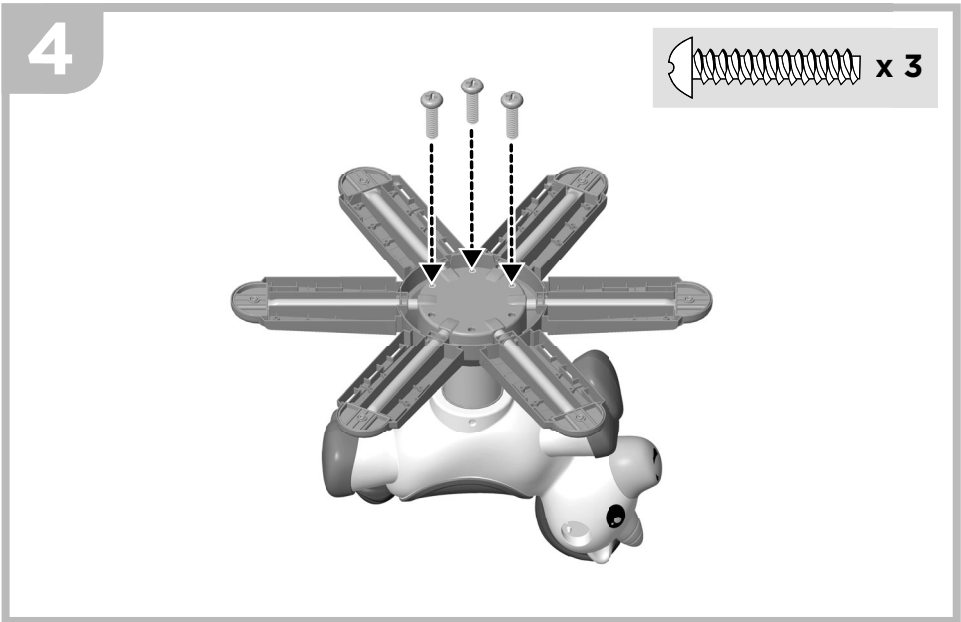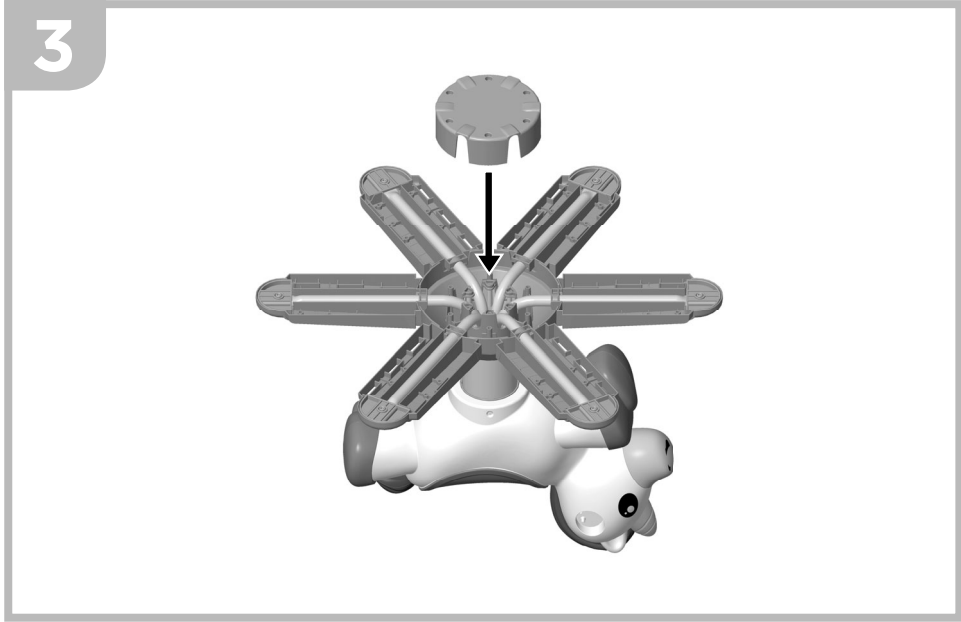


ASSEMBLY

7

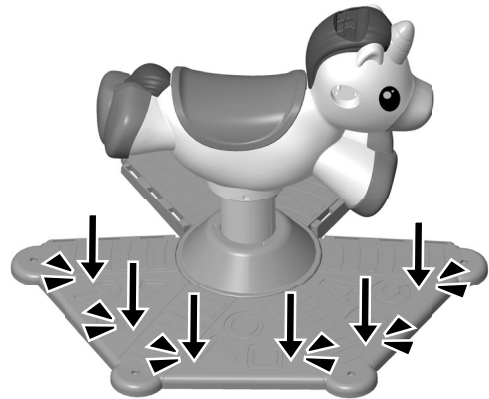


ASSEMBLY

8

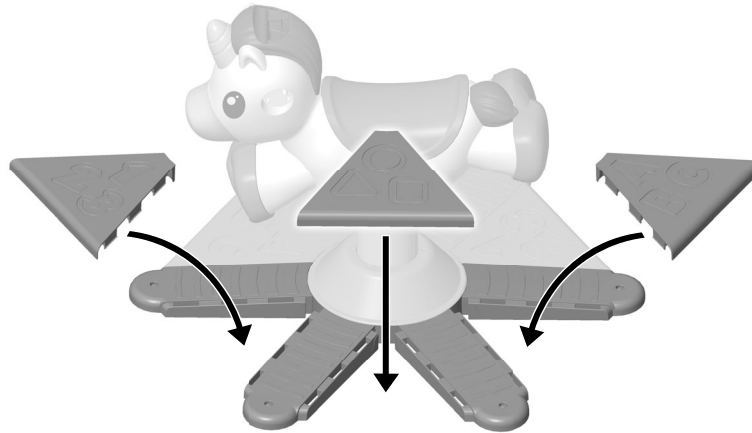

ASSEMBLY

9

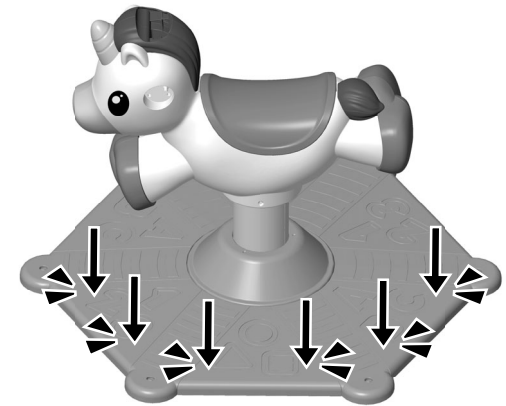


10




10

11

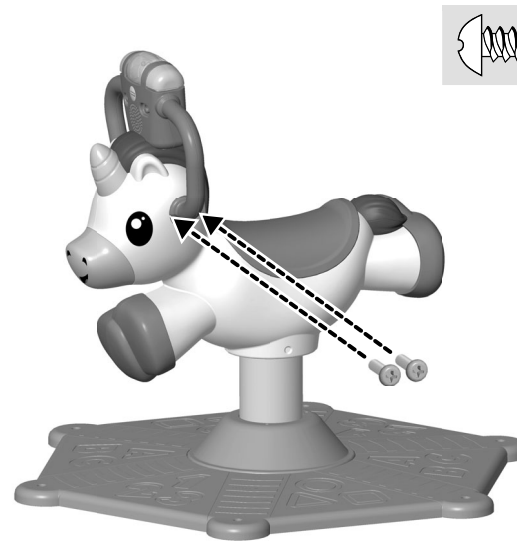

11

12

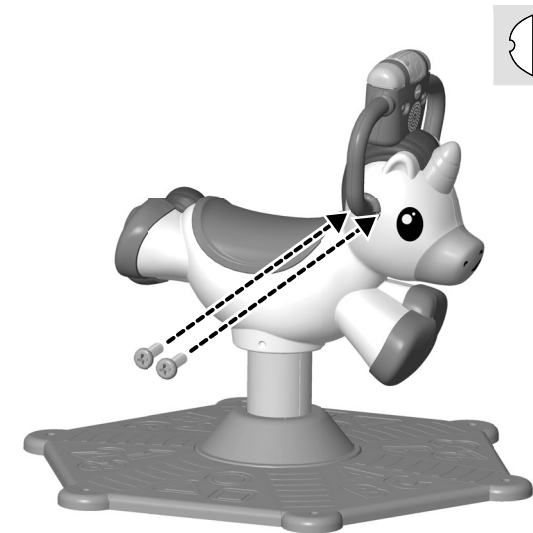

12