

Ready, set, go!



Fisher-Price®

LittlePeople®

Fisher-Price®

FHG51
Take Turns Skyway™



LittlePeople®

ASSEMBLY GUIDE

fisher-price.com/assembly/FHG51

BEFORE YOU BEGIN:



Keep these instructions for future reference as they contain important information.




Adult assembly is required.

You'll need a Phillips screwdriver (not included) for assembly and battery installation.



Set aside about 60 minutes for assembly!

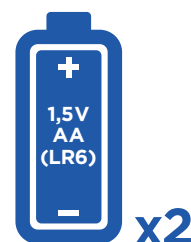

Two AA (LR6) alkaline batteries are required (not included).

For longer life, use **alkaline** batteries.




Clean with a damp cloth. Do not immerse.




Questions? Scan this code!
fisher-price.com/assembly/FHG51


ASSEMBLY TIPS:

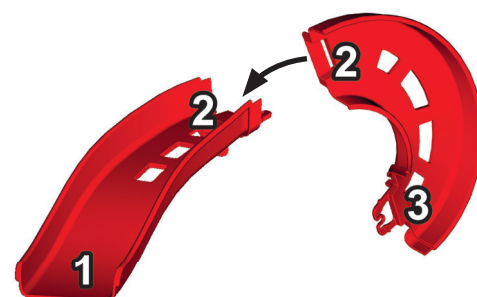

 All red tracks are labeled with numbers on the bottom side. Simply match the numbers: 2 → 2, 3 → 3, etc.!

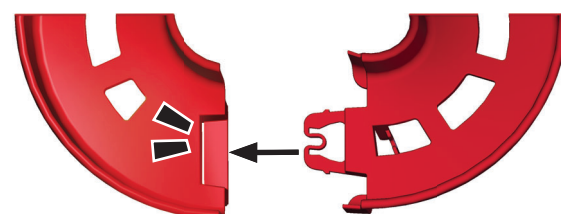

"Snap" track pieces together.

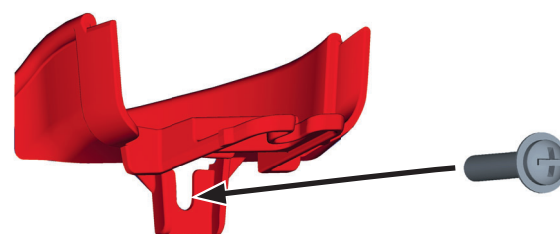 


Fasten tracks with a notched tab to the toy frame with a screw.



It's easier to assemble the last track first!
Find track 24, turn to the assembly section and begin assembly.

INSTALL BATTERIES:

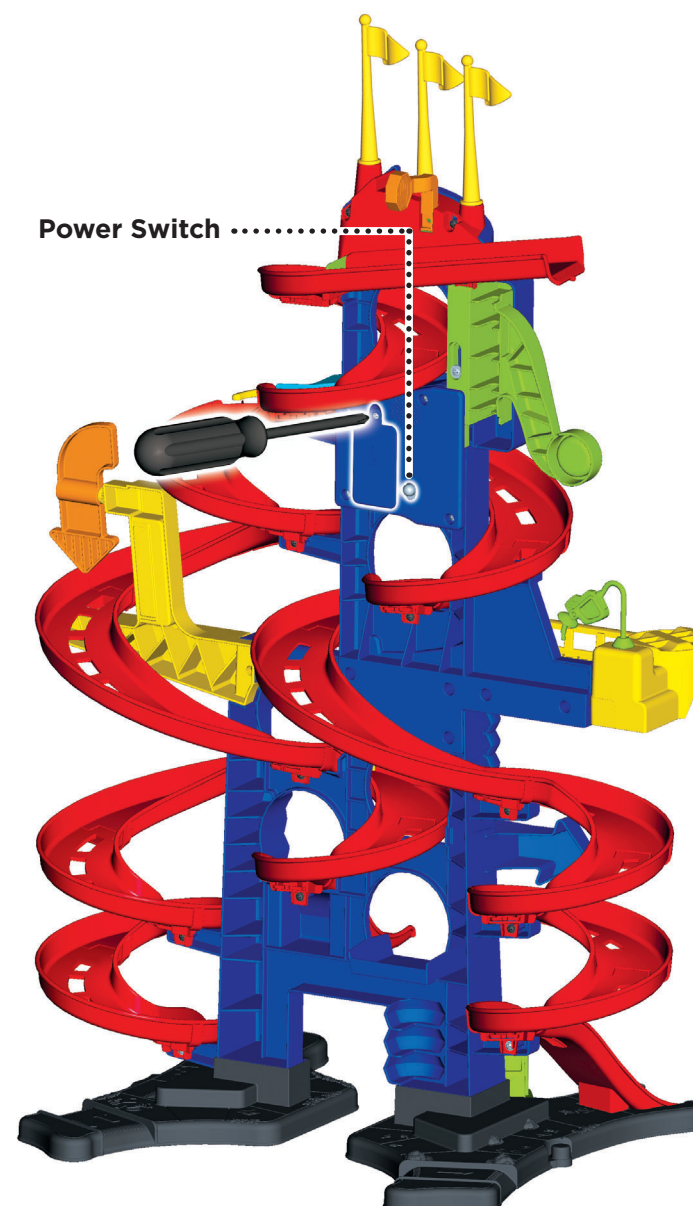

Loosen the screw in the battery door and remove the door.

Insert two AA (LR6) **alkaline** batteries.

Replace the battery door and tighten the screw. Do not over-tighten.

The electronics may need to be reset if the toy operates erratically. Slide the power switch off and back on.




When sound becomes faint or stops, it's time for an adult to change the batteries.

PARTS:


CAUTION

This package contains small parts. For adult assembly only.


x 20
3,5 mm x 16 mm







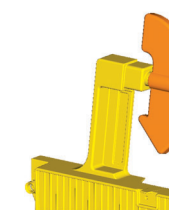
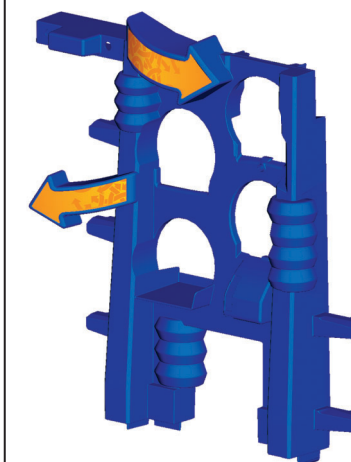
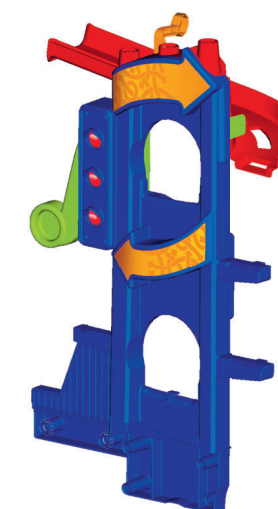











PARTS:

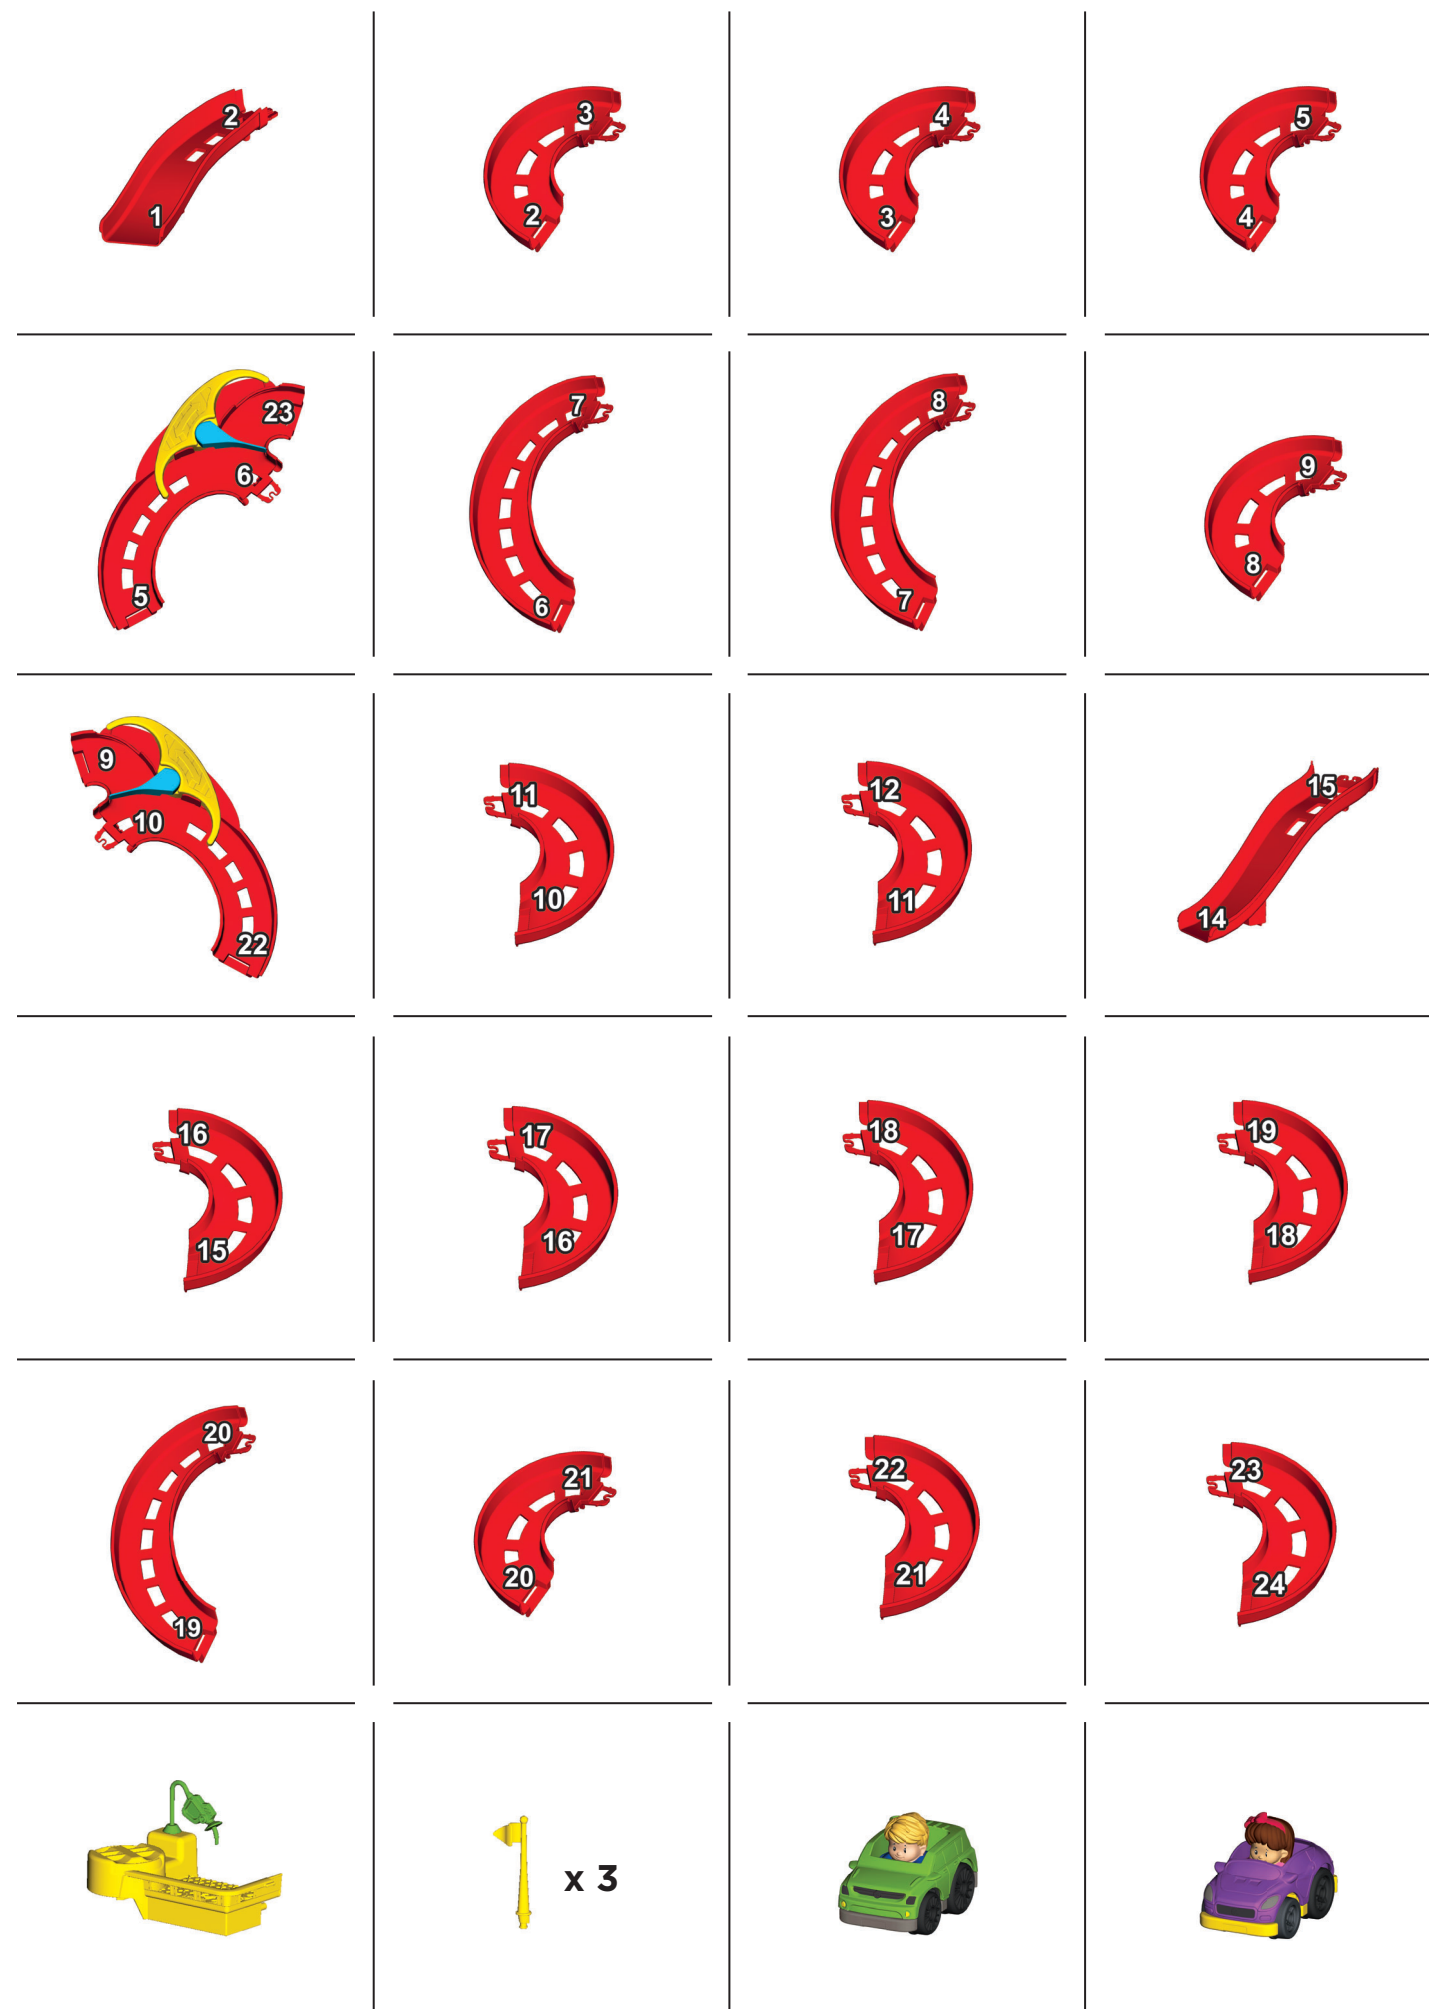


ASSEMBLY:

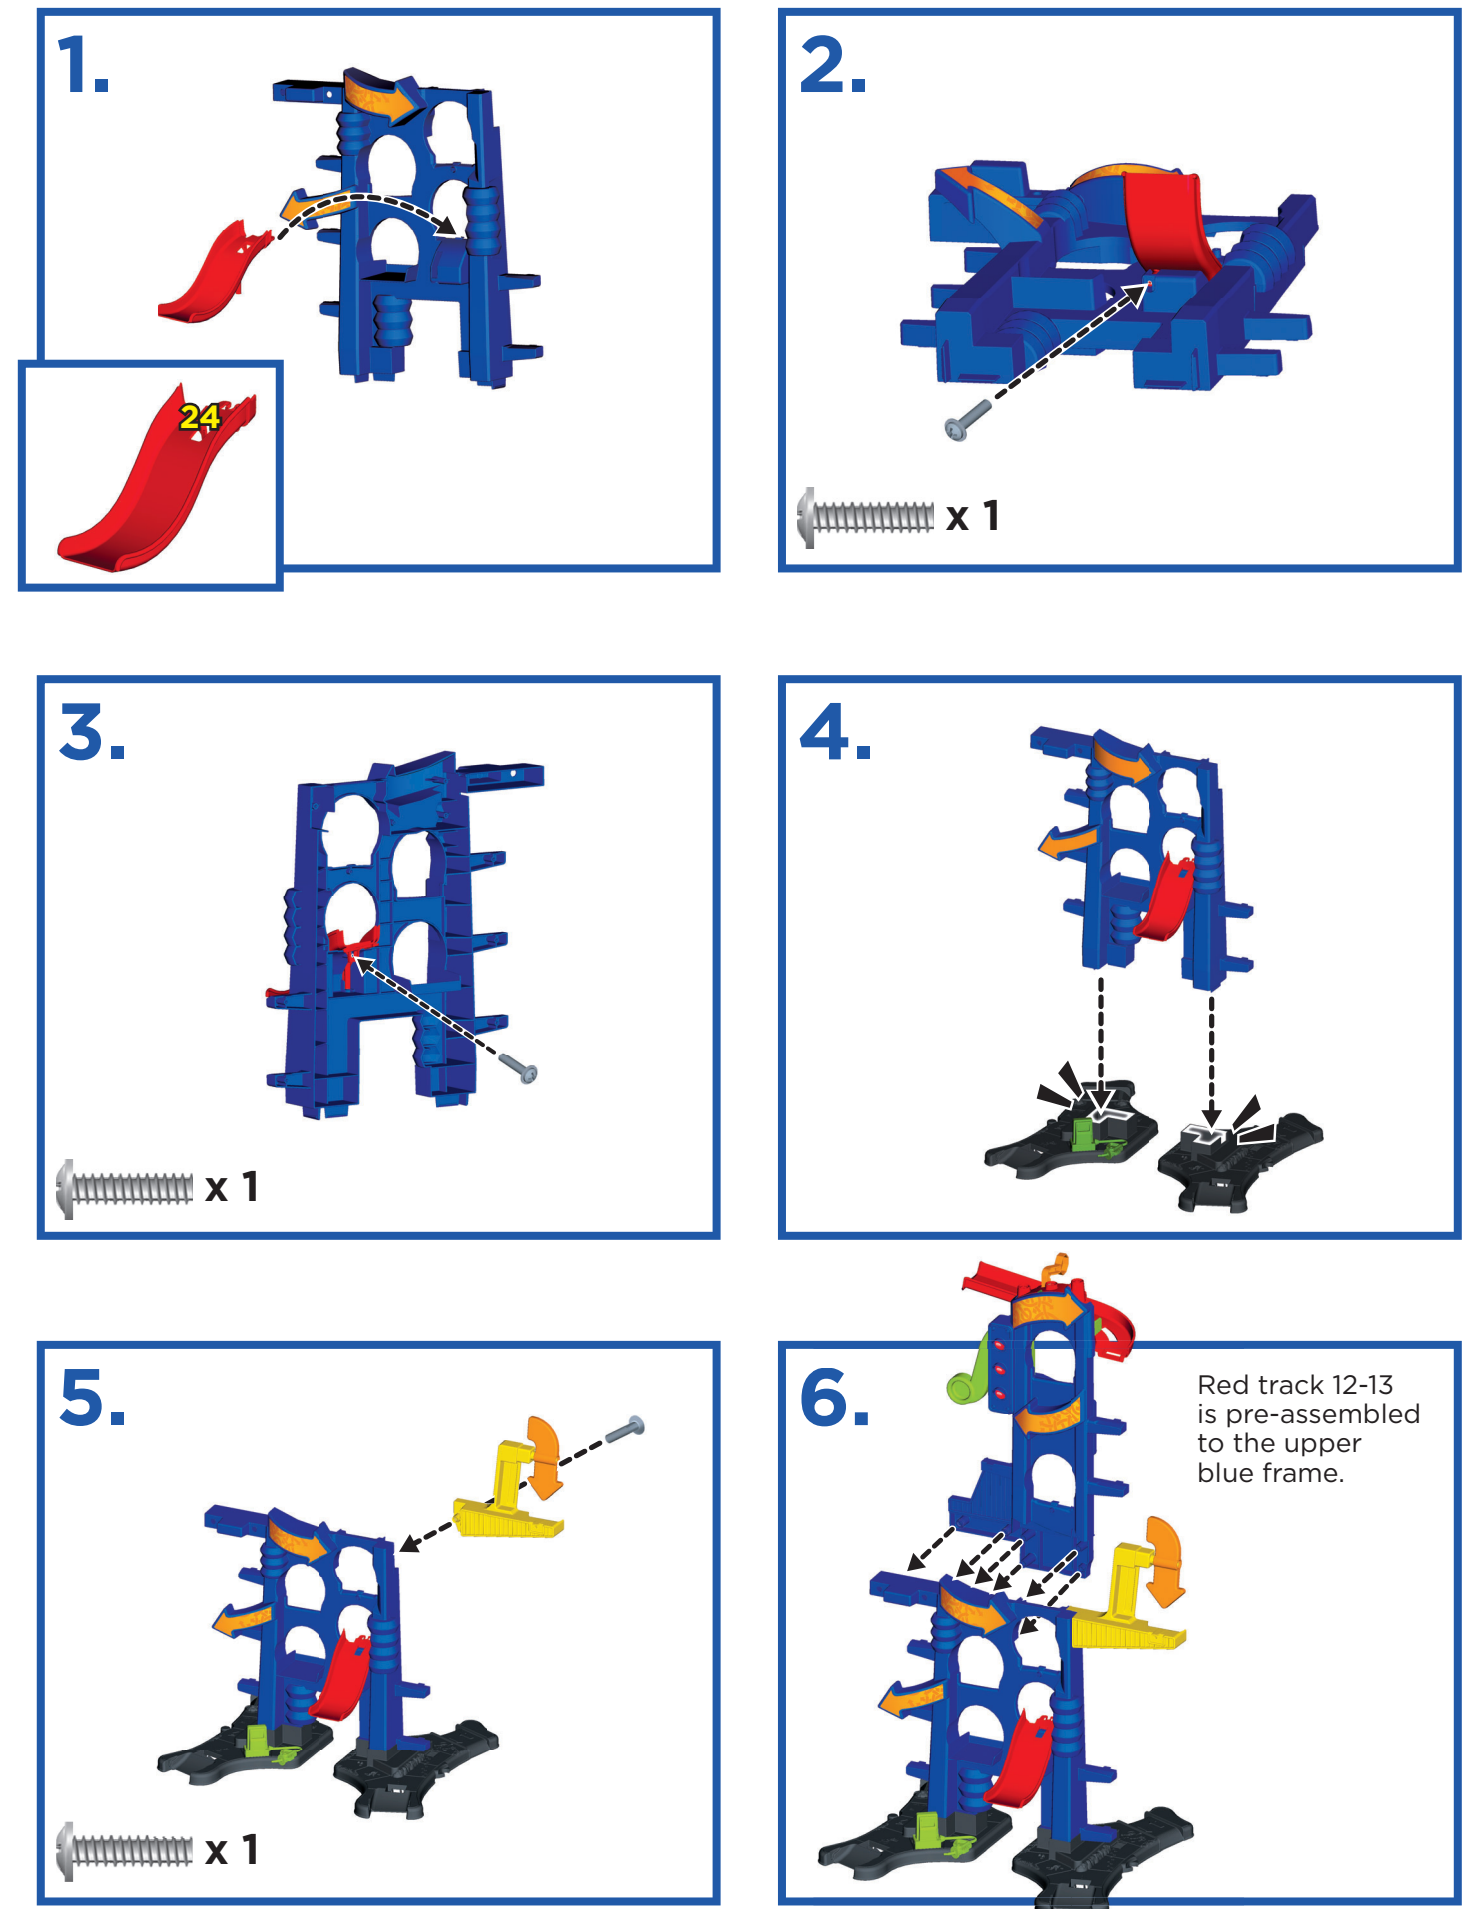 

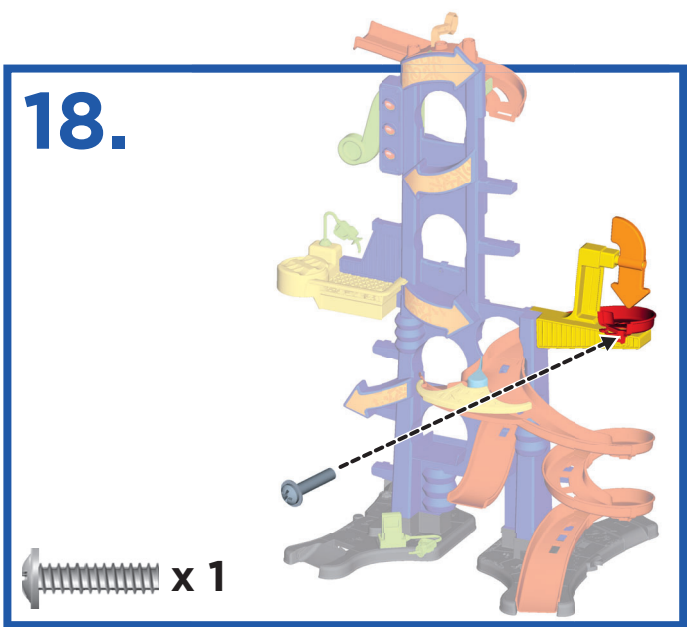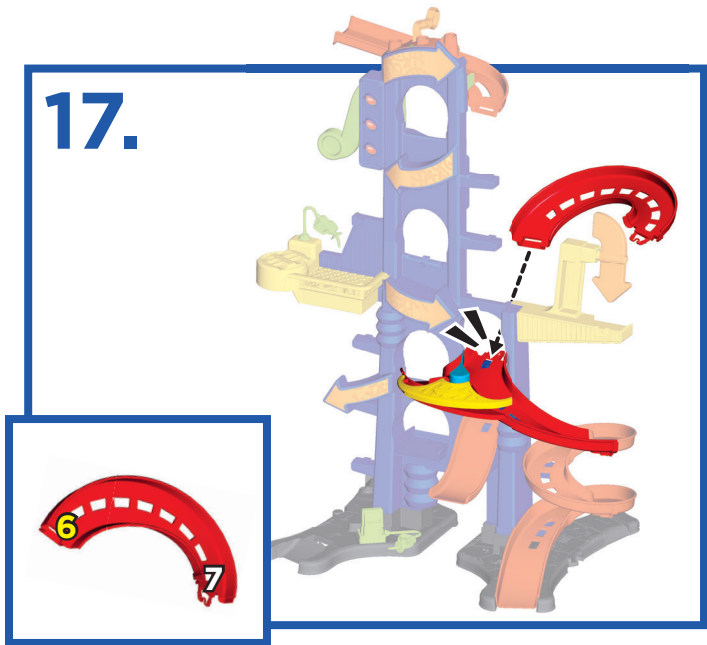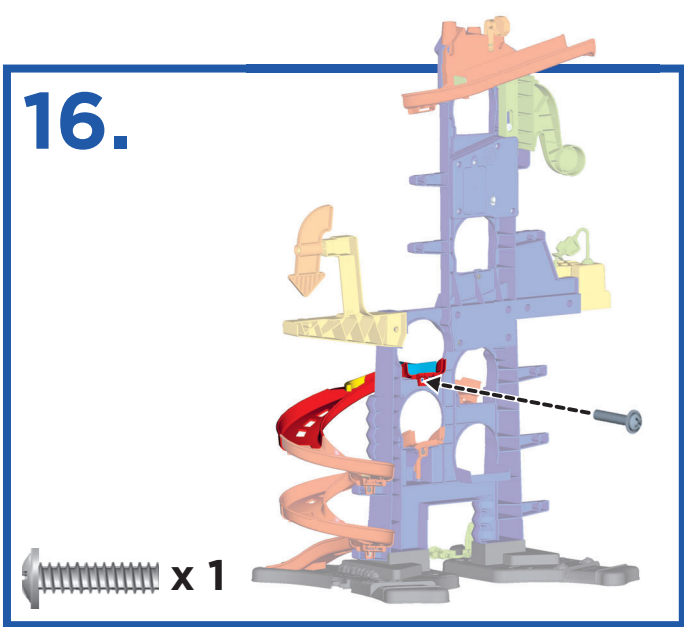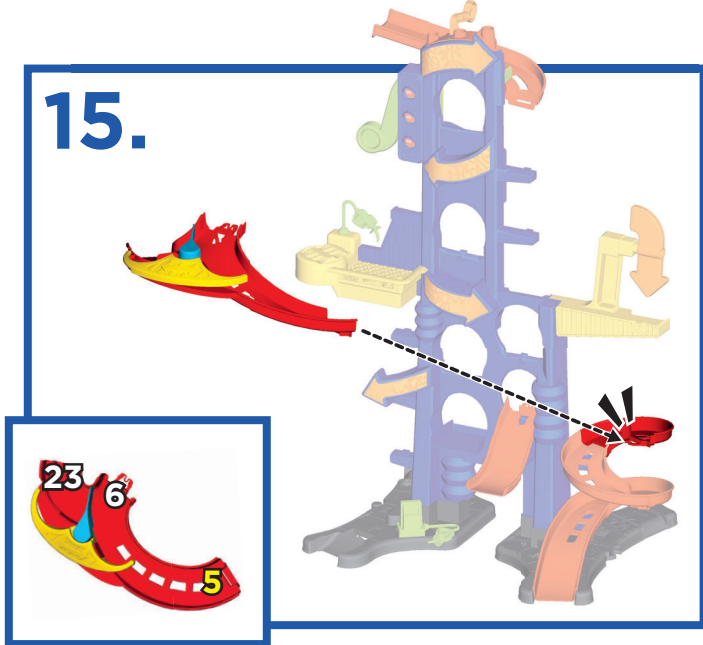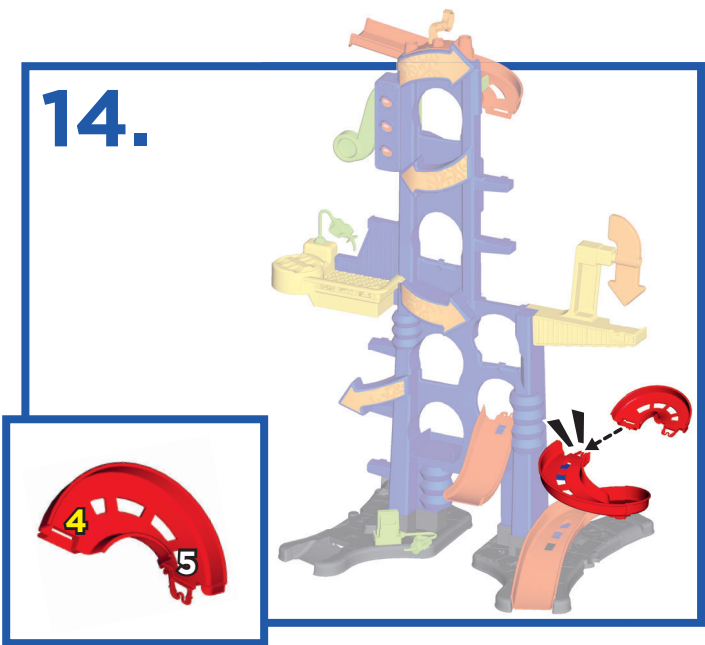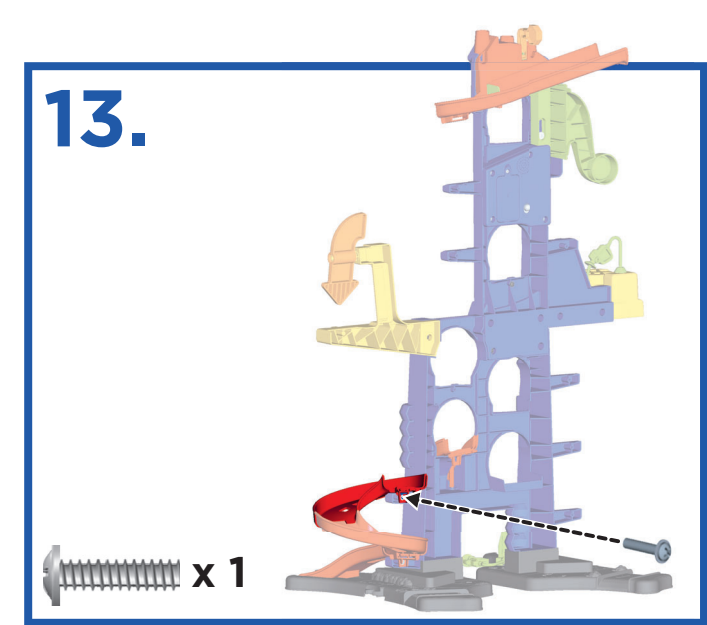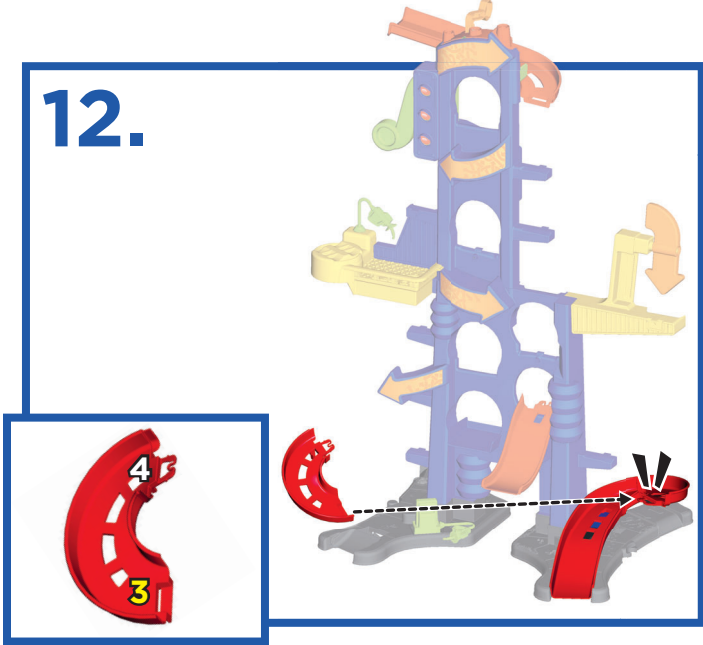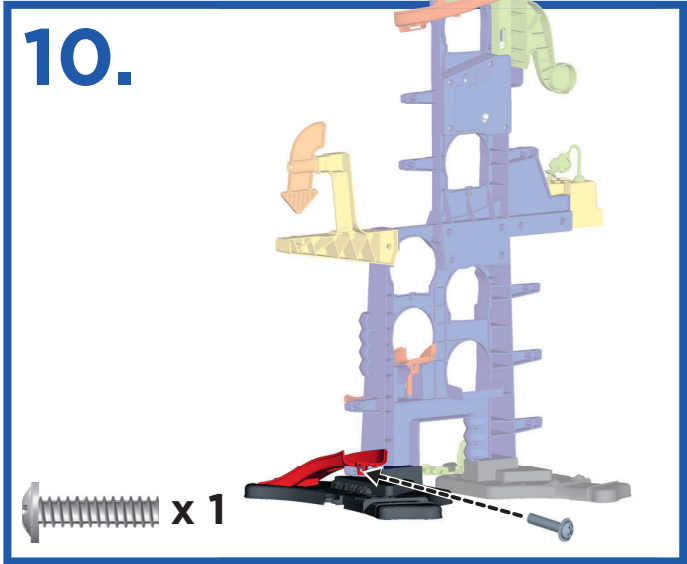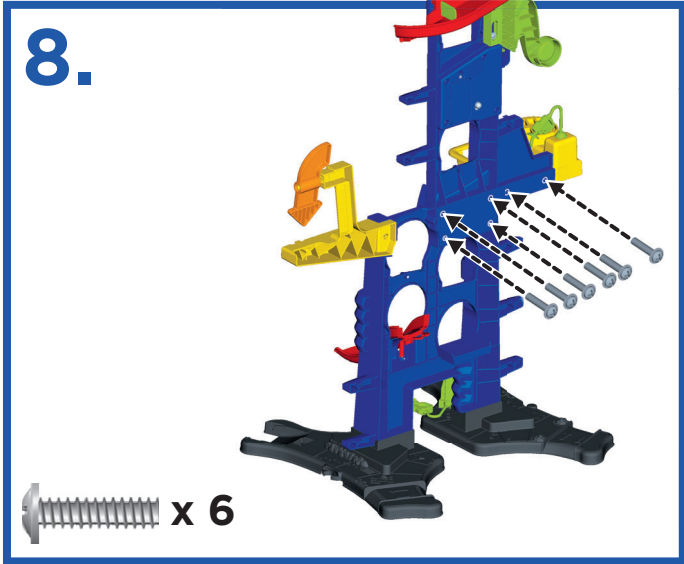         


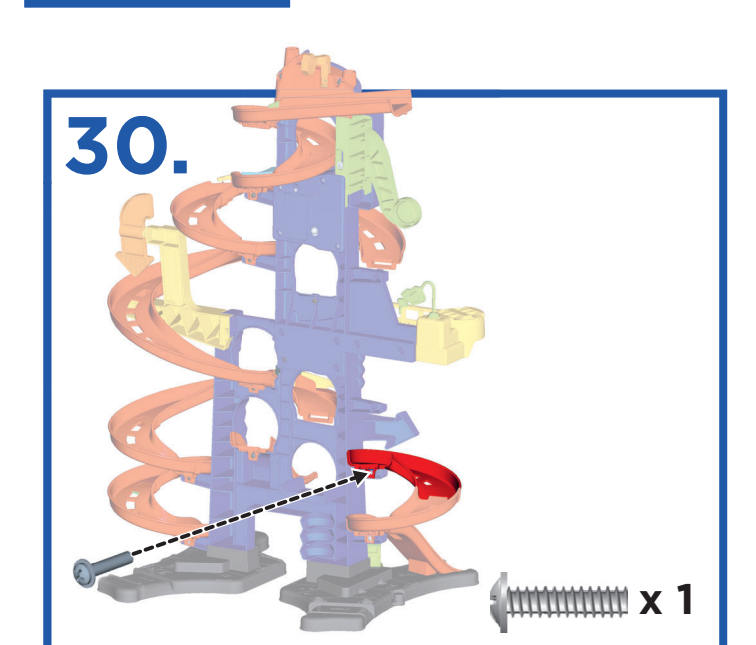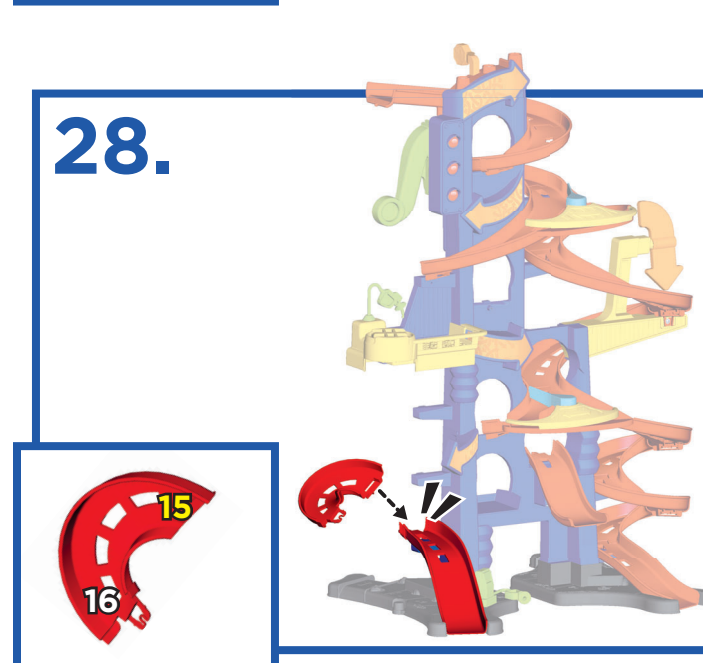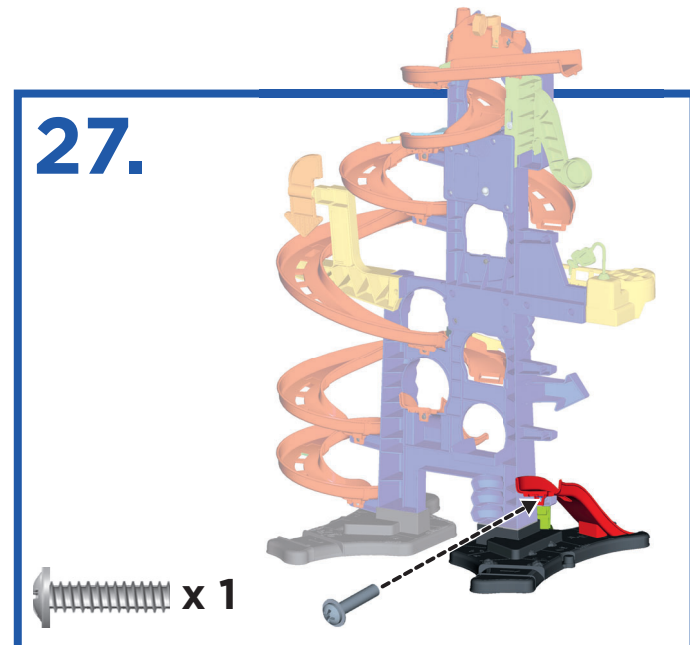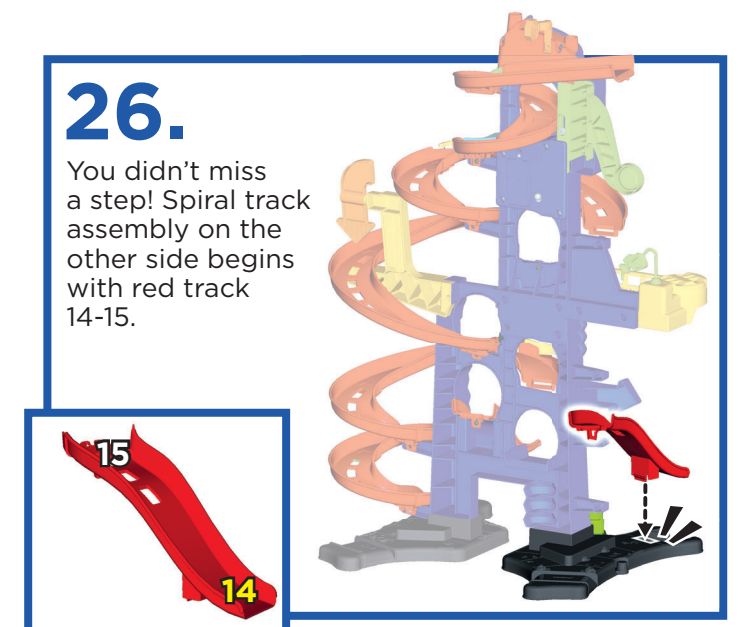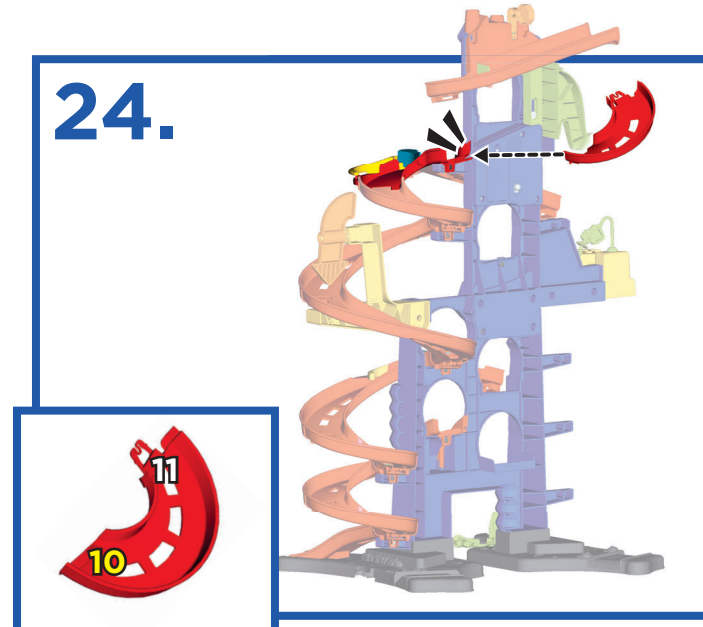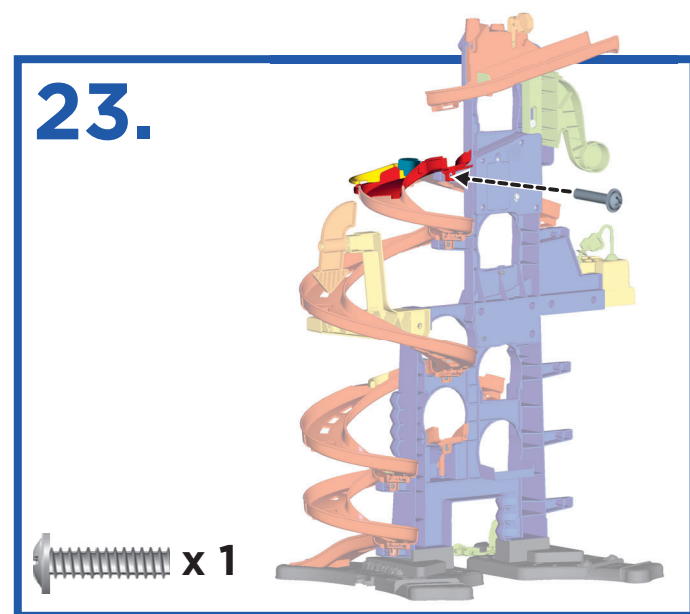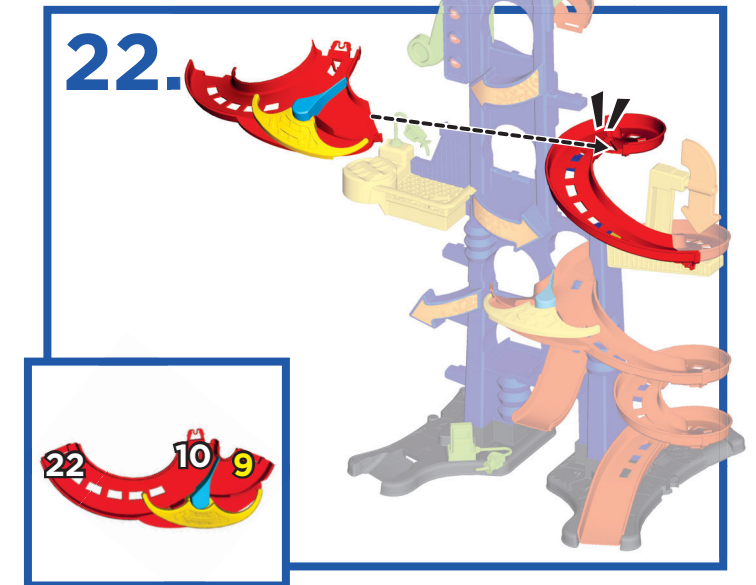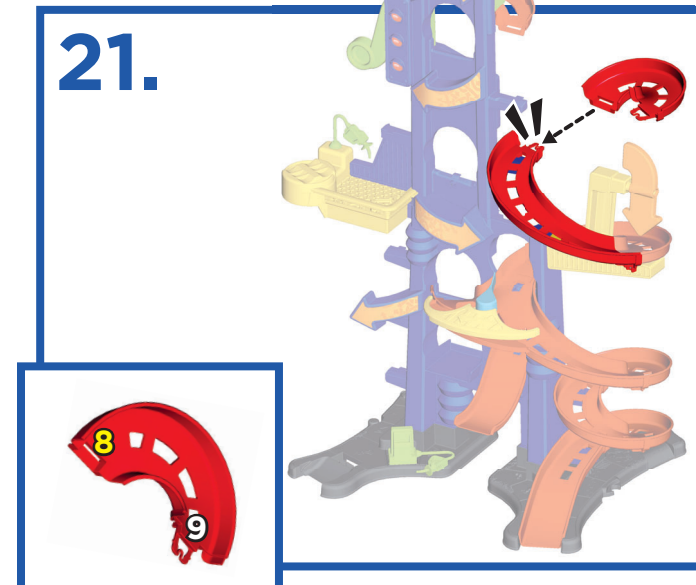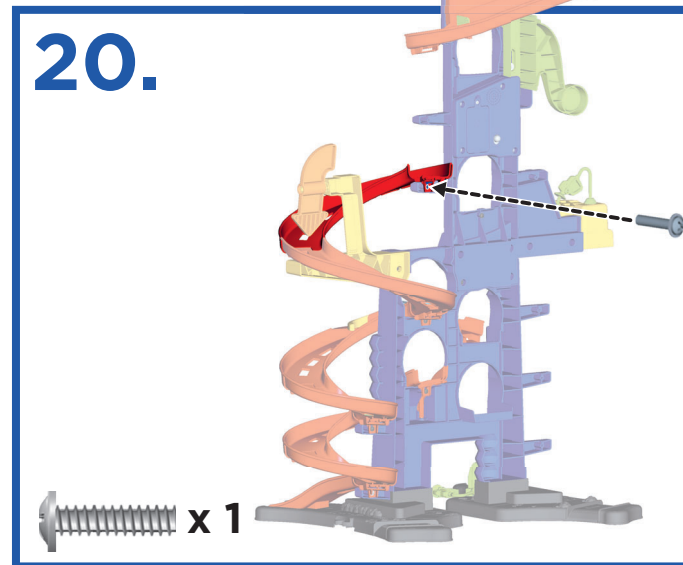         

 
31.

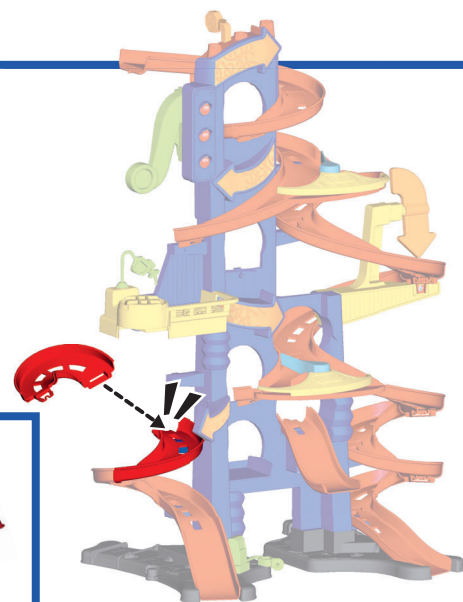

 
32.

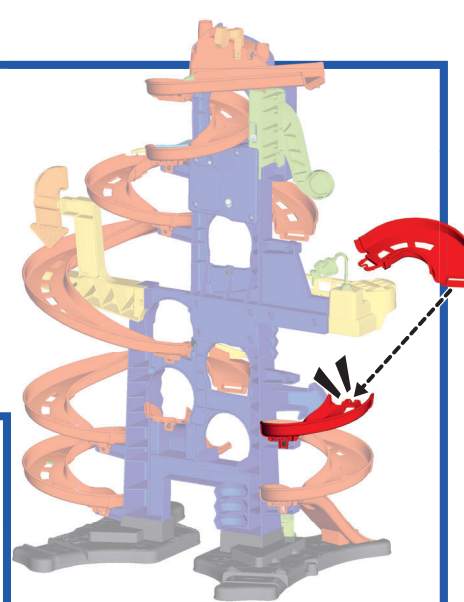

 
33.

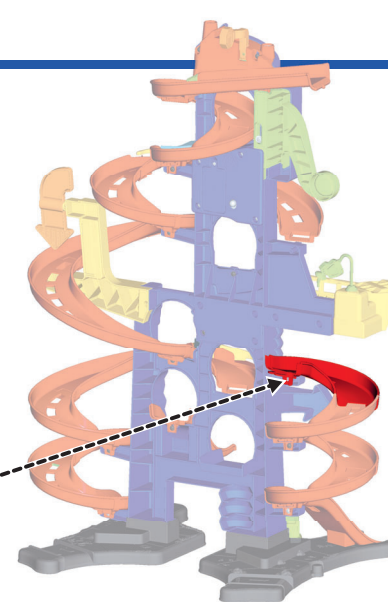

 
34.

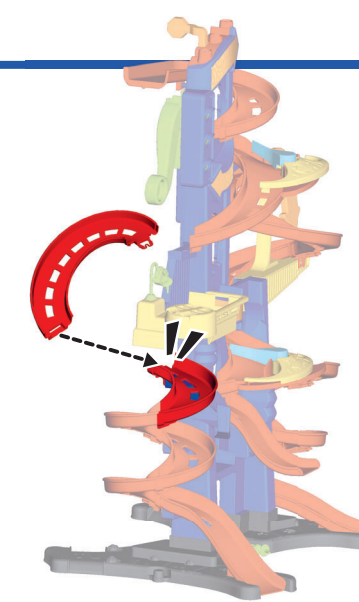

 
35.

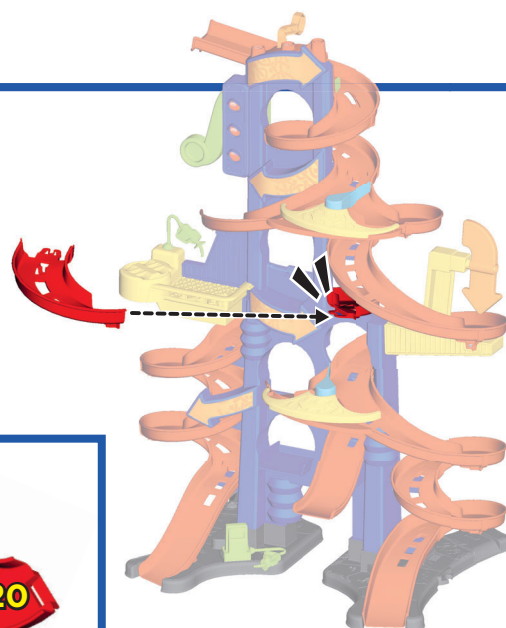

 
36.

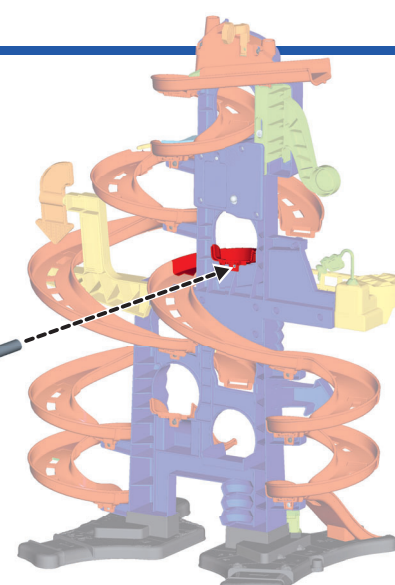

 
37.

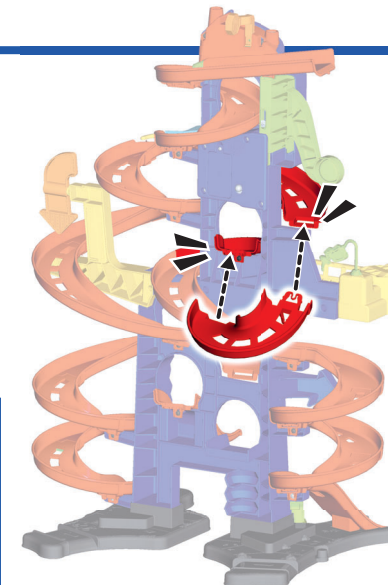

 38.

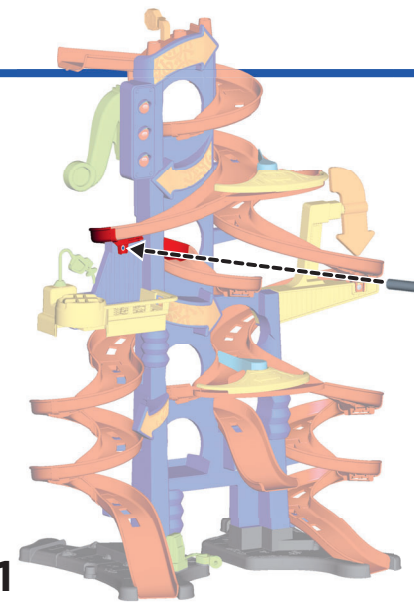

 39.

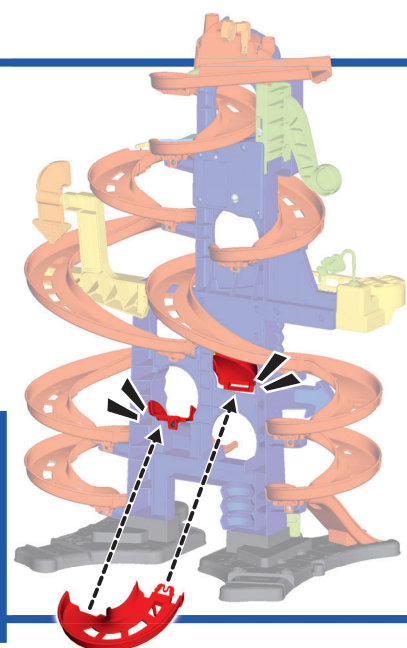

40.



POWER SWITCH

Slide to turn power ON ● or OFF ○ when finished playing.

