



BIRTHDAY THOMAS INSTRUCTIONS

Keep these instructions for future reference as they contain important information

Battery Installation

Unscrew and lift cover away from product. Replace batteries as indicated inside the battery compartment. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AG13" (LR44) batteries. REQUIRED TOOL: PHILLIPS SCREWDRIVER (NOT INCLUDED).





Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

WARNING: This product contains a Button or Coin Cell Battery.

A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Thomas the Tank Engine & Friends™

Outside the United States:

www.service.mattel.com/uk

Albany 1331, Auckland,

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,

Great Britain: Mattel UK Ltd, Vanwall Business Park,

Australia: Mattel Australia Pty. Ltd., 658 Church Street,

Locked Bag #870, Richmond, Victoria 3121 Australia.

South Africa: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

Maidenhead SL6 4UB, Helpline: 01628 500303.

New Zealand: 16-18 William Pickering Drive,

Mississauga, Ontario L5R 3W2: www.service.mattel.com.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland,

Based on the Railway Series by The Reverend W Awdry. ©2018 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited. ©2018 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

CONSUMER ASSISTANCE 1-800-432-5437 (US & Canada) 1300 135 312 (Australia) Service.fisher-price.com Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-Impaired consumers: 1-800-382-7470.

©2018 Mattel. [●] and [™] designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



GGG69-0970 1101731961-DOM

