


THOMAS & FRIENDS TRACK MASTER™



HYPER GLOW NIGHT DELIVERY INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

What's Included

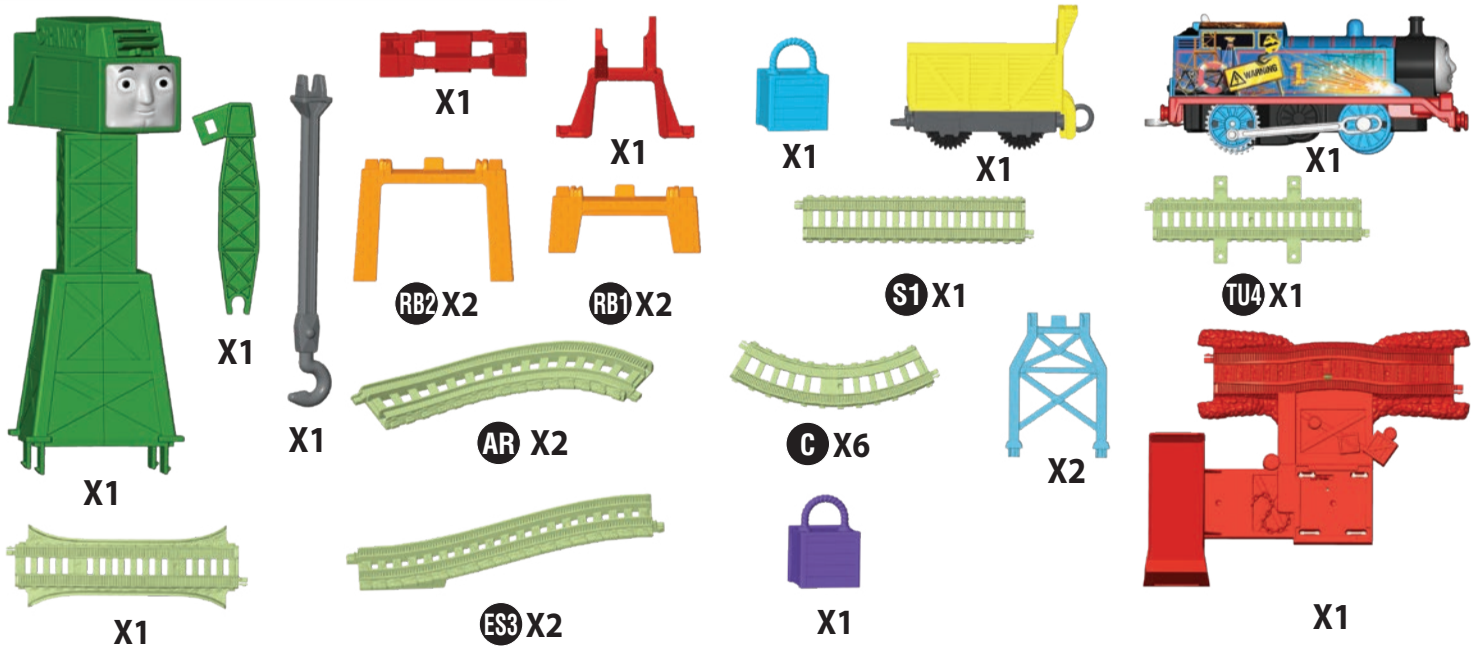

Helpful Hints



Track marking codes are found on the bottom of tracks and riser.

Note: Some engines may not work on this track set.

Adult assembly required. No tools needed.

★ ONE-TIME SNAP: Assembly step that is marked with a star is a "one-time snap." Once this part is put together, it cannot be taken apart.

Metal engines will not activate motorized features of TrackMaster™ playsets.

The engine's body also glows in the dark. Expose the engine to light, then watch it glow in the dark. Place product approximately 5 feet (152 cm) away from a light source for 30 seconds. Placing product closer will not intensify the "glow-in-the-dark" feature. Glow-in-the-dark feature will last longer if you do not expose this product to intense heat or direct sunlight for prolonged periods of time.

FCC STATEMENT (UNITED STATES ONLY)





This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Consult the dealer or an experienced radio/TV technician for help. NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Assembly

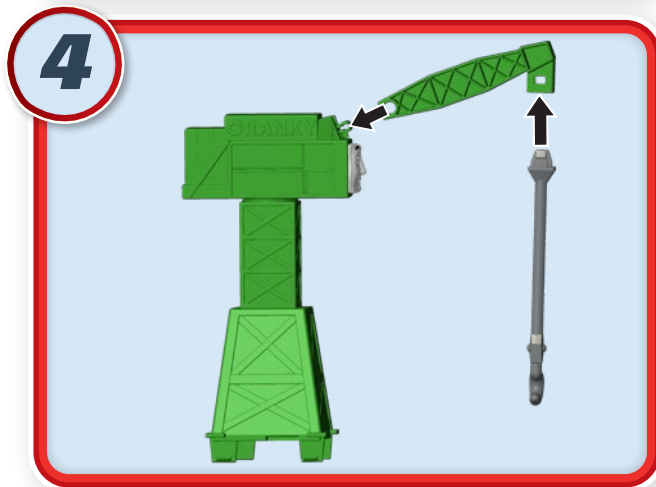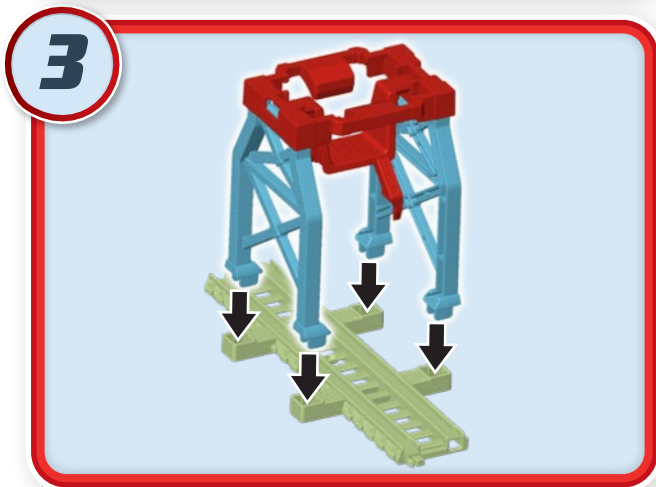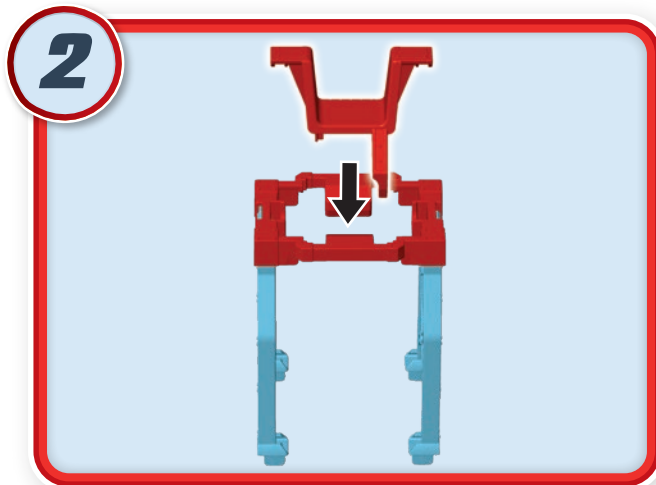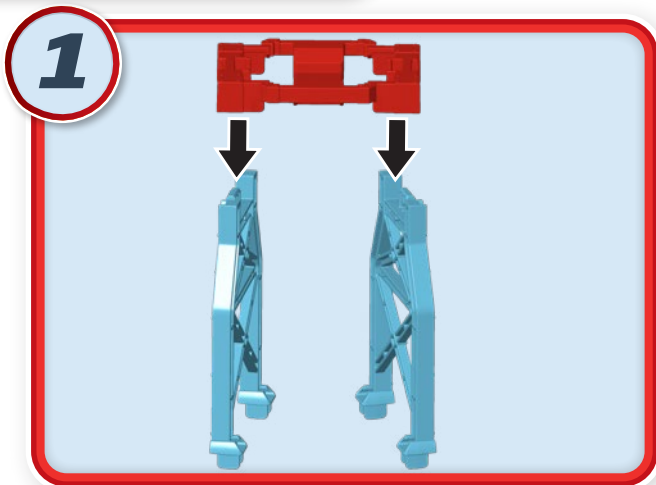

Battery Information


 
BATTERY INSTALLATION

Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries, not included. For longer life use only alkaline batteries.



BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity (+ and -).
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of batteries safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.

Required tool: Phillips screwdriver (not included)

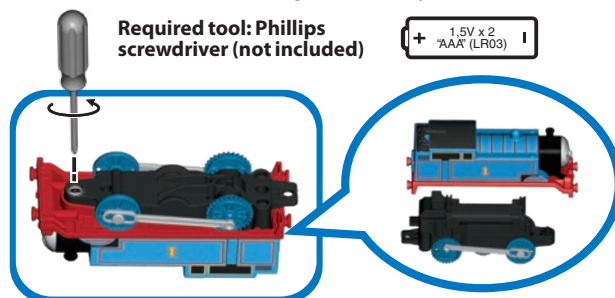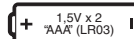


Track Layout

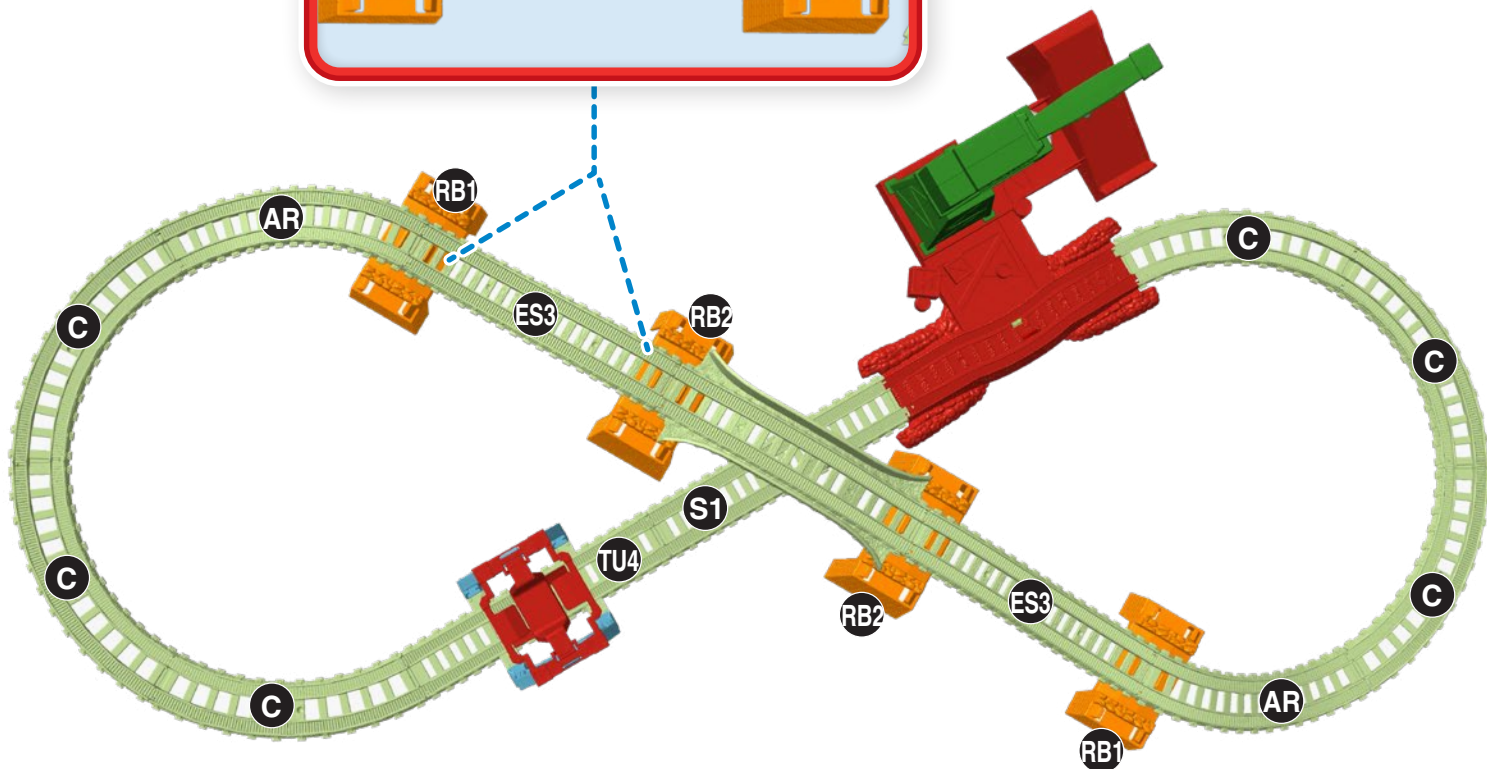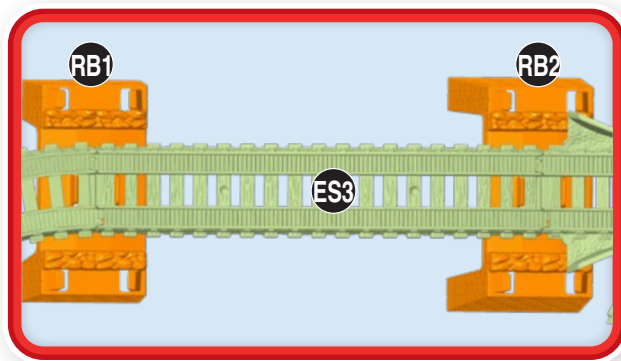

How To Play

1

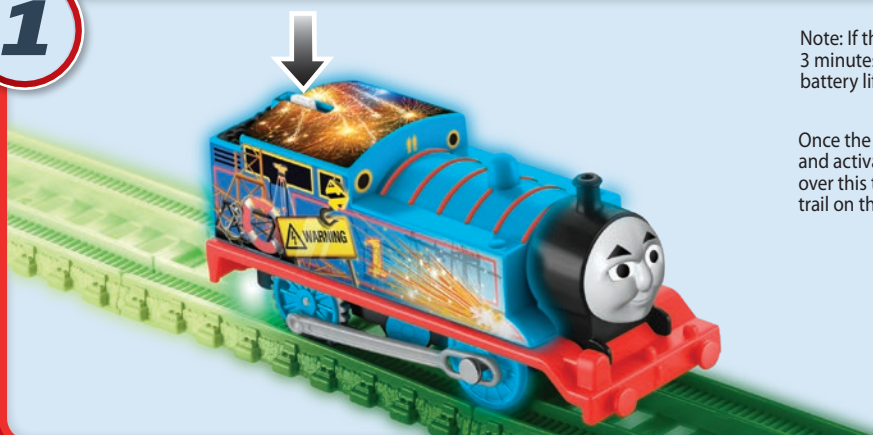


Note: If the engine runs continuously for approximately 3 minutes, it will automatically shut off to preserve battery life. To resume play, press the button on the engine.

Once the tail lights are on, the engine is ready to charge and activate glow-in-the-dark track. As the engine passes over this track with its tail lights on, it will leave a glowing trail on the tracks behind it.

Press the button once to start the engine and watch its tail lights light up. Press the button again to stop the engine and turn off the tail light effect.


How To Play

2

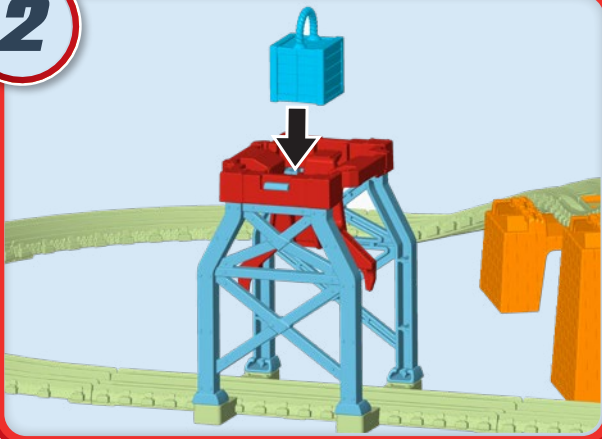


Load the cargo into the cradle .
Note: Ensure the crate is upright, with the handle on top, exactly as shown in the image.

3

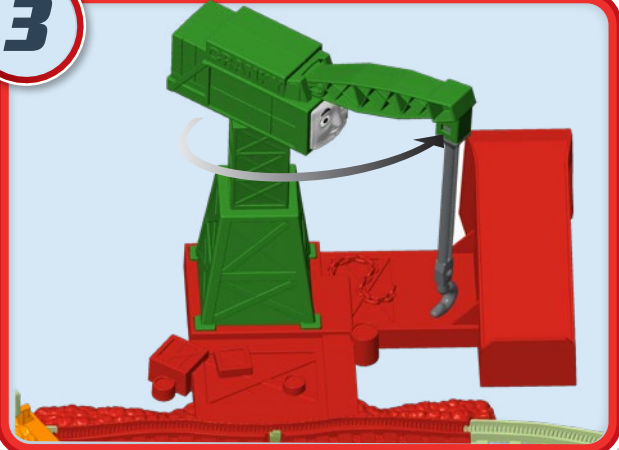

Wind Cranky in the direction shown until he locks into place.

4

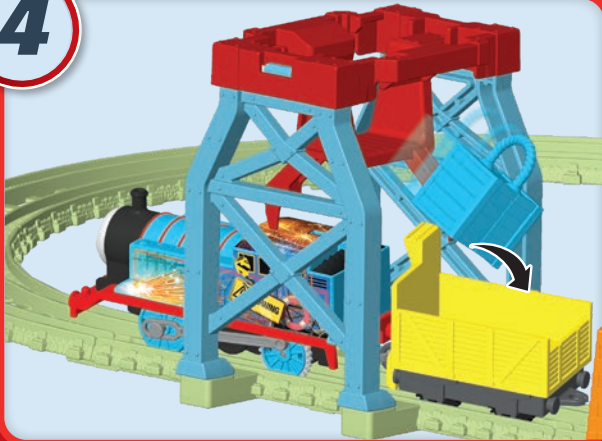

As the cargo car passes, it tips the cradle and triggers the cargo crate to fall down into it.

5



As the engine passes the loading area, Cranky will spin and hook the cargo crate, then deliver the cargo down the chute.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.



CAUTION:

To prevent entanglement, keep hair away from wheels.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

South Africa: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

Thomas the Tank Engine & Friends™



CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2019 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.

©2019 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2019 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.**

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Tel.: (852) 3185-6500.

GGL75-0970-1102140521-DOM



HIT entertainment

GGL75

Fisher-Price®