

Fisher-Price®



Keep this instruction sheet for future reference,
as it contains important information.

Requires three AA (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required: Phillips screwdriver (not included).

To clean, wipe with a damp cloth. Do not immerse.

Actual product may appear different from the images shown.


GHK00 DJD09 DJD10

ASSEMBLED PARTS

Part not shown: Label Sheet




Left and Right

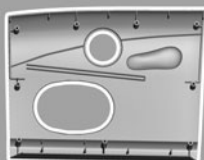

M4,5 x 1,9 cm Screw



Tighten all screws with a Phillips screwdriver. Do not over-tighten.

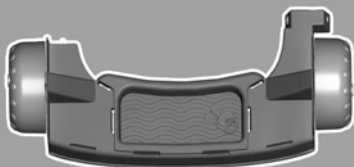

CAUTION



This package contains small parts. For adult assembly only.

1

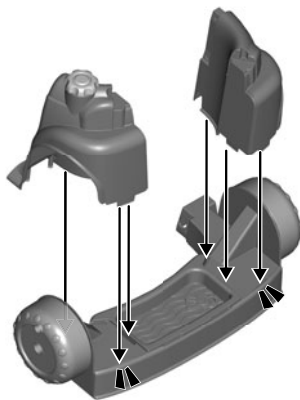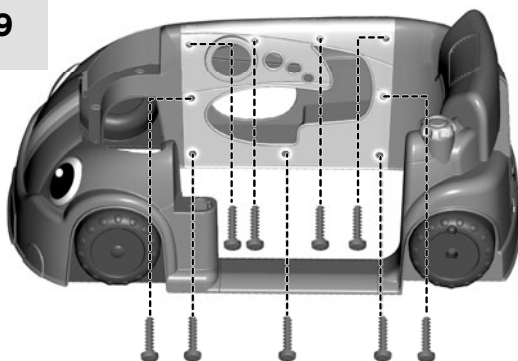
 x 9


5

8

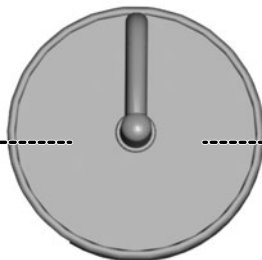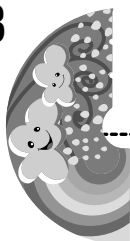


7

Apply these labels exactly as shown in the illustration. Avoid repositioning a label after it has been applied.




9

2

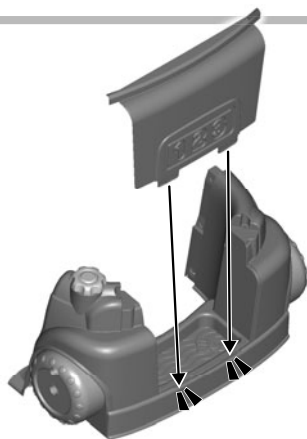


6

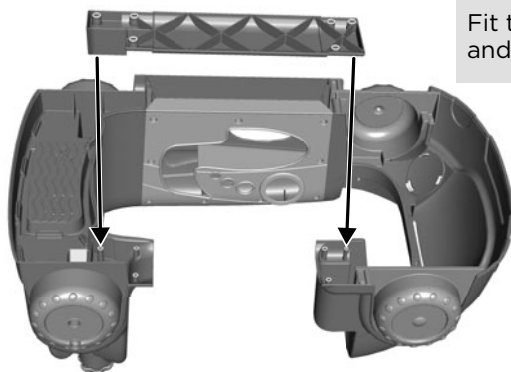

Turn the assembly over.
Fit the base to the front
and back ends.

10

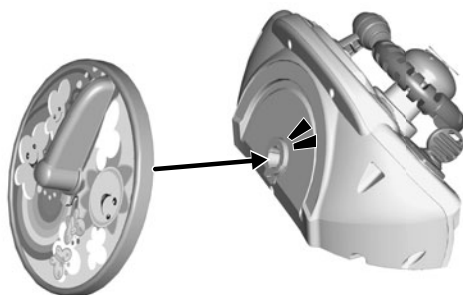


 x 2




3

 x 6

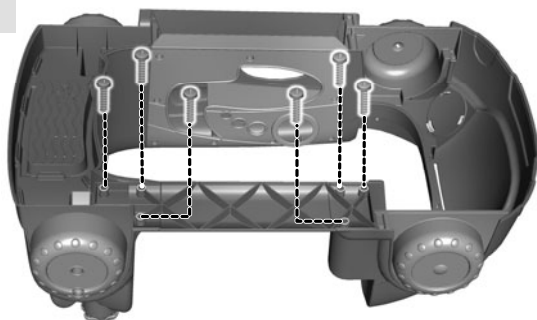


7

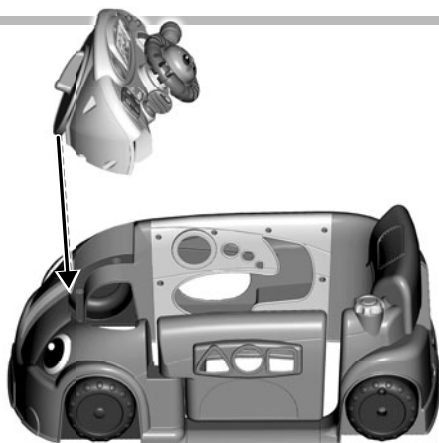


11

4

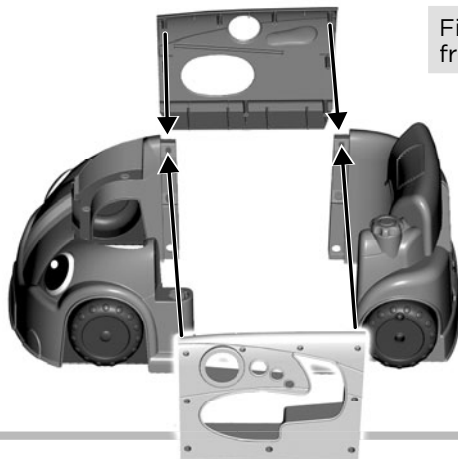


Fit the side panels to the front and back ends.

8

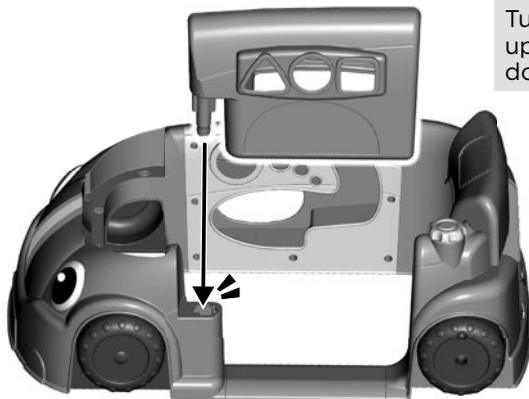

Turn the assembly upright to **"snap"** the door into place.

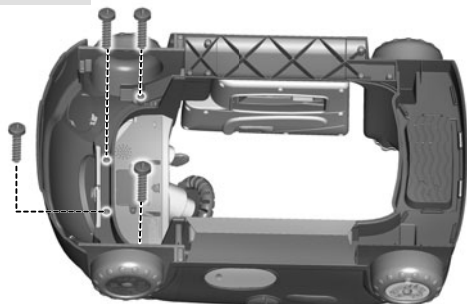


While holding the steering wheel in place, carefully turn the assembly over to assemble the screws.


12

DECORATION

Apply labels exactly as shown in the illustrations. Avoid repositioning a label after it has been applied.

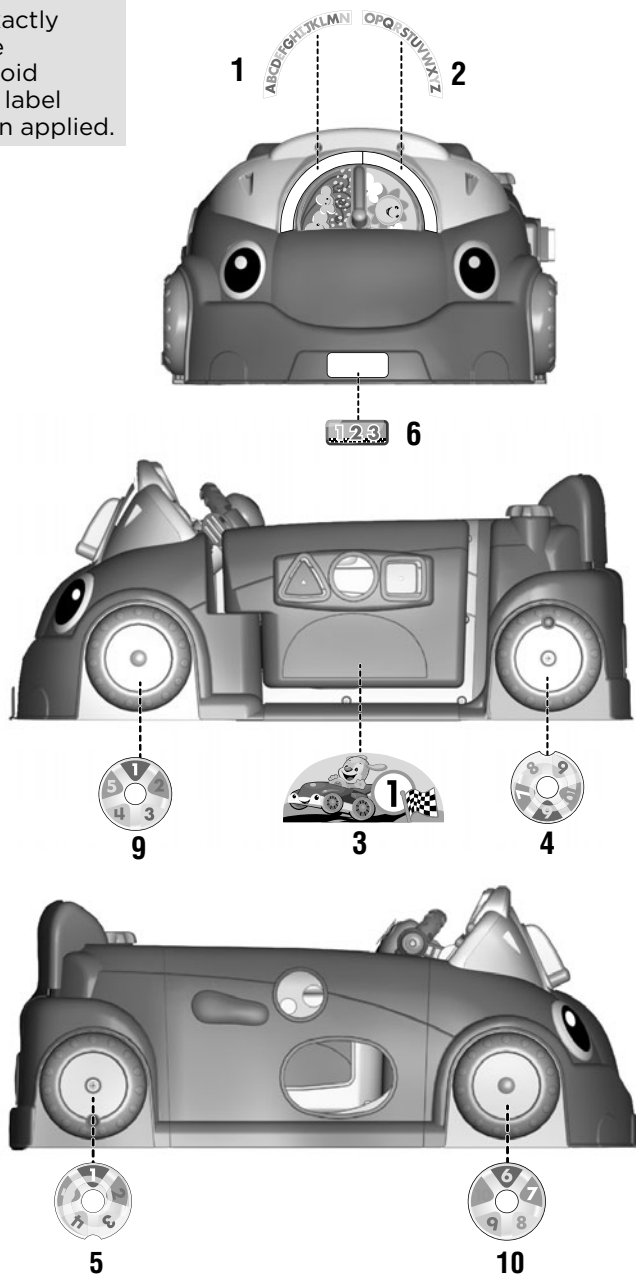

INSTALL BATTERIES

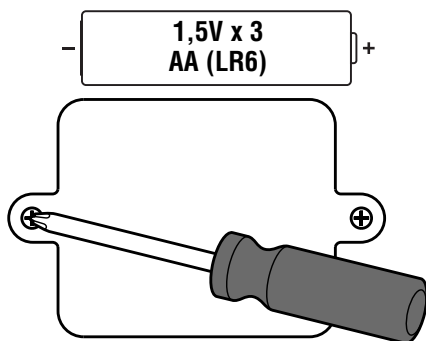

For longer life, use **alkaline** batteries.

Locate the battery compartment on the dashboard. Loosen the screw in the battery compartment door and remove the door.

Insert three AA (LR6) **alkaline** batteries.

Replace the battery compartment door and tighten the screw.

If this toy begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.

When sounds/lights become faint or stop, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.

Insert batteries as indicated inside the battery compartment (+ and -).

Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.

Never short-circuit the battery terminals.

 
Use only batteries of the same or equivalent type, as recommended.

Do not charge non-rechargeable batteries.

Remove rechargeable batteries from the product before charging.

If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FUN SOUNDS AND LIGHTS!

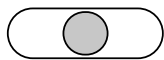

Slide the **power-volume switch** to ON with low volume , ON with high volume  or OFF .



Slide the **Smart Stages™ mode switch** to:

- 1 Level 1 Explore** - learn first words and sounds
- 2 Level 2 Encourage** - hear fun prompts and rewards for baby's actions
- 3 Level 3 Pretend** - older babies imitate and imagine with role play fun



Turn the windshield wiper

Turn the key

Pull the shifter up and down

Drop balls in the ramp

Open and close the door



Press the radio button

Turn the steering wheel

Press the horn

CONSUMER INFORMATION



service.fisher-price.com

UNITED STATES: 1-800-432-5437.
Fisher-Price, Inc., 636 Girard Avenue,
East Aurora, NY 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall
Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303;
www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.

CANADA: 1-800-432-5437.
Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2.

AUSTRALIA: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering
Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd., Room 503-09,
North Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.
Tel.: (852) 3185-6500.

MALAYSIA: Diimport & Diedarkan Oleh:
Mattel Southeast Asia Pte. Ltd., No
19-1, Tower 3 Avenue 7, Bangsar South
City, No 8, Jalan Kerinchi, 59200 Kuala
Lumpur, Malaysia. Tel: 03-33419052.

SOUTH AFRICA: Mattel South Africa
(PTY) LTD, Office 102 I3, 30 Melrose
Boulevard, Johannesburg 2196.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.